

OPERATION
SAFETY
SERVICE
WARRANTY
CONTACT
SPECIFICATIONS
TROUBLESHOOTING

Grizzly GP-1

Instruction Manual

READ AND SAVE THESE INSTRUCTIONS



THANK YOU FOR PURCHASING A B-AIR PRODUCT.

Introduction to Grizzly GP-1

Your new B-Air Grizzly #GP-1 dryer / air mover has a 1 hp high efficiency motor with the following features:

- State of the art construction
- Low 9.8 amps
- 25 foot power cord
- 3550 cfm
- Safety screens on open vents
- Easy grip carrying handle
- Swing out kick-stand
- Safety locks to lock adapter (#ddk)
- 3 speed switch

Operation/Use

3 SPEED MAIN SWITCH

CARRYING HANDLE

AIR INTAKE

AIR OUTLET

KICK STAND



- A) Carefully place the B-Air Grizzly unit on a stable flat surface during operation.
- B) Use free standing or with attachments
The B-Air Grizzly unit can be positioned to aim airflow across flat surfaces or angled in 2 additional positions. Raise or lower the attached kick stand for height adjustment.
- C) Turn on the switch to the desired speed and make sure the unit is operating correctly.
- D) All dryers / air movers in operation must be monitored at all times.

Storage

Store unit indoors in a clean dry environment to ensure long life and to maintain unit integrity.

Safety

- 1) Keep children and pets away from unit while in operation and/or plugged in.
- 2) Do not put fingers or other objects in unit while in operation and/or plugged in.
- 3) To avoid electric shock, do not operate in pooled water.
- 4) Unit must be kept dry at all times, including motor, wiring and exterior. If unit becomes wet, thoroughly dry before next operation.
- 5) Only use with a grounded plug and/or extension cord to avoid risk of electrical shock or fire. Remember never to use a power cord showing any kind of damage or wear.
- 6) Make sure the power source is sufficient to meet the requirements of the dryer / air mover.
- 7) To prevent the unit from overheating, keep air intakes clear at all times.
- 8) Clogging or blocking the air intakes could result in a fire or electrical hazard.
- 9) To prevent injury, do not remove any screens or safety guards from the unit.
- 10) Do not operate unit close to any dangerous areas such as explosive gases, flammables, heaters or in unventilated environments.
- 11) Do not use any form of speed control device as doing so may cause injury or fire.
- 12) Always place dryer / air mover on a smooth and leveled surface for safe operation.
- 13) Do not use unit if damaged.
- 14) Before cleaning or servicing, unplug unit.
- 15) All dryers / air movers in operation must be monitored at all times.
- 16) Do not expose to rain, water or snow.
- 17) Unit must be connected to a GFCI (ground fault circuit interrupter) protected receptacle.

Warning!

All dryers / air movers in operation must be monitored. The use of a 3-prong to 2-prong adapter is prohibited. Only use a 2-prong to 2-prong adapter.

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Service

In order to receive service or replacement parts under warranty, you must:

- A. Call for an RMA (Return Merchandise Authorization Number)
- B. Have proof of purchase

Upon inspection, we will advise you of the repairs needed and the cost (if applicable). B-Air will issue repair or replacement parts depending on warranty.

Limited Warranty

Proof of purchase is required on all warranty claims

Warranty covers against defects in material and craftsmanship used under normal intended use to original purchaser for a term of (1) one year from the original date of purchase including parts, labor and 1 way shipping. Housing is covered for a term of (5) five years from the date of the original purchase.

Important!


 






















Warranty does not cover signs of misuse including, but not limited to rough handling, abuse, tampering, improper voltage use and unauthorized maintenance and repairs.

Cords


- 1) Do not use extension cords for outside use.
- 2) Use 3 prong adaptors that are UL and CE approved and not less than 14-3 with ground fault circuit interrupter (GFCI).
- 3) Do not use cords that show any kind of wear or damage.
- 4) Cords are not covered by warranty.

Grizzly GP-1

PART LIST

A. Housing -----		----- x 1
B. Motor -----		----- x 1
C. Fan -----		----- x 1
D. Air Exhaust Grill ----		----- x 1
E. Air Intake Grill (M) ---		----- x 1
F. Air Intake Grill (F) ---		----- x 1
G. Power Cord -----		----- x 1
H. Air Guide Blade -----		----- x 1
I. Capacitor -----		----- x 1
J. Fastener Clip -----		----- x 2
K. Switch -----		----- x 1
L. Switch Knob -----		----- x 1
M. Switch Cover -----		----- x 1
N. Rivet 4x16mm -----		----- x 13
O. Rivet 5x19mm -----		----- x 8
P. Screw 3x10mm -----		----- x 4
Q. Screw 4x16mm -----		----- x 8
R. Screw 4x12mm -----		----- x 1
S. Screw 6x16mm -----		----- x 4
T. Rack Feet -----		----- x 2
U. Rack Tube -----		----- x 2
V. Cord Connector -----		----- x 1
W. Position Rack -----		----- x 1
X. Rubber Feet -----		----- x 1

Explosion of Grizzly GP-1

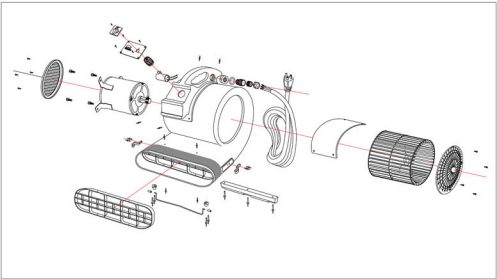

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor Not Running	a) Switch is OFF	a) Turn Switch ON
	b) Bad Outlet	b) Check Outlet/ Change to Another Outlet
	c) Faulty Switch/Cord	c) Call Factory for new Switch/Replace Cord
Scraping Noise From Blower	a) Wheel Out Of Line	a) Call Factory for Replacement Advise
Weak Air Flow	a) Obstructed Vents/Inlets	a) Clean Out Vents/Inlets

Specifications

VOLTS	*230 V	115 V
CYCLE	50 Hz	60 Hz
MAX AIR VOLUME	3180 CFM	3550 CFM
AMPS	6.5 A	10.6 A
MAX STATIC PRESSURE	2.8 INCH	3.1 INCH
WEIGHT NET/SHIP	39/43 LBS	39/43 LBS
UNIT SIZE (L x W x H)	19"x 18"x 19.5"	19"x 18"x 19.5"
WHEEL SPEED (RPM)	L 1070 / M 1190 / H 1400	L 1300 / M 1440 / H 1720
MOTOR	1.5 HP	1 HP
ATTACHED CORD (14G)	25 FT	25 FT
SPEEDS	3	3
STAND HEIGHT	4.5"	4.5"
TIMER OPTIONAL	42 MINUTE	35 MINUTE

*230V only available in non-ETL.

WARRANTY REGISTRATION

Please complete and mail or fax your product warranty registration card. For multiple units, please list serial numbers on a separate sheet.

THIS WARRANTY CARD AND YOUR BILL OF SALE MUST BE PRESENTED FOR WARRANTY SERVICE.

Your Company Name _____

Contact Name _____ Title _____

Address _____

City _____ State _____ Zip _____

Phone _____ Fax _____

E-mail _____

Grizzly GP-1

Serial Number _____ Date of Purchase ____/____/____

Purchased From _____

Additional Comments/Suggestions _____



B-Air

550 South Ayon Ave. Azusa, CA 91702

1-877-800-2247 (BAIR)

Fax: (626) 385-3307

Email: info@b-air.com

Web site: www.b-air.com

PLACE
STAMP
HERE



550 South Ayon Ave
Azusa, CA 91702