

# MYTEE ® PRODUCT, INC.


# Instructions for 8901, 8902, 8903, 8904, 8907, 8908 Spinner

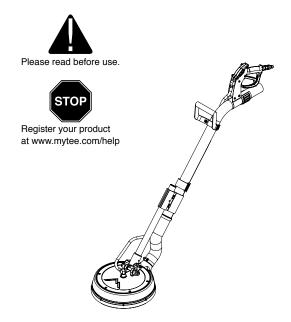


8901 - Wand handle, 2" tube

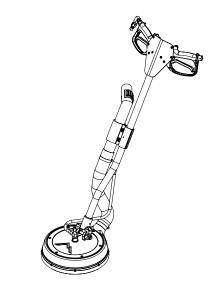


8902 - "T" handle, 2" tube

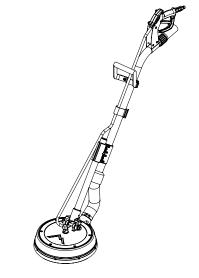


8903 - Wand handle, 1.5" tube

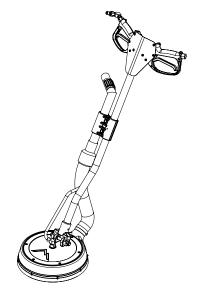

8904 - "T" handle, 1.5" tube

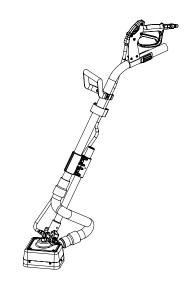

8907 - Corner Spinner®

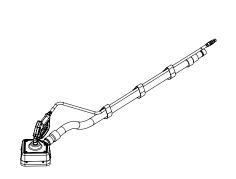

8908 - Counter Spinner®

8901 p. 2

8902 p. 4 8903 p. 6

8904 p. 8

8907 p.10

8908 p.12

General information p.14


Model # \_\_\_\_\_\_

Serial # \_\_\_\_\_

Form # ADM-SPIN


10-11


# 8901 WAND HANDLE, 2" TUBE SPINNER®

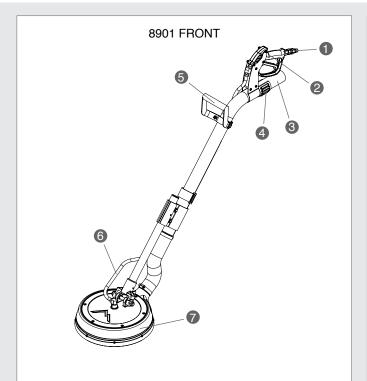


- 1. Quick disconnect
- 2. High-pressure gun
- 3. Vacuum hose connection
- 4. Vac relief
- 5. Wand grip handle
- 6. Hi-pressure solution hose
- 7. 12" Spinner® head


## VACUUM HOSE AND SOLUTION HOSE ATTACHMENT

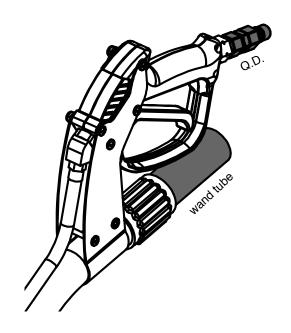


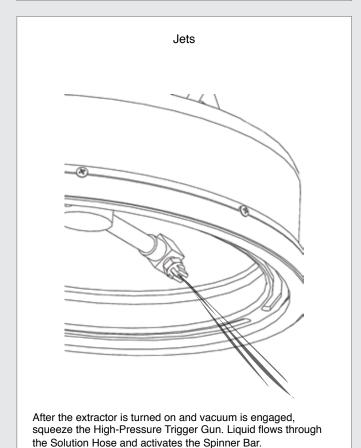

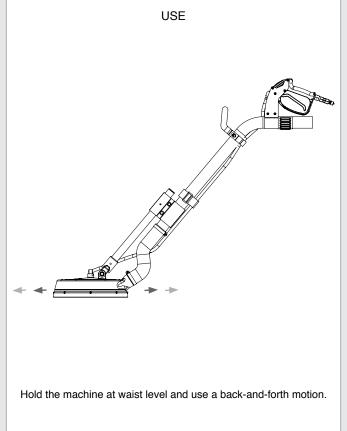



# 8901 WAND HANDLE, 2" TUBE SPINNER®

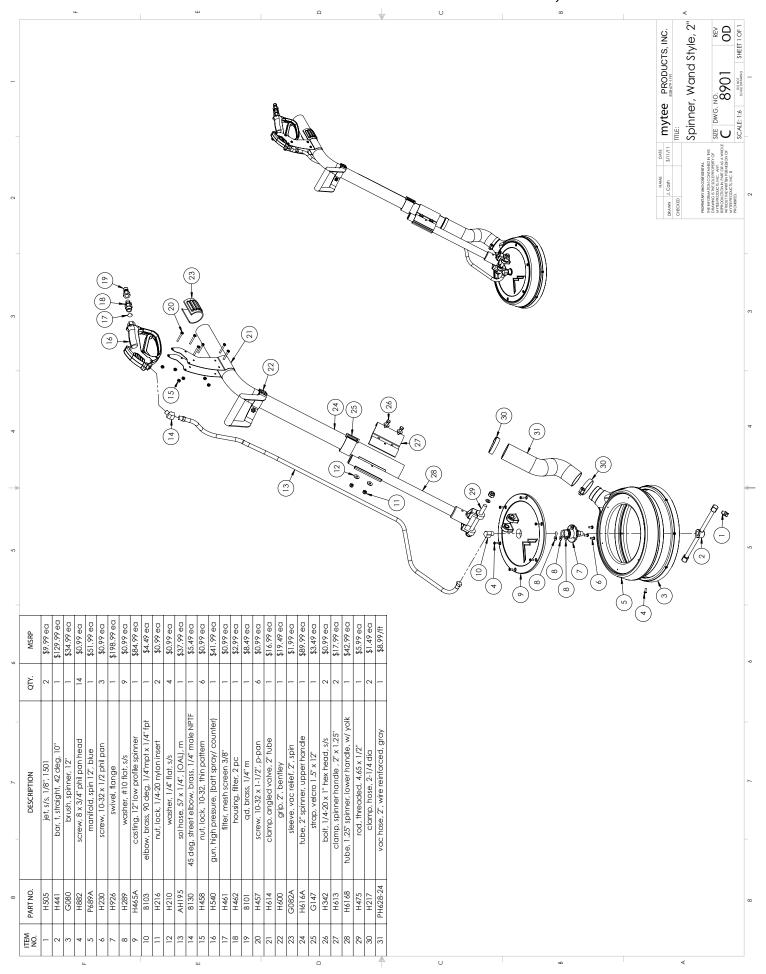


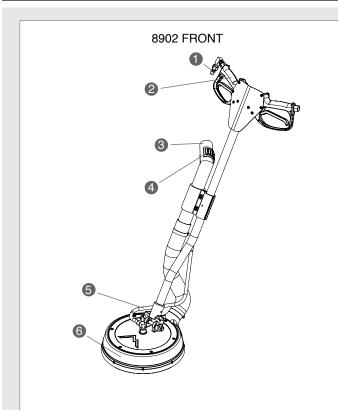


- 1. Quick disconnect
- 2. High-pressure gun
- 3. Vacuum hose connection
- 4. Vac relief
- 5. Hi-pressure solution hose
- 6. 12" Spinner® head

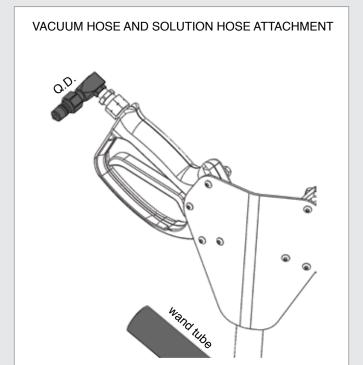

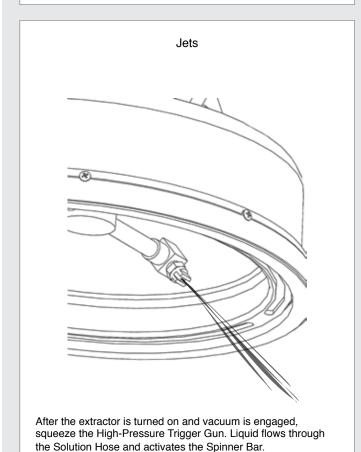


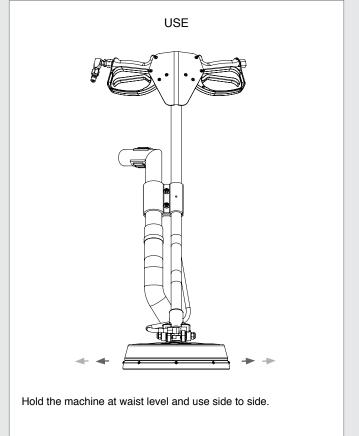


# 8902 "T" HANDLE, 2" TUBE SPINNER®

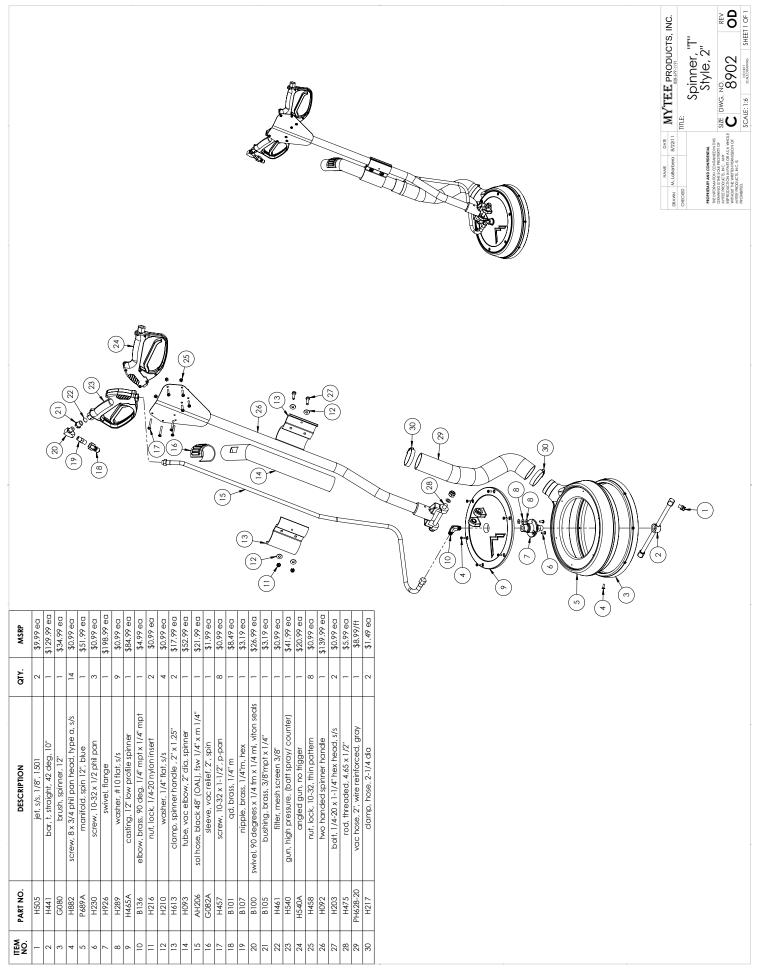



# 8903 WAND HANDLE, 1.5" TUBE SPINNER®

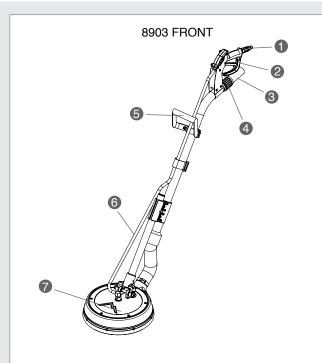


- 1. Male quick disconnect
- 2. High-pressure trigger gun
- 3. Vacuum hose connection port
- 4. Vac relief
- 5. Wand grip handle
- 6. Solution hose
- 7. 12" Spinner® head

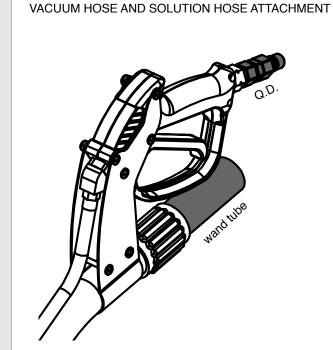


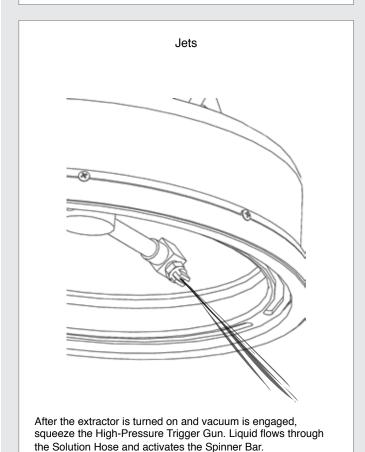

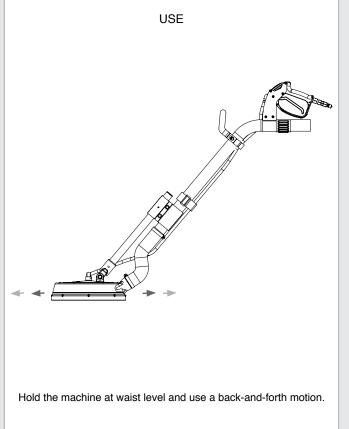

# 8903 WAND HANDLE, 1.5" TUBE SPINNER®

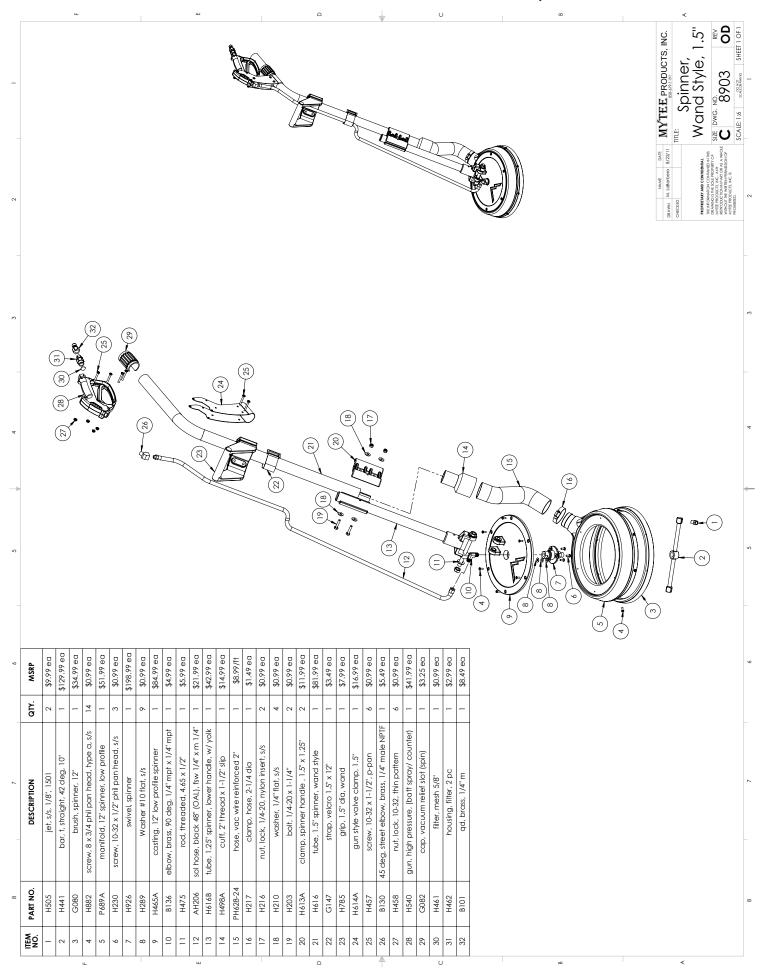


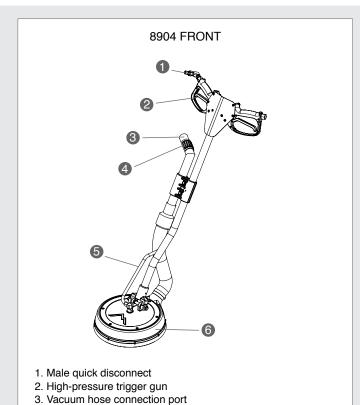

4. Vac Relief

5. Solution hose


6. 12" Spinner® head

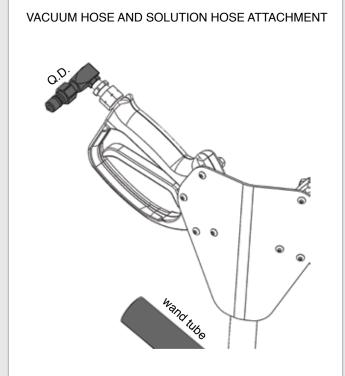


After the Vacuum Hose and Solution Hose are attached to the


extractor, connect the Solution Hose to the Male Quick Discon-

nect, and the Vacuum Hose to wand tube.

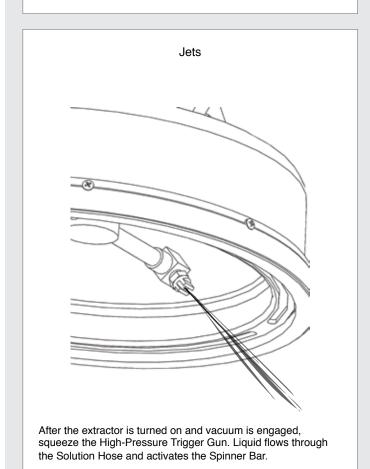

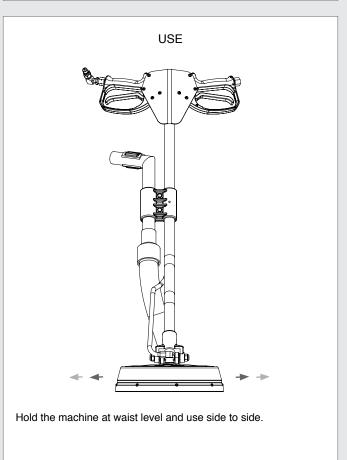


# 8904 "T" HANDLE, 1.5" TUBE SPINNER®

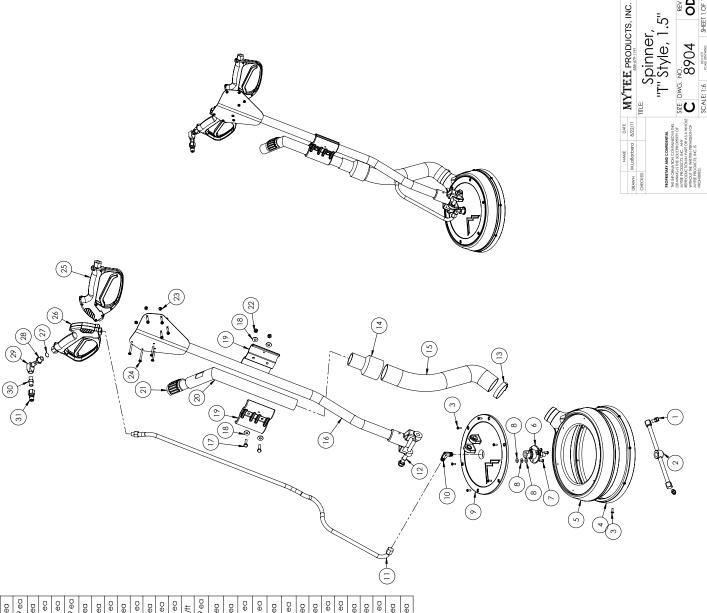


MSRP	\$9.99 ea	\$129.99 ea	\$0.99 ea	\$34.99 ea	\$51.99 ea	\$198.99 ea	\$0.99 ea	\$0.99 ea	\$84.99 ea	\$4.99 ea	\$21.99 ea	\$5.99 ea	\$1.49 ea	\$14.99 ea	\$8.99/ff	\$139.99 ea	\$0.99 ea	\$0.99 ea	\$11.99 ea	\$48.99 ea	\$3.25 ea	\$0.99 ea	\$0.99 ea	\$0.99 ea	\$20.99 ea	\$41.99 ea	\$0.99 ea	\$3.19 ea	\$26.99 ea	\$3.19 ea	\$ 40 pc
QTY.	2	-	14	-	-	-	8	6	-	-	-	-	-	-	1	-	2	4	2	-	-	2	ω	80	ı	1	-	1	-	-	-
DESCRIPTION	jet, s/s, 1/8", 1501	bar, t, straight, 42 deg, 10"	screw, 8 x 3/4 phil pan head, type a, s/s	brush, spinner, 12"	manifold, spin 12", blue	swivel, flange	screw, 10-32 x 1/2 phil pan	washer, #10 flat, s/s	casting, 12" low profile spinner	elbow, brass, 90 deg, 1/4" mpt x 1/4" mpt	sol hose, black 48" (OAL), fsw 1/4" x m 1/4"	rod, threaded, 4.65 x 1/2"	clamp, hose, 2-1/4 dia	cuff, 2" thread x 1-1/2" slip	vac hose, 2" wire-reinforced	two handed spinner handle	bolt, 1/4-20 x 1-1/4" hex head, s/s	washer, 1/4" flat, s/s	clamp, spinner handle , 1.5" x 1.25"	tube, vac, elbow, 1.5" dia, spinner	sleeve, vac relief, 1.5", spin	nut, lock, 1/4-20 nylon insert	nut, lock, 10-32, thin pattern	screw, 10-32 x 1-1/2", p-pan	angled gun, no trigger	gun, high pressure, (batt spray/ counter)	filter, mesh screen 3/8"	bushing, brass, 3/8"mpt x 1/4"	swivel, 90 degrees x 1/4 fm x 1/4 ml, viton seals	nipple, brass, 1/4"m, hex	20 1/4 mm
PART NO.	H505	H441	H882	C080	P689A	H926	H230	H289	H465A	B136	AH206	H475	H217	H498A	PH628-20	H092	H203	H210	H613A	H094	G082	H216	H458	H457	H540A	H540	H461	B105	B100	Z018	.0.0
NO.	_	2	е	4	5	9	7	8	6	10	=	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	5

# 8907 CORNER SPINNER®

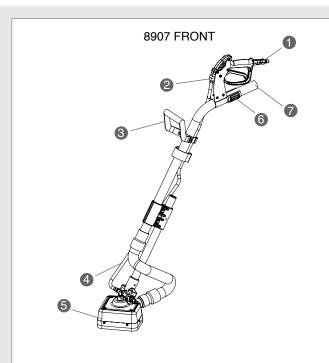


- 1. Male quick disconnect
- 2. High-pressure trigger gun
- 3. Wand grip handle
- 4. Solution hose
- 5. 6" Spinner® head
- 6. Vac Relief
- 7. Vacuum hose connection port




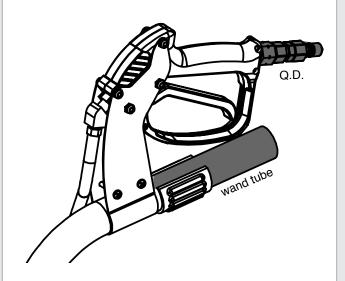

After the Vacuum Hose and Solution Hose are attached to the extractor, connect the Solution Hose to the Male Quick Disconnect, and the Vacuum Hose to wand tube.

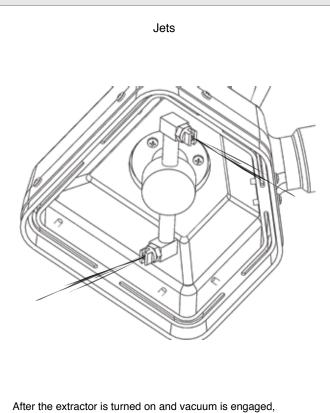


After the extractor is turned on and vacuum is engaged, squeeze the High-Pressure Trigger Gun. Liquid flows through the Solution Hose and activates the Spinner Bar.

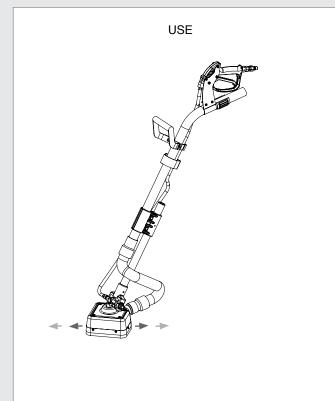


Hold the machine at waist level and use a back-and-forth motion.


## 8907 CORNER SPINNER®

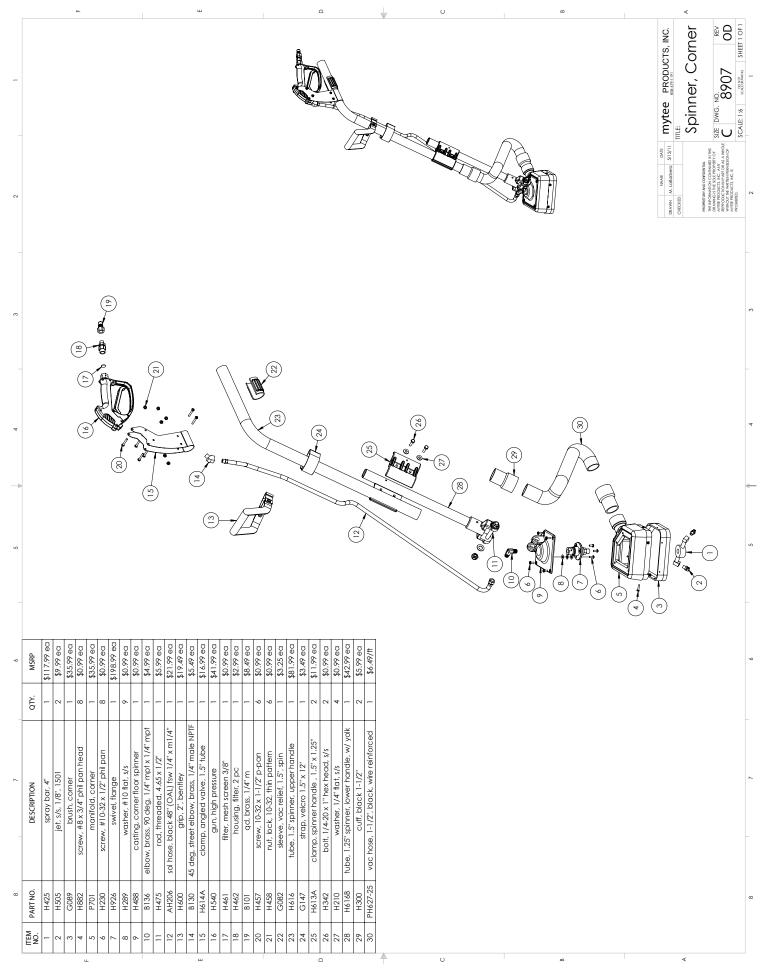



## 8908 COUNTER SPINNER®

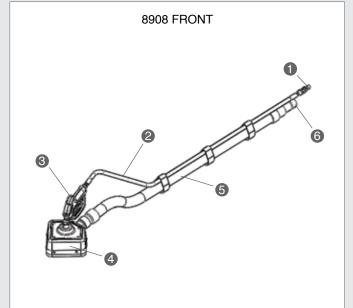


- 1. Male quick disconnect
- 2. Solution hose
- 3. High-pressure trigger gun
- 4. 6" Spinner® head
- 5. Vacuum hose
- 6. Vacuum hose connection port

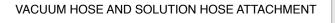


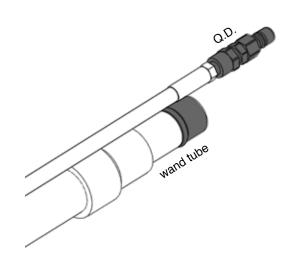

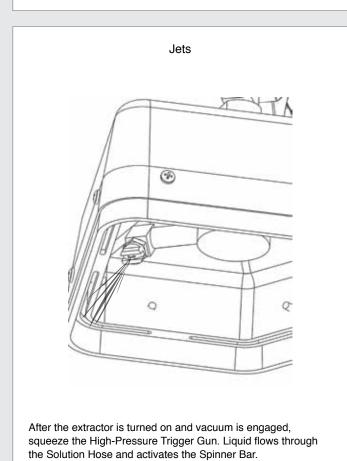

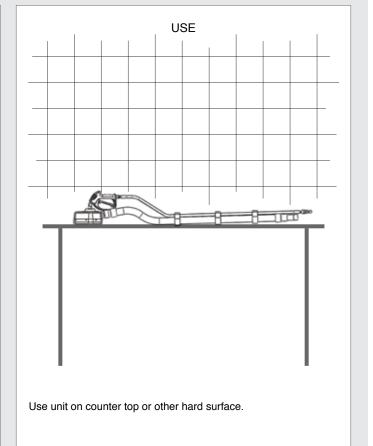

# 8908 COUNTER SPINNER®

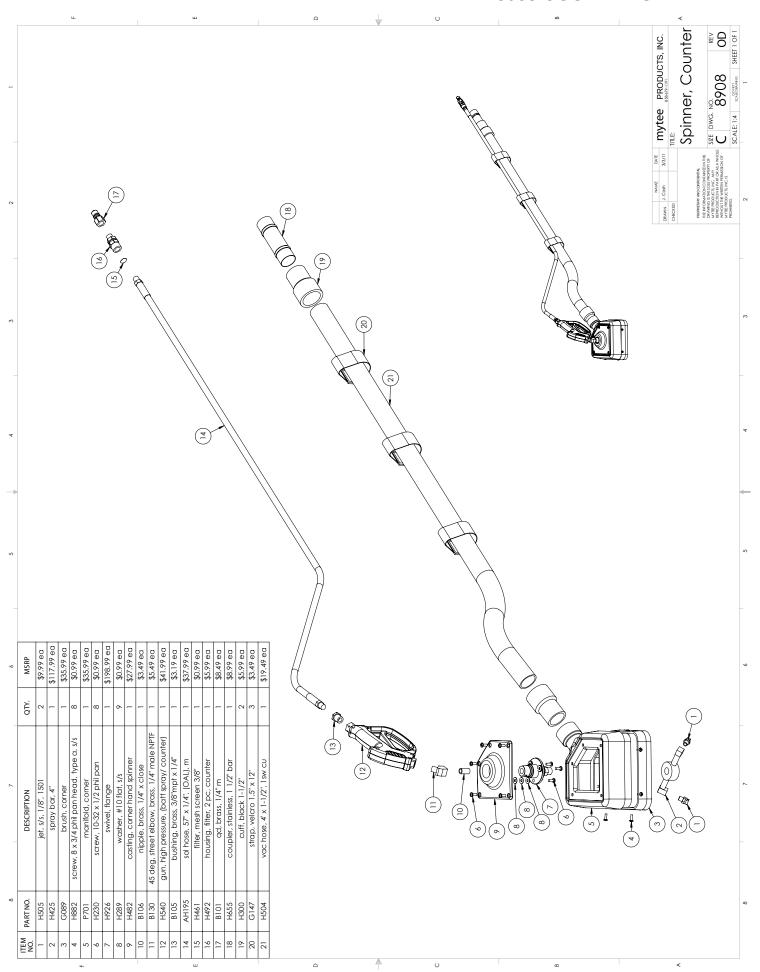

## GENERAL INFORMATION

## **Dear Customer:**

Congratulations on the purchase of your new Spinner®. As you are already aware, the scene of the equipment world is becoming more high tech, and we at Mytee Products Inc. strive to keep you on the cutting edge with superior quality

Keep in mind that the Spinner® is a machine, so neglect or abuse will cause unnecessary damage and void the warranty. However with simple maintenance the Spinner® will give quality performance for many years to come.

If warranty questions arise, please consult your user manual or get in touch with your distributor. If you have questions about maintenance, replacing parts or ordering parts, please call an authorized Mytee Products Inc. Service Center. To see an updated list, visit our website at www.mytee.com

Before you begin cleaning, please read your manual thoroughly.

Sincerely.

Mytee Customer Care Dept.

## **Parts and Service**

Repairs, when required, should be performed by Mytee service personnel or Mytee authorized Service Center using Mytee original replacement parts and accessories. Call Mytee for repair parts or service. Please specify the Model and Serial Number when discussing your machine.

## **Name Plate**

The Model and Serial Number of your machine are shown on the Nameplate on the back panel of the machine. This information is needed when ordering repair parts for the machine. Use the space provided on the front cover to note the Model and Serial Number of your machine for future reference.

### **Unpacking the Machine**

When the machine is delivered, carefully inspect the shipping carton and the machine for damage. If damage is evident, save the shipping carton so that it can be inspected by the carrier that delivered it. Contact the carrier immediately to file a freight damage claim.

## **Caution and Warnings**

Mytee uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel and property.



Is used to warn of immediate hazards that will cause severe personal injury or death.



Is used to call attention to a situation that could cause severe personal injury.



Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this machine. This product is intended for commercial use only.



## WARNING

To reduce the risk of fire, electrical shock, or injury:

- 1. Read all instructions before using equipment.
- 2. Use only as described in this manual. Use only manufacturer's recommended attachments
- 3. Always unplug or disconnect the appliance from power supply when not in use.
- 4. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 5. Do not use in areas where flammable or combustible material may be present.
- 6. Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
- 7. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
- 8. Keep hair, loose clothing, fingers, and all parts of the body away from all openings and moving parts.
- 9. Use extra care when cleaning on stairs.
- 10. When cleaning and servicing the machine, local or national regulations may apply

to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkalines, or other dangerous liquids.

11. Do not leave operating unattended.



Use only non-flammable liquid in this machine.

## **Preparation**

- 1. Remove furniture from cleaning area, and sweep or vacuum.
- 2. Protect cabinets, carpets, walls and painted surfaces from spray with drop cloths
- 3. Identification Identify the type of floor you are going to clean. This step is vital, since each flooring type may call for different chemicals, brushes and equipment. Basic flooring types are: resilient (vinyl, VCT, linoleum), which is generally softer; stone (terrazzo, quarry, ceramic, brick, concrete) made of natural materials; and stone substitute (marble, slate and granite), which mimics stone.
- 4. Application Once the flooring is identified, apply the appropriate type of cleaning (or in the case of resilient flooring, stripping) chemical. On tile surfaces, spray chemical evenly over tile and grout lines, allowing it to pool in the lines.
- 5. Emulsification Chemicals typically require dwell time to remove the dirt and grime driven into the surface. The dirtier the floor, the longer the chemicals may need to dwell. Without proper dwell time, chemicals will not be effective.
- 6. Agitation and Elimination Agitate the chemical into the floor to facilitate cleaning using a Spinner® floor machine connected to an extractor. The Spinner® lays down high-pressure spray to agitate and rinse, and vacuums up the solution simultaneously, eliminating it from the surface.

## Spinner® Operation

- 1. Attach the Vacuum and Solution Hoses to the extractor.
- 2. Attach the Solution Hose to the Male Quick Disconnect and the Vacuum Hose to the Wand Tube.
- 3. Turn on the extractor to engage the vacuum, while making sure the bottom of the Spinner™ is flush with the cleaning surface to ensure proper suction.
- 4. Squeeze the Spinner's™ high-pressure trigger gun to dispense solution on to the surface.
- 5. Hold the machine at waist level and use a back-and-forth motion.

## After Use

- 1. Unplug.
- 2. Inspect hoses and replaced if damaged.
- 3. After each use, wipe floor machine with a clean, soft, damp cloth.
- 4. Do not expose to rain.
- 5. Store indoors. In a clean, dry place.
- 6. Do not store sitting on brush.

## **Maintenance Schedule**

Maintenance item	Daily	Once a week			
Clean and inspect hoses Check for loose hardware	x x				
Clean machine with clean, soft damp cloth	x				
Inspect spray jets once a week. Use Mytee® System Maintainer 3601 every 100		x x			
hours. Circulate through the hose and tool.					

## **FAQs**

## Q - How much does my Spinner® weigh and dimensions?

A - Model 8901 - Weight: 23 pounds; Dimensions: 13"x13"x53" Model 8902 - Weight 23 pounds; Dimensions: 13"x13"x53" Model 8903 - Weight: 21 pounds; Dimensions: 13"x13"x53" Model 8904 - Weight: 21 pounds; Dimensions: 23"x14"x51" Model 8907 – Weight: 18 pounds; Dimensions: 13"x13"x53" Model 8908 - Weight: 8 pounds; Dimensions: 14"x12"x12"

## Q-What can I do to extend the life of my Spinner®?

A - Follow the suggested maintenance schedule in this manual.

## Trouble Shooting

The Spinner® is not spinning.

- 1. Inspect the jets to make sure they are not clogged.
- 2. Check the machine for a normal flow of solution by disconnecting the Solution Hose from the Spinner® and letting the liquid run freely.
- 3. If the solution's flow is disrupted, use Mytee® System Maintainer 3601.
- 4. Try to spin the unit by hand. If it does not move, replace the swivel. If it moves, the seal may need rebuilding. Take the Spinner® to your local service center.

## **GENERAL INFORMATION**

## Guidelines

- 1. For ease of use, keep the brush and manifold balanced and flat.
- 2. Adjust the handle at a comfortable height for the operator; making sure the brush remains balanced before starting the extractor.
- 3. The Spinner® operates differently according to the surface. Smooth surfaces offer more resistance than surfaces such as tile and grout. If you experience resistance of movement, adjust the vacuum release slot to release air from the Vacuum Hose.

## **Replacement Parts**

8901, 8902, 8903, and 8904 Brush – No. G080 Swivel – No. H926 Rebuild Kit – No. H927

8907 and 8908 Brush – No. G089 Swivel – No. H926 Rebuild Kit – No. H927

## Warranty

### MYTEE LIMITED WARRANTY POLICY

Mytee Products, Inc. endeavors to provide high quality products and product support to its customers and therefore backs up all of its new products purchased from Mytee Products Inc. ("Mytee") or any authorized Mytee distributor/service center with this limited warranty. This limited warranty begins on the date of the customer's purchase and is valid and available to the original purchaser only. Mytee's products are for commercial use only and are not intended for personal, family or household uses.

HOWEVER, OTHER THAN SET FORTH HEREIN, MYTEE GIVES NO WARRANTY, EXPRESS OR IMPLIED, AS TO DESCRIPTION, QUALITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, PRODUCTIVENESS, INFRINGEMENT, OR OTHER MATTER, OF ANY GOODS WHICH MYTEE SHALL SUPPLY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. MYTEE SHALL IN NO WAY BE RESPONSIBLE FOR THE PROPER USE AND APPLICATION OF THE GOODS. MYTEE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR MYTEE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF MYTEE'S GOODS. THIS LIMITED WARRANTY POLICY MAY BE CHANGED OR WITHDRAWN BY MYTEE AT ANY TIME WITHOUT NOTICE.

HOUSING LIFETIME LIMITED WARRANTY: Mytee warrants that rotationally molded housing and tanks will be free from manufacturing defects, defects in workmanship, and defects in material for the life of the part. Replacement cost does not include the cost of shipping or labor.

PUMP, VACUUM MOTOR AND HEATER 2-YEAR LIMITED WARRANTY: Mytee warrants that pumps, vacuum and floor machine motors, and heaters will be free from manufacturing defects, defects in workmanship, and defects in material for two (2) years from the date of original purchase. This warranty does not apply and is void if the pump, vacuum motor, or heater has worn brush motors, water damage, chemical build-up, chemical damage, or evidence of abuse, neglect or tampering. This warranty covers the cost of replacement or repair only and does not cover shipping or labor costs.

WEAR PARTS 90-DAY LIMITED WARRANTY: Mytee will replace all wear parts for 90 days from the date of original purchase. "Wear parts" are items which wear out as a result of usage or the passage of time and are consumed despite attempts to maintain them, such as gaskets, wheels, brass, cords, wires, electrical terminals, hoses, switches, thermostats, plastisol parts, filters, bearings, brushes, solenoids, orings, bulbs, heating elements, castors, or other parts deemed wear items in Mytee's sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

LIMITATION OF DAMAGES: THE REMEDY OF REPLACEMENT OR REPAIR OF ANY DEFECTIVE GOODS SHALL BE THE EXCLUSIVE REMEDY UNDER ANY WARRANTY MADE BY MYTEE, WHETHER EXPRESS OR IMPLIED. IN NO EVENT SHALL MYTEE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, PROPERTY DAMAGES, OR PERSONAL INJURIES.

All limited warranties are void for, and Mytee does not warrant in any way, any product that evidences misapplication, improper installation, abuse, lack of maintenance, negligence in use or care, abnormal use, alteration of design, use of incompatible or corrosive chemicals, use in a rental service, and/or servicing, installation of parts, or repairs by anyone other than Mytee or a Mytee authorized distributor or service center. Mytee may make changes in products it manufactures and markets at any time; these changes are made without obligation to change, retrofit, or upgrade any product previously sold or manufactured.

Mytee has no obligation to honor the limited warranties set forth herein unless the original purchaser, promptly upon discovering the warranty claim and prior to continuing to use the product, contacts Mytee or a Mytee authorized distributor or service center to describe the claim and to receive and follow instructions for documenting and resolving the claim. In addition, the purchaser must provide the product to which the claim applies to Mytee or a Mytee authorized distributor or service center for a thorough inspection.

If any provision or portion of this limited warranty policy is found to be unenforceable, then the remaining provisions and portions shall remain valid and enforceable. If any provision or portion of this limited warranty policy is found to be limited by law, then that provision or portion shall be construed to make it effective within the bounds of law. For example, if there are legal limitations on the duration of warranties, the warranties made herein shall be construed to have the minimum duration required by law, or, if there are legal limitations of exclusion of remedies, the exclusions made herein shall be construed to apply to the fullest extent possible without violating the law.

The validity, construction and performance of this warranty policy shall be governed by the laws of the State of California, without respect to conflicts of laws principles. The exclusive jurisdiction of any legal action arising from or related to this warranty policy shall be in the State of California and no legal action shall be commenced elsewhere.

## **Return Material Authorization Procedure**

It is the responsibility of any Authorized Service Center (ASC) or Distributor with written authorization to ensure the Customers equipment is repaired as soon as possible. Only Mytee Products Inc. or it's authorized dealers with written authorization, service centers, and agents may make warranty repairs on these products. All others do so at their own risk and expense.

The Distributor must follow Mytee Products, Inc. standard RMA procedure:

- 1. When a repair falls within the Warranty time period for a piece of equipment, the Distributor will fill out a RMA/Warranty claim form. This form will act as a repair order to replace any defective parts.
- 2. All defective parts must be returned to Mytee Products, Inc. with the RMA/claim form for evaluation at the customer's expense. This shipping is non-refundable. All warranty claims are subject to an evaluation by Mytee Products, Inc. to determine if warranty will be approved. Any credit for repair and/or parts will only be issued upon evaluation and approval from Mytee Products, Inc.
- 3. When Warranty is approved, the Distributor's account will be credited for the replacement part(s). Mytee Products, Inc. will ship the warranted replacement part(s) to the Distributor prepaid. If Warranty is denied the Distributor's account will not be credited for any parts sent for this claim.

# **NOTES**



Mytee Products Inc. 13655 Stowe Dr. Poway, CA 92064 www.mytee.com PH 858.679.1191 FX 858.679.7814 © 2011 Mytee Products Inc. Printed in the U.S.A.