



Condensation Pump with Check Valve


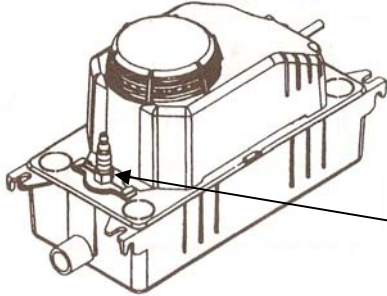


The Check Valve is located inside the pipe connector as standard.

The following images showing you where the check valve is located inside the pipe connector,

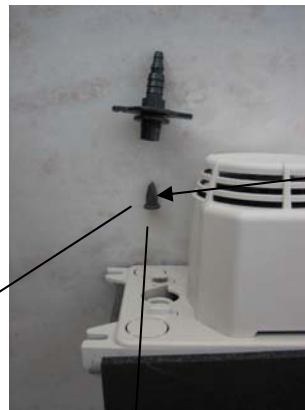

Check Valve

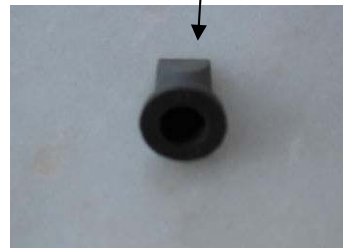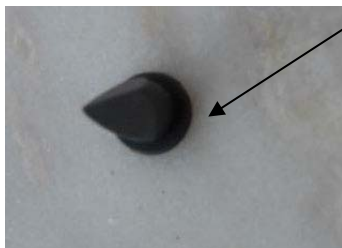

If you feel the water drain back to the condensation pump, you might need to take the Check Valve off the pump and check whether there is any debris block it. Hope it can help.