



M157561D.3

ITEM NUMBER: 157561

SERIAL NUMBER: _____

OWNER'S MANUAL
Instructions for Set-up, Operation, Maintenance & Storage
TRAILER MOUNTED HOT WATER/STEAM PRESSURE WASHER
3000 PSI/4.0GPM
 (Hereafter referred to as hot water pressure washer.)
PORTABLE OUTDOOR – USE ONLY

This pressure washer produces both cold and hot water high-pressure spray. Cleaning chemicals may be incorporated into the spray if desired. The pressure pump for this equipment is powered by a gasoline internal combustion engine and the water is heated by a diesel/kerosene/fuel-oil fired, open flame burner.

⚠ WARNING – READ THIS MANUAL

READ and UNDERSTAND this Owner's Manual and the Engine Owner's Manual completely before attempting to set up and use the pressure washer! Failure to properly set up, operate, and maintain this pressure washer could result in *serious injury or death* to operator or bystanders.

⚠ WARNING – SPECIAL HAZARDS

| | |
|--------------------------|---|
| CO Poisoning | <ul style="list-style-type: none"> • Exhaust from both the engine and burner contains carbon monoxide, a poisonous gas that can cause carbon monoxide poisoning and possible death if inhaled. Operate OUTDOORS and at least 20 feet from the home, away from windows, vents and air intakes, to allow proper ventilation. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. |
| Skin/Eye Injury | <ul style="list-style-type: none"> • High-pressure spray can cause serious skin or eye injury, including injection injury if fluid pierces the skin. Injection injury can result in blood poisoning and/or severe tissue damage. |
| Burns | <ul style="list-style-type: none"> • Hot spray can scald and burn skin. • Hot surfaces of wand, engine and burner, as well as hot exhaust from both the engine and burner can cause burns. |
| Slips/Falls | <ul style="list-style-type: none"> • Spray discharge can cause puddles and slippery surfaces. • Spray-gun kickback can cause operator loss of balance and fall. |
| Flying Debris | <ul style="list-style-type: none"> • High-pressure spray can cause surface damage and flying debris. |
| Fire/ Explosion | <ul style="list-style-type: none"> • Engine and burner sparking can ignite fuel or other flammable liquids or vapors in the vicinity. • Hot exhaust from engine and burner can ignite combustible materials. |
| Chemical Exposure | <ul style="list-style-type: none"> • Cleaning chemical vapors or contact with skin may be hazardous. |
| Electric shock | <ul style="list-style-type: none"> • Spray contact with electrical sources can cause electric shock. |
| Trailer Tipover | <ul style="list-style-type: none"> • Sudden stopping or turning while towing the pressure washer with a filled water tank can result in driving instability and/or trailer tipover. |

A summary of important safety information is provided at the end of the manual.

Any Questions, Comments, Problems, or Parts Orders
Call NorthStar ProSHOT Product Support 1-800-969-7073

Hazard Signal Word Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates a hazardous situation, which if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation, which if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION used with the safety alert symbol, indicates a hazardous situation, which if not avoided, could result in minor or moderate injury.

CAUTION

CAUTION without the safety alert symbol, is used to address practices not related to personal injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

EQUIPMENT PROTECTION QUICK FACTS

| | | |
|--------------------------------|---|--|
| Inspect Upon Delivery | STOP! Closely inspect to make sure no components are missing or damaged. See the "Assembly and Initial Set-Up" section for instructions on whom to contact to report missing or damaged parts. | |
| Check Engine Oil | Engine is shipped with oil. Check the engine oil level before starting the pressure washer. | |
| Check Pump Oil | Pump is shipped with oil. Check the pumps oil level before starting the pressure washer. | |
| Battery Required | A battery is included but not connected. The engine will not run unless the battery is connected. If replacing 12 Volt, minimum 24 Amp/Hr. standard top post mount automotive (Group 75/86). | |
| Water Flow Requirements | Make sure your supply water flow rate is 20% higher than the pressure washer's flow rate (see "Specifications" section for detail), and that your water is clean and particle free. | |
| Storage | Do not allow water to freeze in the pump, hose, coil, or spray gun(s). | |
| Chemical Spraying | Use only NorthStar brand or equivalent pressure washer chemicals designed for high-pressure washer use. Use soap adjustment knob to regulate cleaning power if applicable. | |
| Maintenance Schedule | Engine: | <ul style="list-style-type: none"> See Engine Owner's manual. |
| | Pump: | <ul style="list-style-type: none"> Change oil after first 40 hours, then every 3 months or 500 hours. |
| | Burner Fuel Filter /Water Separator: | <ul style="list-style-type: none"> Drain water as needed. Change filter after every 500 hours of use. |
| | Coil: | <ul style="list-style-type: none"> Descale coil annually or more frequently as conditions/performance require. Inspect coil for soot build-up annually and desoot if needed. |
| | Electrodes: | <ul style="list-style-type: none"> Inspect electrodes annually and clean/adjust as needed. |
| | Belts: | <ul style="list-style-type: none"> Check belt tension after the first 24 hours of use, then routinely with each oil change. Tighten or change belts as needed. |
| | Brakes and Breakaway Switch: | <ul style="list-style-type: none"> Check before each use. |
| | Tires: | <ul style="list-style-type: none"> Check before each use. Maintain proper tire pressure, check for signs of wear and check lug nuts to be certain they are at proper torque. |

Table of Contents

| | |
|--|---------|
| Important Safety Information | 4 |
| Specifications | 5 |
| Component Identification | 6-7 |
| Safety Labeling | 8-10 |
| Special Equipment Safety Features | 11 |
| Assembly & Initial Set-Up Instructions | 12-15 |
| Moving & Towing the Pressure Washer | 16-20 |
| Before Each Use | 21-25 |
| Operating the Pressure Washer | 26-35 |
| Storing the Pressure Washer | 36-37 |
| Maintenance & Repair | 38-51 |
| Major Components Call Out | 52 |
| Major Components | 53 |
| Parts Explosion (Ladder Rack & Chem. Tank) | 54-55 |
| Parts Explosion (Fenders) | 56 |
| Parts Explosion (Heat Exchanger) | 57-60 |
| Parts Explosion (Pump, Engine, & Generator Head) | 61-68 |
| Parts Explosion (Skid) (Roll Cage) | 69-82 |
| Parts Explosion (Tongue, Frame & Bumper) | 83-86 |
| Parts Explosion (Trailer Water Tank) | 87-89 |
| Parts Explosion (Trailer Hose Reel) | 90-93 |
| Parts Explosion (Axle) | 94 |
| Parts Explosion (Generator Head) | 95 |
| Parts Explosion (Pump) | 96-97 |
| Branding Decal Locations | 98 |
| Schematic Drawing | 99-103 |
| Summary of Important Safety Information | 104-107 |
| Limited Warranty | 108-109 |
| California Proposition 65 Information | 110 |

Important Safety Information

Thank you for purchasing a NorthStar ProSHOT Brand Hot Water Pressure Washer. Your machine is designed for long life, dependability and the top performance you demand. This pressure washer is designed to:

- 1) Produce a high-pressure spray of heated or unheated water (up to 4 gallons per minute at 3000 psi).
- 2) Cleaning chemicals can be incorporated using a low-pressure water spray.

Water is supplied to the pressure washer via an external water tank. The water tank supplied to the customer on all trailer models. The water supply will have a flow rate of at least 4.8 gallons per minute. Any cleaning chemicals that are used must be specifically approved for use in pressure washers.

The pump is powered by a gasoline-fueled engine. The spray water is heated (when desired) by a kerosene/diesel/fuel-oiled, spark-ignited, open flame burner. Normal operation of this equipment will require you to supply:

- Gasoline fuel for the engine.
- Water.
- Fuel for the burner (kerosene, diesel or fuel oil).
- Chemical (if desired).

See the “**Specifications**” section of this manual for more detail.

Engine powered pressure washers are for OUTDOOR USE ONLY. Be sure to read about site selection for running this pressure washer in the “**Before Each Use**” section of this manual.

The operator should acquire and wear safety apparel during operation of this pressure washer. Safety apparel includes waterproof insulated gloves, safety goggles, non-slip protective footwear, and ear protection. Some cleaning chemicals may require the use of a respirator mask (as instructed on chemical label).

Before using this pressure washer, the operator shall determine the suitability of this product for its intended use and assumes liability therein.

READ THIS MANUAL

⚠ DANGER

Carefully read and follow all instructions and safety information for using this pressure washer. Improper use or maintenance of the pressure washer can result in **serious injury or death** to the operator or bystanders from:

- **Carbon monoxide poisoning**
- **Fire/explosion**
- **Chemical exposure**
- **Skin/eye injury from high pressure spray**
- **Burns**
- **Slips/falls**
- **Electric shock**
- **Flying objects/debris**

Keep this manual for reference and review. A summary of important safety information can be found at the end of the manual. Proper preparation, operation, and maintenance of this pressure washer will result in optimal performance and a long life for this equipment. For detailed engine operation and maintenance information, always refer to the engine Owner's Manual furnished with the pressure washer.

ATTENTION:

Rental companies and private owners who loan this equipment to others!

All persons to whom you rent/loan this pressure washer must have access to and read this manual. Keep this owner's manual with the pressure washer at all times and advise all persons who will operate the machine to read it. You must also provide personal instruction on how to safely set-up and operate the pressure washer and remain available to answer any questions a renter/borrower might have.

Specifications

| MODEL | |
|--|--|
| Model # | 157561 |
| FLOW OUTPUT | |
| Pressure Rating | 3000 psi |
| Flow Rate | 4 gallons per minute |
| Maximum Temperature | 250° F |
| DIMENSIONS / COMPONENTS | |
| Length | 162" |
| Width | 85.5" |
| Height | 85" |
| Trailer Weight – Wet | 3,820 lbs. |
| Trailer Weight – Dry | 1,740 lbs. |
| Tongue Weight – Wet | 450 lbs. |
| Tongue Weight – Dry | 530 lbs. |
| Pump Model | General Pump TSS1511L |
| Engine Model | Honda GX390 |
| Engine Displacement | 389cc |
| High Pressure Discharge Hose | (1) 3/8" x 150' |
| Chemical Injector | Maximum dilution ratio 9-to-1 |
| Trailer GVWR | 5,000 lbs. |
| Hitch Size | 2" |
| Input Water Supply (Tank Feed) | 200 gallon tank Flow rate must be maintained at 4.8 gpm |
| Tire Size | 15' 6Lug on 5.5 |
| Battery | 12 Volt, minimum 24 Amp/Hr. Standard top post mount automotive (Group 75/86) The inside dimensions of the battery compartment are 11-1/8"L x 7-3/4"W x 10-1/8"H. |
| SUPPLIES REQUIRED | |
| Engine Fuel | Regular, Unleaded Gasoline (Capacity: 8 Gal.) |
| Engine Oil | See Engine Owner's Manual |
| Burner Fuel | #1 or #2 Diesel, B5 or lower Biodiesel, Kerosene, or Fuel Oil (Capacity: 8 Gal.) |
| Pump Oil (shipped with oil, but refills required) | 40.6 ounces SAE Non-detergent 30wt. capacity |

Component Identification - REV. D.3

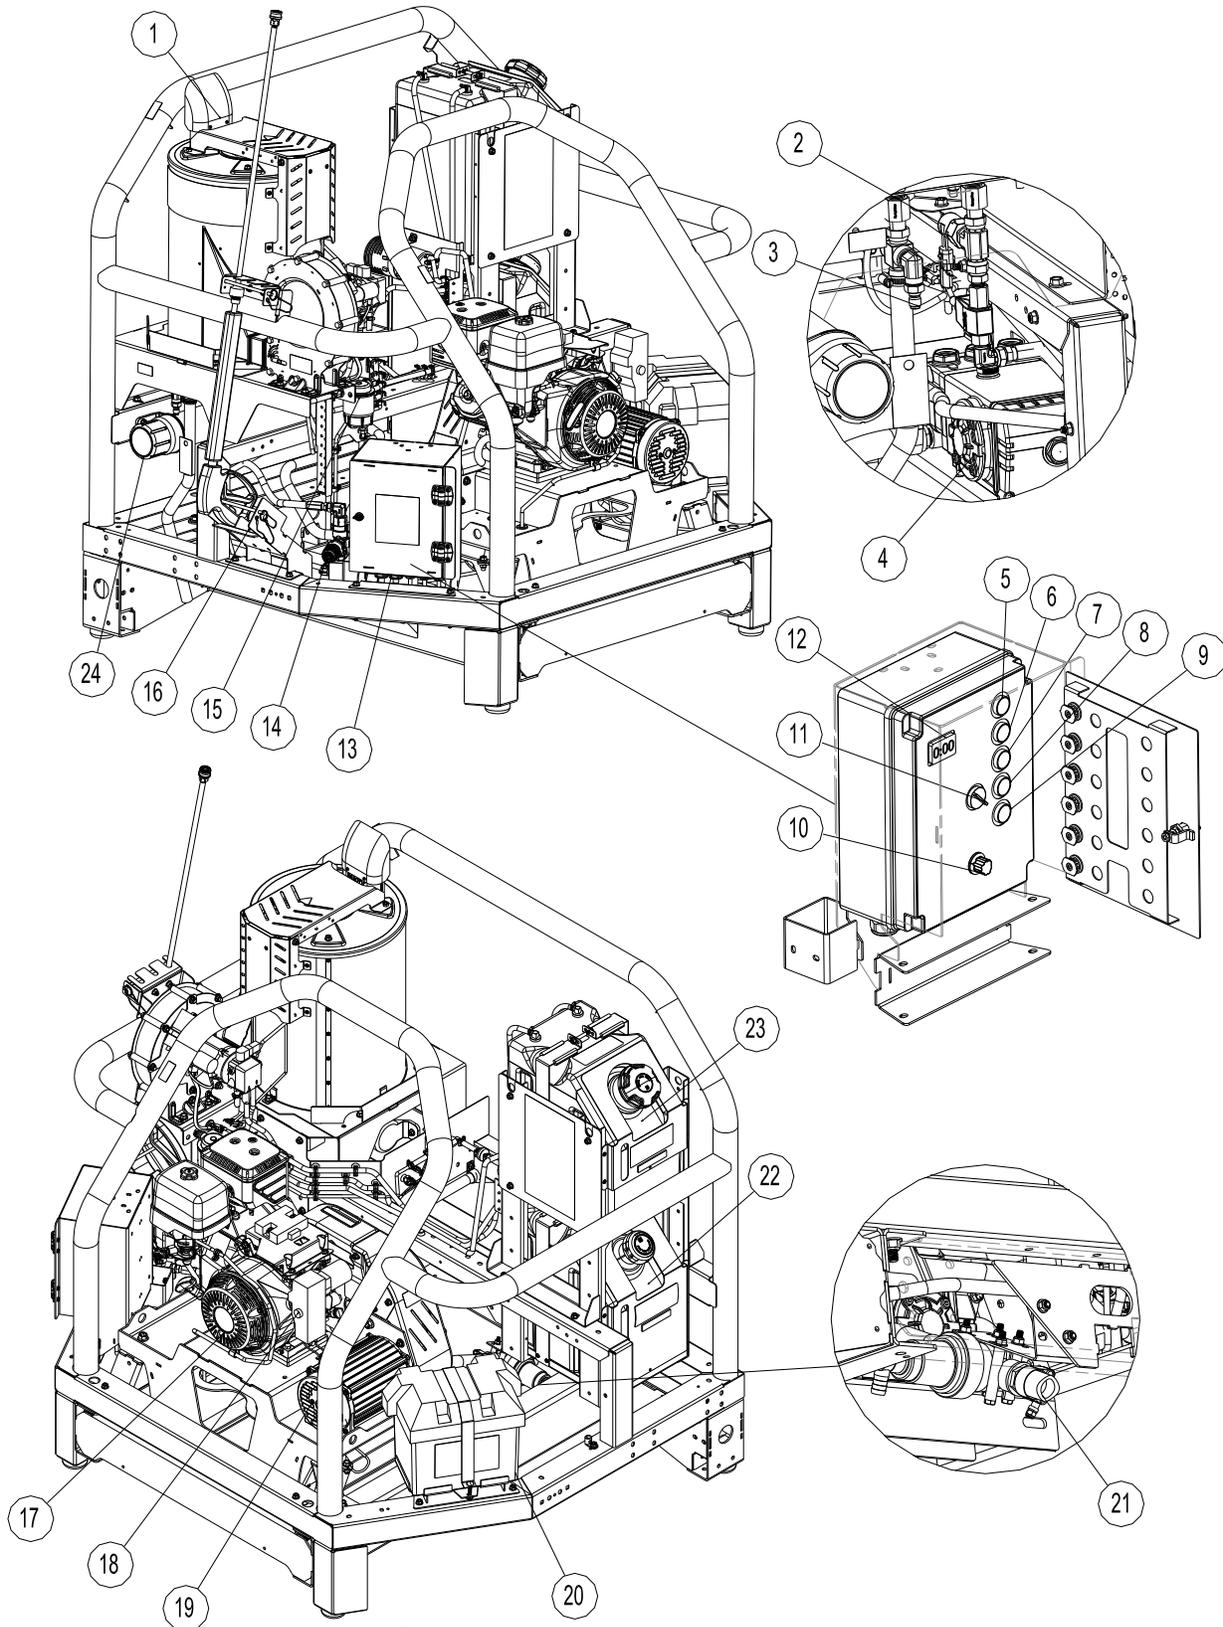


Fig.06065

Component Identification - REV. D.3

| COMPONENT REFERENCE GUIDE | | |
|----------------------------------|--|---|
| REF# | COMPONENT | DESCRIPTION |
| 1 | Heat Exchanger | Device that heats the water by forcing a flame across steel pipe. |
| 2 | Hi-PSI Switch | This is a backup safety feature. If the system pressure exceeds the set pressure limit this device will stop the burner from firing. |
| 3 | Water Outlet | Connection point for the high pressure hose. |
| 4 | Pump | The device that moves fluid through a combination of suction and displacement. |
| 5 | Indicator Light (Heat) | Instrument used to monitor unit operation. Will illuminate when the burner has power when heat switch is in the ON position. |
| 6 | Indicator Light (Spraying) | Instrument used to monitor unit operation. Will illuminate when the gun trigger is being squeezed and water is flowing through the spray gun. |
| 7 | Indicator Light (Thermostat) | Instrument used to monitor unit operation. Will illuminate when the gun trigger is being squeezed and water is heating. |
| 8 | Indicator Light (Burner Motor) | Instrument used to monitor unit operation. Will illuminate when the blower is operating properly. |
| 9 | Indicator Light (Ignition) | Instrument used to monitor unit operation. Will illuminate when burner is firing. |
| 10 | Thermostat Knob | Turn to adjust water temperature. |
| 11 | Heat Switch | On/Off device for power to burner components. |
| 12 | Hour Meter | Indicates the number of hours the pressure washer has been used. |
| 13 | Control Box | Mounted housing that holds electrical controls for the burner. Storage location for nozzles. |
| 14 | Unloader | Valve that regulates pressure and directs flow into bypass when trigger is released. |
| 15 | Burner Fuel Filter/ Water Separator | Used to remove contaminant water from burner fuel to prevent water in the fuel from reaching the burner. |
| 16 | Gun Mount | Location to secure up to 3 spray guns. |
| 17 | Engine (see engine manual) | The air-cooled engine powers the pump and generator. |
| 18 | Engine Key Switch | Start the engine by turning clockwise. (Refer to the engine manual for details.) |
| 19 | Generator | Powers burner components with 120V AC electricity. |
| 20 | Battery Box | Storage compartment to house the battery. |
| 21 | Water Inlet | Used to connect water from the feed tank to the inlet plumbing. |
| 22 | Engine Fuel Tank | Engine fuel storage container. |
| 23 | Diesel/Kerosene/Fuel Oil | Burner fuel storage container. |
| 24 | Manual Tube | Storage location for owner's manual. |

Safety Labeling – REV. D.3

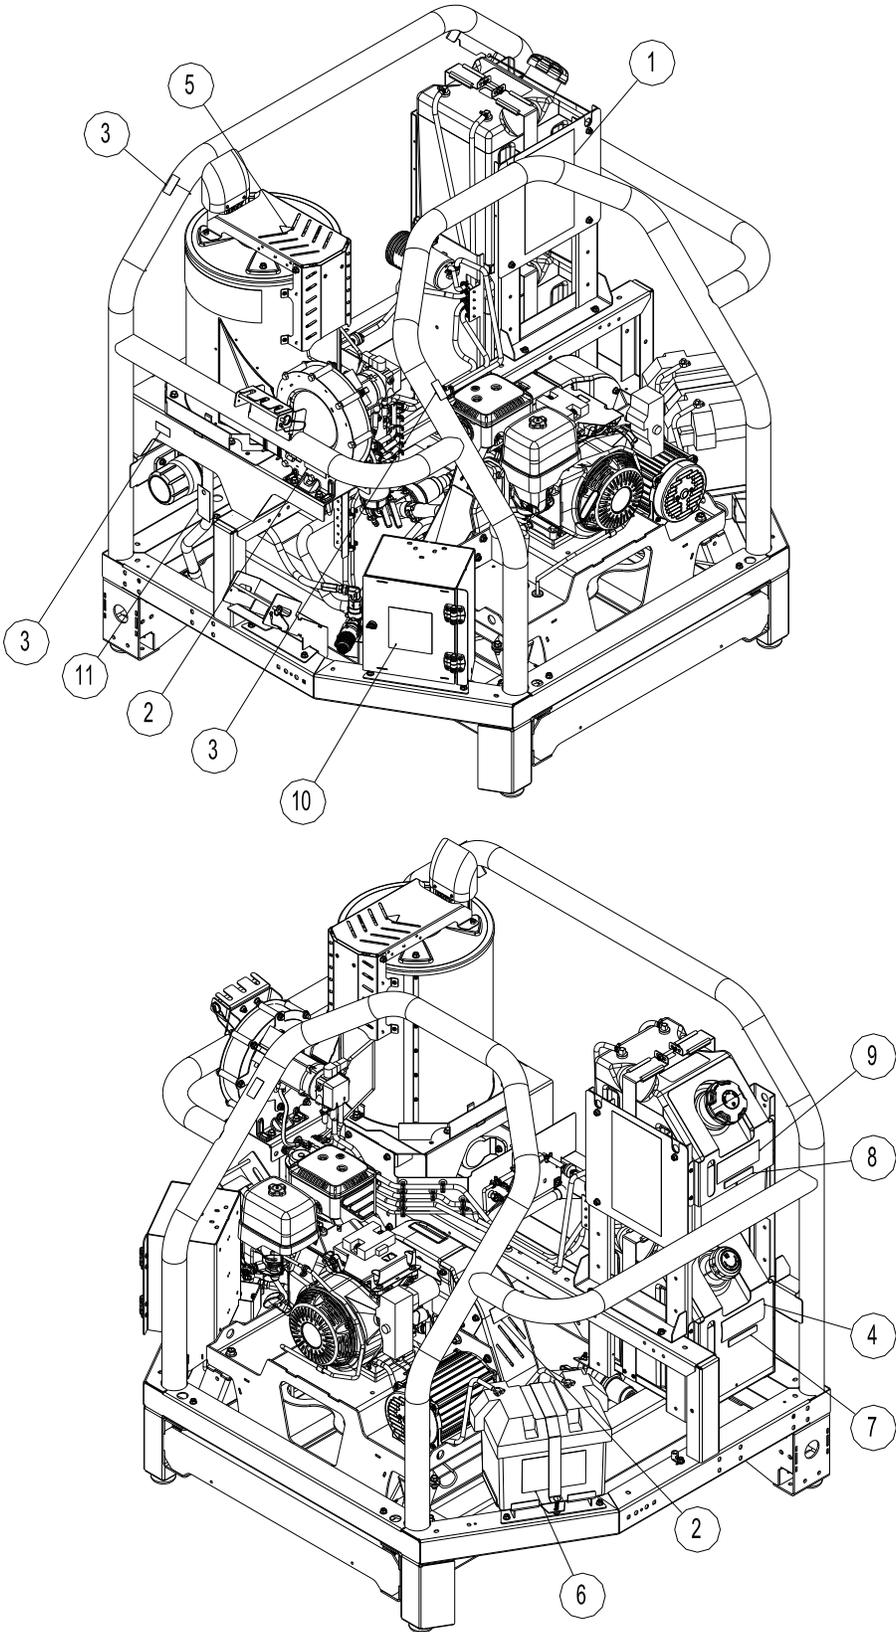


Fig.06066

Safety Labeling – REV. D.3

| ON-PRODUCT WARNING LABELS | | | |
|---------------------------|--------|--|------|
| Ref.# | Part # | Description | Qty. |
| 1 | 782325 | Decal, Danger and Warning | 1 |
| 2 | 786632 | Decal, Rotating Equipment Warning | 2 |
| 3 | 797513 | Decal, Burn Hazard Decal | 3 |
| 4 | 777666 | Decal, Gasoline Only | 1 |
| 5 | 796496 | Decal, Iso Electric Shock Warning Triangle | 1 |
| 6 | 782397 | Decal, Battery Warning Decal | 1 |
| 7 | 796862 | Decal, Engine Fuel Tank | 1 |
| 8 | 796861 | Decal, Burner Fuel | 1 |
| 9 | 787827 | Decal, Diesel, Kerosene or Fuel Oil Only | 1 |
| 10 | 797448 | Decal, Control Box, Operating Instruction | 1 |
| 11 | 798057 | Hangtag, Rupture Disk Warning | 1 |
| 11.1 | 32821 | Lanyard, Hangtag Warning (not shown) | 1 |

1

⚠ DANGER

FOR OUTDOOR USE ONLY! Using this pressure washer indoors CAN KILL YOU IN MINUTES. Engines, exhaust and burner exhaust contain carbon monoxide. This is a poison you cannot see or smell.

NEVER use inside any building, structure or garage, EVEN IF doors and windows are open.

Only use OUTSIDE and far away from windows, doors, and vents.

⚠ WARNING

High Pressure Fluid Forces / Burn Hazards
 High pressure spray can cause injection injury, eye injury, and loss of balance. Hot discharge fluid and hot surfaces can burn.
 • NEVER direct discharge stream at or near any person. Do not allow any part of the body to come in contact with the fluid stream.
 • Gun kicks back - hold with two hands. Keep good footing and balance at all times.
 • Surfaces of engine, burner, and wand can become very hot. Use only designated gripping areas of wand. Avoid contact with hot engine and burner.

Fire / Explosion Hazard
 Spraying flammables can cause explosion. Fuel is flammable and explosive. Exhaust can ignite combustible materials.
 • NEVER spray flammable liquids. Operate only where open flame or heat is permitted.
 • NEVER fuel a running or hot engine or oil burner.
 • Ensure there are no fuel leaks before starting. Keep sources of sparks and flames away.
 • Use approved container only for transferring fuel. Clean up fuel spills immediately.
 • Keep engine and burner exhaust at least 7 feet from all combustible objects. Situate on heat-resistant flooring when using burner.

Chemical Exposure Hazard
 • Understand all safety hazards and first aid measures for chemicals being used.
 • Follow chemical manufacturer's directions when handling and cleaning with chemicals. Wear safety gear as directed.

Electric Shock Hazard
 Keep spray away from electrical wiring, or electric shock / electrocution could occur.

CAUTION: To Reduce Risk of Injury, Read Operating Instructions Carefully Before Using.

2

⚠ WARNING

ROTATING MACHINERY

Clothing or hair can become rapidly entangled in unguarded rotating parts, resulting in serious injury or death.

DO NOT operate without power transmission belt guard in place.

11

⚠ WARNING


IF RUPTURE DISK ACTIVATES AND RELEASES WATER:

- Turn heat switch OFF
- Turn power switch OFF
- Turn water supply OFF
- Pull spray gun trigger to release pressure
- Unplug pressure washer, or remove the spark plug wire

Do not use pressure washer until Product Support arranges for repair or replacement.

Failure to turn off immediately could result in serious injury.

Call 1-800-270-0810

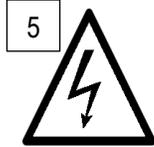

7

ENGINE FUEL TANK

8

BURNER FUEL TANK

9

DIESEL, KEROSENE, OR FUEL OIL ONLY

4

GASOLINE ONLY

3

⚠ WARNING

BURN HAZARD

Do not touch hot surface.

6

⚠ WARNING - BATTERY HAZARDS

BATTERIES:
1) contain caustic acid, 2) emit explosive gases, 3) can cause electric shock

- **ALWAYS** use eye protection. Caustic acid and explosive gases can cause blindness or severe burns.
- **NO** smoking, sparks, or flames.
- **NEVER** touch both battery terminals at the same time with your hand or any non-insulated tools.
- **FLUSH** immediately with water if battery acid contacts eyes, skin, or clothing.
- **CONNECT** cables in correct sequence: **FIRST RED** to **POSITIVE** terminal, then **BLACK** to **NEGATIVE** terminal. When disconnecting, **DISCONNECT BLACK** cable first, then **RED**.
- **NEVER** charge a visibly damaged or frozen battery. **ALWAYS** read and follow charger instructions.

782397

FIGO3.3.35

10

Engine Hours

Heat

Spraying

Thermostat

Burner Motor

Ignition

NORTH STAR

Proven Performance
PROSHOT

OPERATING INSTRUCTIONS

STARTING

1. Fill water tank.
2. Connect high-pressure hose and gun.
3. Start engine.
4. Squeeze trigger to remove air from pump.
5. To heat water, turn heat switch ON and set thermostat to desired temperature.

STOPPING

1. Turn thermostat knob OFF.
2. Spray cold water for few minutes.
3. Turn heat switch OFF.
4. Turn engine OFF.
5. Squeeze trigger to relieve pressure.

OFF ON


Heat

Thermostat °F

Always make sure safety labels are in place and in good condition. If a safety label is missing or not legible, order new labels or unsafe operation could result. To order replacement safety labels, call NorthStar ProSHOT Product Support at 1-800-969-7073.

Any Questions, Comments, Problems, or Parts Orders
Call NorthStar ProSHOT Product Support 1-800-969-7073

Safety Labeling – REV. D.3

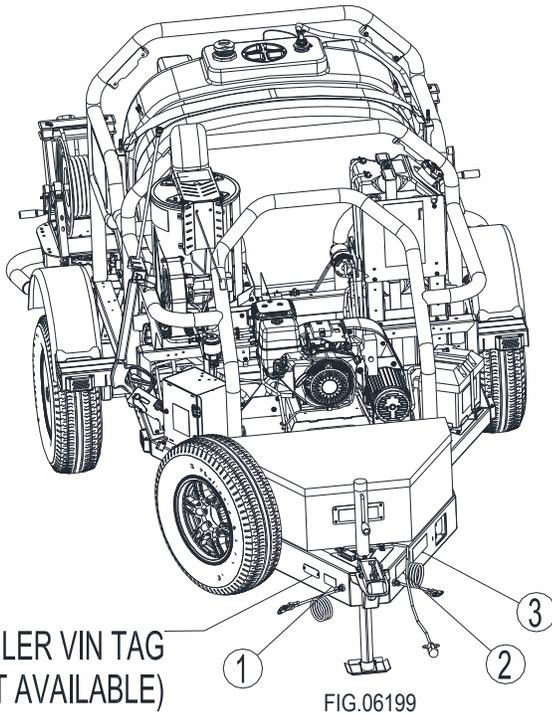

1 **⚠ WARNING**

Trailer can roll if it comes loose from tow vehicle.

The breakaway safety switch requires a connection to a fully charged 12 Volt DC battery that needs to be positioned on the trailer.

If the trailer separates from the tow vehicle the breakaway switch cable will pull the pin out of the switch box and activate the trailer breaks.

- Check condition of battery prior to installation and prior to each trip.
- Attach the breakaway switch cable securely to the tow vehicle.
- Check your breakaway system periodically to insure that wiring and connections are secure. A short or an open circuit can result in a no-brake condition.

2 **MOVING/TOWING INSTRUCTIONS**

Towing trailer:

- Latch coupler securely to a properly rated hitch. See Owner's Manual for hitch requirements.
- Make sure hitched trailer sits level.
- Crank jack to UP position.
- Attach safety cables to the tow vehicle.
- Connect breakaway switch cable.
- Plug in 7-way connector into tow vehicle.
- Check local, state and federal requirements before towing on public roads.

3 **⚠ WARNING**

Be aware that vehicle handling will be affected when towing the filled pressure washer. Pulling a trailer requires special driving skills. Exercise caution to avoid loss of control or pressure washer overturning.





- Keep speed to a minimum so you can maintain control at all times. Reduce speed prior to turns.
- Allow for wider turns and for more distance to stop.
- Avoid any sudden steering maneuvers, starts, or stops that could create sway.
- Slow down and exercise extra caution on rough or sloped terrain in order to reduce risk of rollover.
- Be aware of the added length of the pressure washer.
- Be aware that visibility may be reduced with pressure washer attached. Be extra cautious when backing up or turning.
- If towing on a public road, make sure to comply with all local, state, and federal towing requirements.

See additional safety rules in the Operator's Manual.

| ON-PRODUCT WARNING LABELS | | | |
|---------------------------|--------|-------------------------|------|
| Ref# | Part # | Description | Qty. |
| 1 | 792538 | Decal, Breakaway Switch | 1 |
| 2 | 797512 | Decal, Towing/Moving | 1 |
| 3 | 786633 | Decal, Moving Warning | 1 |

Always make sure safety labels are in place and in good condition. If a safety label is missing or not legible, order new labels or unsafe operation could result. **To order replacement safety labels, call NorthStar ProSHOT Product Support at 1-800-969-7073.**

Special Equipment Safety Features
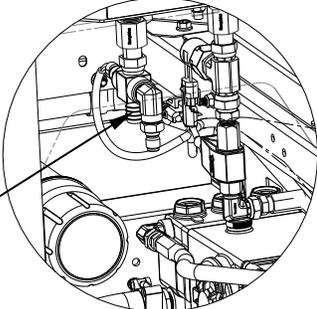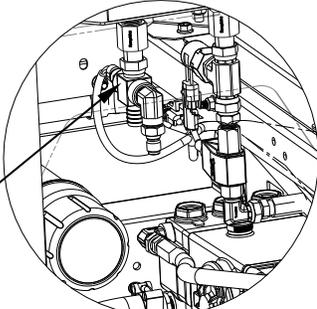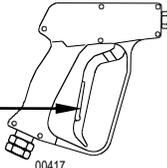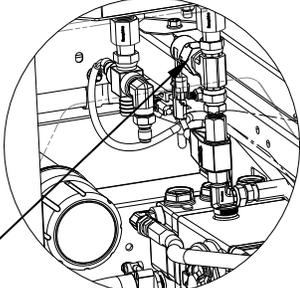
| | |
|--|---|
| <p>High Pressure Safety Device (Rupture Disc)</p> | <p>⚠ WARNING: If the high-pressure safety device ever discharges water, turn the engine off and do not use the machine. The device will no longer function properly. See a dealer or call Product Support at 1-800-969-7073.</p> <p>This unit is equipped with a high pressure safety device, which acts as a safety feature. If the unloader malfunctions, the high pressure safety device will open and relieve excess system pressure.</p>  <p>High Pressure Rupture Disc</p> <p>Fig.06067</p> |
| <p>Temperature Sensor</p> | <p>This unit is equipped with a temperature sensor that measures discharge spray temperature and automatically turns the burner off when the temperature setting is reached or is at maximum preset limit. When the discharge spray temperature drops, the burner automatically reignites.</p>  <p>Temperature Sensor</p> <p>Fig.06067</p> |
| <p>Spray Gun Safety Latch</p> | <p>The spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger actuation.</p>  <p>Safety Latch</p> <p>00417</p> |
| <p>High Pressure Limit Switch</p> | <p>This unit is equipped with a high pressure limit switch, which acts as a primary safety feature. If the system pressure exceeds the set pressure limit this device will stop the burner from firing.</p>  <p>High Pressure Limit Switch</p> <p>Fig.06067</p> |

Assembly & Initial Set-Up Instructions – REV. D.3

STEPS FOR ASSEMBLY / INITIAL SET-UP

- Unpacking & Delivery Inspection
- Connecting Battery
- Ladder Rack to Trailer Assembly Instruction
- Initial Pump & Engine Preparation

Each of these steps will be discussed in detail below:

STEP 1. UNPACKING & DELIVERY INSPECTION

Find and separate the components identified in Fig. 06251 and Fig.06201 – Hardware Bag. Inspect the pressure washer immediately after you receive delivery for missing parts and damage.

- If you have missing or damaged components, contact Product Support at 1-800-969-7073.

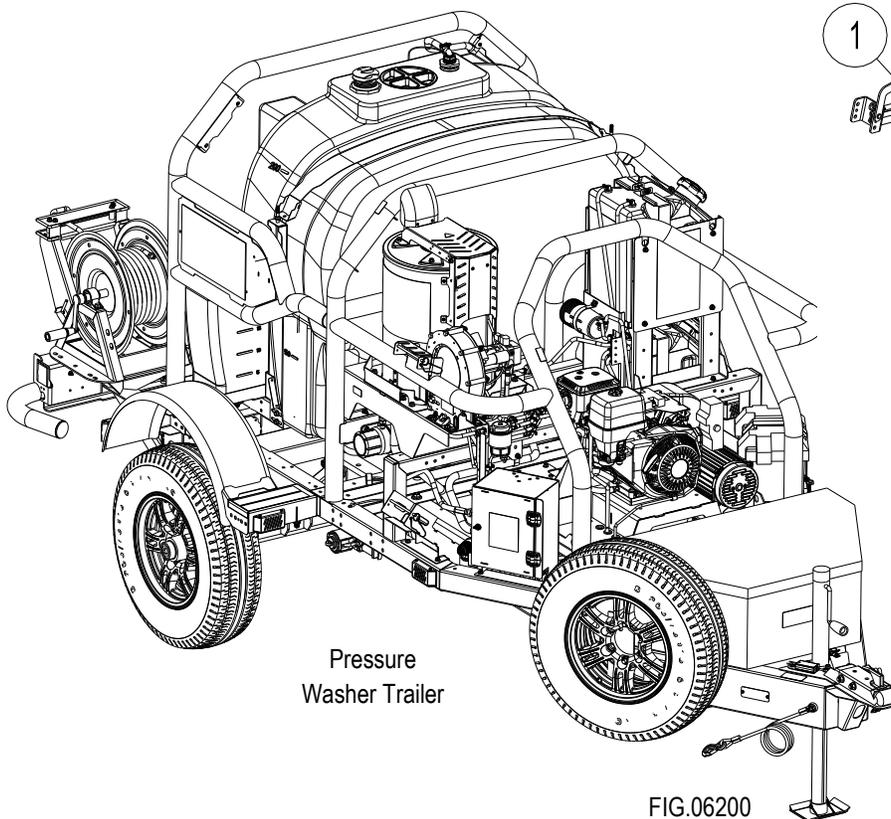


FIG. 06251


Ladder Racks

Ref. #1

- (1) Drivers Side Front,
- (1) Passenger Side Rear

Ref. #2

- (1) Drivers Side Rear,
 - (1) Passenger Side Front
- (Located inside the cardboard box)

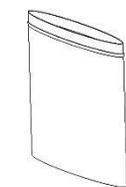

Hardware Bag

Assembly & Initial Set-Up Instructions – REV. D.3

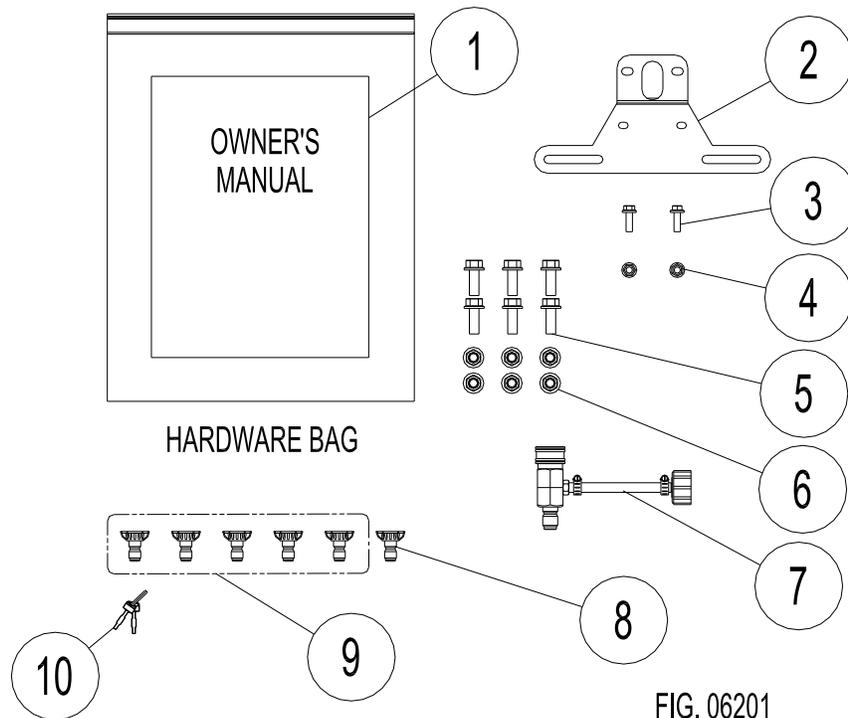


FIG. 06201

| HARDWARE BAG CONTENTS | | | |
|-----------------------|---------------|---|------|
| REF# | Part# | DESCRIPTION | QTY. |
| 1 | N/A | Manual, 157561 | 1 |
| 2 | N/A | Bracket, License Plate | 1 |
| 3 | 82009 | Bolt, 1/4-20 x 3/4" hex head serrated flange | 2 |
| 4 | 82013 | Nut, 1/4-20 serrated flange | 2 |
| 5 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 6 |
| 6 | 82631 | Nut, 3/8-16 hex flange nylon | 6 |
| 7 | N/A | Chemical Injector Assembly | 1 |
| 7.1 | 797316 | Chemical Injector, Quick Connect | 1 |
| 7.2 | 777165 | Hose, 1/4" Braided | .5' |
| 7.3 | 777834 | Clamp, Hose | 2 |
| 7.4 | 797557 | Fitting, 1/4" Flat Seat HB | 1 |
| 7.5 | 777850 | Nut, Swivel, Female Garden Hose | 1 |
| 7.6 | 5232 | Washer, Rubber, Garden Hose | 1 |
| 8 | 778945 | 15°x 3.5/Yellow-Steam Nozzle | 1 |
| 9 | 797878 | 5 Pack Nozzles-#4.0 (See Parts Explosion Skid and Roll Cage for individual part numbers.) | 1 |
| 10 | HC35111880013 | Honda Engine Keys (pair) | 1 |


Assembly & Initial Set-Up Instructions – REV. D.3

STEP 2. LADDER RACK TO TRAILER ASSEMBLY INSTRUCTIONS

- 1) Remove ladder racks from box. Be sure there are 4. There will be (2) front racks and (2) Rear racks.
- 2) Locate (6) bolts and (6) nuts in the hardware bag.
- 3) Using bolts and nuts from the hardware bag install front driver's side and passenger side ladder racks using bottom mount holes as shown in figure 06282.
- 4) Using remaining (2) bolts from the hardware bag install rear passenger side ladder rack using upper mount holes as shown in figure 06282.
- 5) Install rear driver's side ladder rack using upper mount holes as shown in figure 06282. Note you will need to remove and reuse existing nuts and bolts in place for mounting hose clips.


TOOLS REQUIRED:
9/16" SOCKET AND WRENCH
Torque: 27.2 – 34 ft./lbs.

Note: If proper mounting holes were used for the front and rear ladder racks, ladders should be close to parallel with the ground when hung.

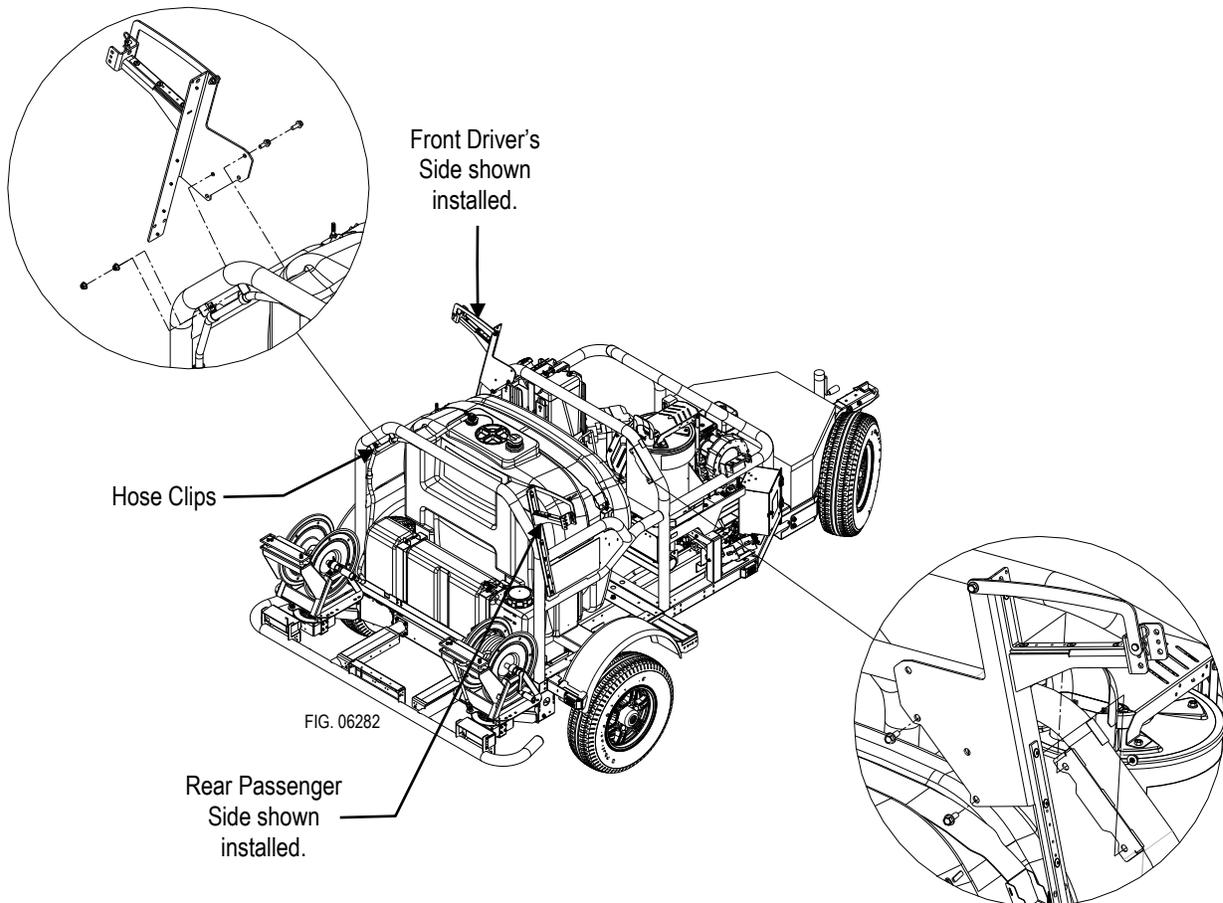

Assembly & Initial Set-Up Instructions – REV. D.3

STEP 3. INITIAL PUMP & ENGINE PREPARATION
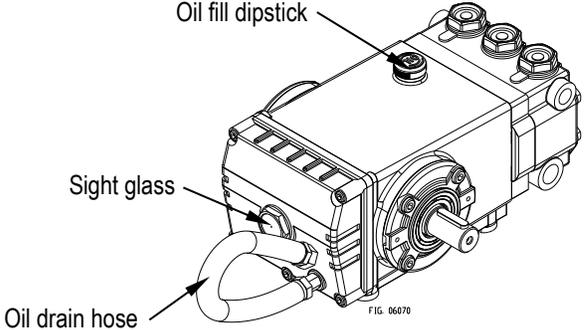
| | |
|--|--|
| <p>Prepare Water Pump</p> | <p>Verify pump oil level.</p> <p>NOTICE: The pump is shipped <u>with</u> oil.</p> <ol style="list-style-type: none"> 1. Verify that oil level is half way up the sight glass (or at the indicator line on the dip stick). 2. If oil level is low, fill with SAE Non-detergent 30wt. oil. 3. Replace oil fill dipstick.  |
| <p>Check Engine Oil</p> | <p>Check the engine oil before starting the pressure washer.</p> <p>NOTICE: The engine is shipped with oil. You must check oil before use.</p> <p>Refer to the engine manual to locate oil-fill port and for instructions on filling. Use the oil grade and quantity specified in the engine manual.</p> |
| <p>Prepare High PSI Hose on Hose Reel</p> | <p>Completely unwrap / unwind the high pressure hose from the hose reel.</p> <p>NOTICE: New hose will “grow” when charged for the first time and should always be charged one time before being wrapped on the reel.</p> |

STEP 4. CONNECTING BATTERY

Unit is supplied with a battery, but not connected for shipping. The engine will not run unless the battery is connected.

Follow the steps below for connecting and disconnecting the battery.

If replacing the existing battery a **12-volt standard, top-post mount, automotive battery (Group 75/86) with a minimum 24 amp-hour rating** should be used. The battery should be installed in the protective battery box located near the engine. The inside dimensions of the battery compartment are 11-1/8”L x 7-3/4”W x 10-1/8”H.



⚠ WARNING: Batteries are hazardous because they contain caustic acid, can emit explosive gases, and can cause electric shock. Caution must be exercised when making connections to a battery to avoid shock and contact with the acid, and to prevent any sparking that could lead to an explosion. ALWAYS follow the general battery safety rules and instructions listed below.

| | |
|--|---|
| <p>General Battery Safety Rules</p> | <ul style="list-style-type: none"> • ALWAYS use eye protection and protective clothing when handling batteries. • NEVER smoke or work near sparks or other sources of ignition. • NEVER touch both battery terminals at the same time with your hand or any other non-insulated tools. • If battery acid contacts skin or clothing, flush immediately with water and neutralize with baking soda. |
| <p>Connecting the Battery</p> | <p>Always connect the cables in the following sequence to avoid possible shock:</p> <ol style="list-style-type: none"> 1) Find the battery cables located inside the battery compartment. 2) Connect the red cable to the positive (+) terminal of the battery. 3) Then connect the black cable to the negative (-) terminal of the battery. |
| <p>Disconnecting the Battery</p> | <p>Always disconnect cables in the following sequence to avoid possible shock:</p> <ol style="list-style-type: none"> 1) First, disconnect the black cable from the negative (-) terminal of the battery. 2) Next, disconnect the red cable from the positive (+) terminal of the battery. 3) Remove the battery from the battery compartment. |

Moving & Towing the Pressure Washer

⚠ DANGER

The filled pressure washer is heavy. It can crush and cause serious injury if it rolls out of control or tips over.

- Always keep the jack cranked down to help balance the trailer when it is not connected to a vehicle hitch.
- Follow all the instructions below for safely connecting and towing the pressure washer.

CONNECTING TRAILER AND TOWING

Inspect Trailer

Always inspect the trailer before hitching it to your vehicle.

- 1) Check and be sure tires are fully inflated and in good repair. See tire sidewall for recommended pressure.
- 2) Check to make sure that trailer is in safe working condition. Make sure all nuts, bolts, and connections are tight. If a part needs replacement, only use parts that meet the manufacturer's specifications.
- 3) Check coupler and latch be sure it's working properly.
- 4) Check to make sure coupler and ball size are the same.
- 5) Check wheel lug nuts to be certain they are tight.
- 6) Check all trailer lighting to insure they are in proper working order.

⚠ WARNING:

- Do not over-inflate tires. Serious injury can occur if tire explodes.
- Damaged or missing components, or replacement parts that do not meet specifications, may result in a safety hazard or poor operation of the trailer.

Attach Trailer To Hitch

Attach trailer to vehicle hitch.


Trailer and tongue weights listed in the specification section of the manual. Ensure the towing vehicle is properly equipped to handle the load.

- 1) Attach trailer coupler to vehicle's class 3 or higher hitch with 2" ball (only).
- 2) Ensure trailer is level, with A-frame tow bar parallel to the ground. You may need to adjust your coupler height or purchase the proper hitch to achieve the correct tongue height so trailer is level.


⚠ WARNING: Vehicle handling may be adversely affected while towing if the trailer is not level.

- 3) Adjust coupler to ball by raising locking lever and turning lock nut with fingers. Proper adjustment is obtained when coupler is as tight as possible on ball and locking lever can still be opened and closed.
- 4) Lock lever closed to secure the attachment.




An optional locking pin or padlock may be inserted in the locking lever hole for extra security.

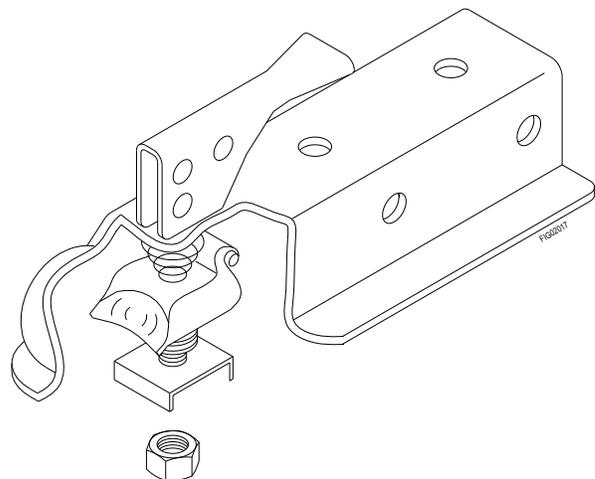


Moving & Towing the Pressure Washer
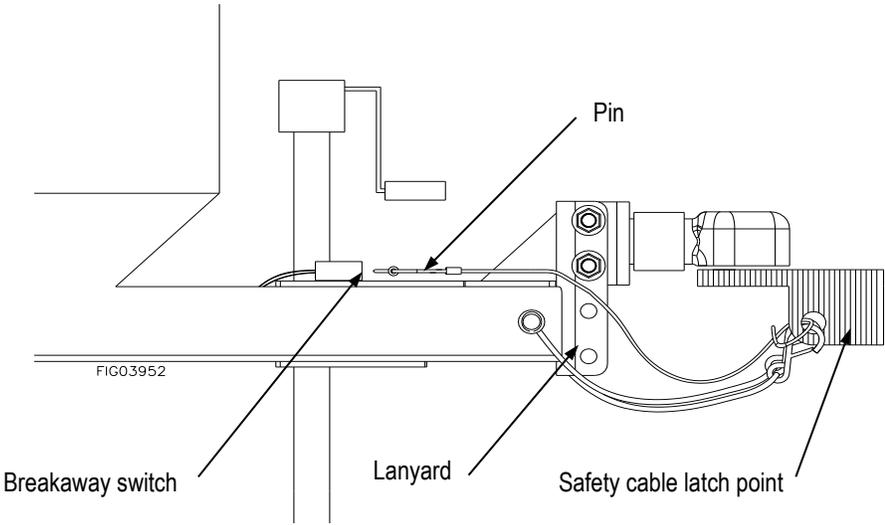
| | |
|-------------------------------------|--|
| Attach Safety Cables | <p>Two safety cables must be used while towing.</p> <p>Cross safety cables under the coupler, allowing only enough slack for vehicle turns.</p> |
| Route Breakaway Switch Cable | <p>Route breakaway switch cable.</p> <p>The breakaway switch is a device that will activate the trailer brakes should the trailer become disconnected from the tow vehicle. A cable is connected to a pin inserted into the breakaway switch. You must route this cable so that it will pull the pin out of the breakaway switch if the trailer begins to separate from the tow vehicle, which in turn will activate the trailer brakes.</p>  <ol style="list-style-type: none">1) Pull the pin with its attached cable out of the breakaway switch. Note: The other end of the cable is a terminal loop.2) Route the pin and its attached cable through the safety cable latch-point on the tow vehicle, and then back through its own terminal loop.3) Reinsert the pin into the breakaway switch. <p>Always keep the pin inserted in the breakaway switch, even when not towing. Failure to have the pin inserted will drain your pressure washer's battery. Never use the breakaway switch as a parking brake.</p> <p>Note: An extra pin is attached to the lanyard.</p> |




Moving & Towing the Pressure Washer
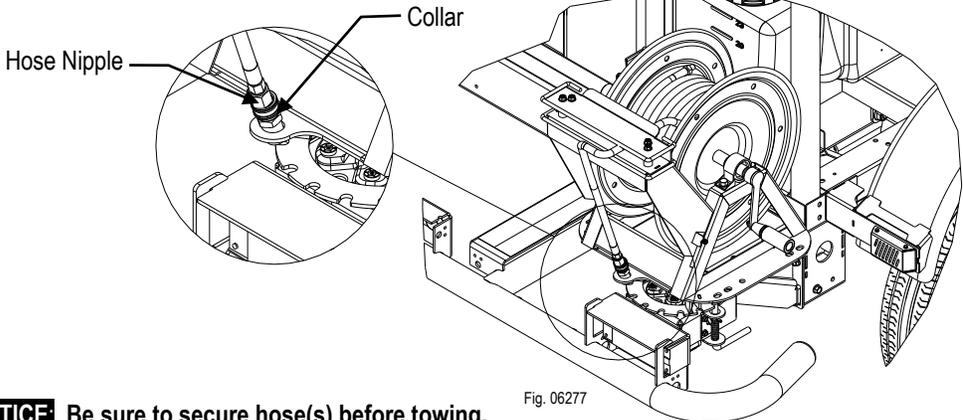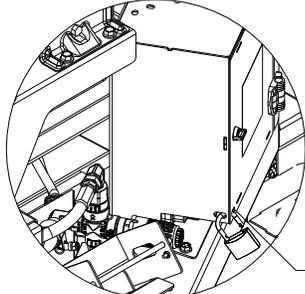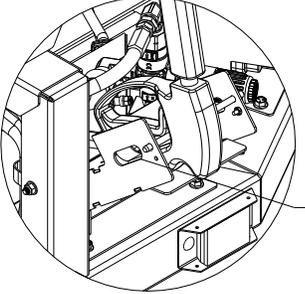
| | |
|-----------------------------------|--|
| <p>Secure Hoses</p> | <p>Each high pressure hose reel is equipped with a quick coupler to secure hoses to hose reel mounts. The low pressure hose reel mount is equipped with a 3/4" garden hose thread.</p> <p>Quick connect hose nipple into the collar on the hose reel mount. See figure 06277.</p>  <p>NOTICE: Be sure to secure hose(s) before towing.</p> <p style="text-align: right;">Fig. 06277</p> |
| <p>Anti-Theft Features</p> | <p>This trailer is designed for easy use of cable locks and/or padlocks to secure your items.</p> <ul style="list-style-type: none"> • Lockable hitch coupler. Using an optional locking pin or a padlock. • Lockable spare tire mount. Using an optional lockable lug or use a cable lock. • Lockable toolbox. Key is included. • Lockable control box/nozzle holder. Features are added for the use of a padlock. • Lockable spray gun mount. Features are added for the use of a cable lock. • Lockable ladder rack. Features are added for the use of a padlock. |
| <p>Secure Control Box</p> | <p>The control box housing has been designed with slots for the use of a padlock.</p>  <p style="text-align: right;">Slots for padlock use.</p> <p style="text-align: center;">FIG.06305</p> |
| <p>Secure Spray Gun</p> | <p>Secure spray gun in gun mount using the (2) detent pins before towing. The gun mount has been designed with added slots to allow the use of a cable lock. See figure 06311.</p>  <p style="text-align: right;">Slots for padlock use.</p> <p style="text-align: center;">FIG.06311</p> |

Moving & Towing the Pressure Washer
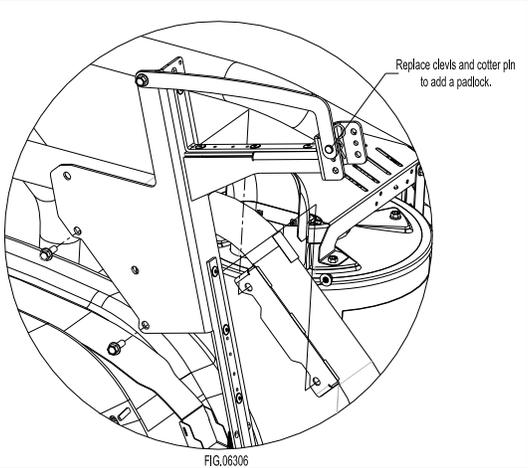
| | | |
|-------------------------------------|---|--|
| <p>Ladder</p> | <p>If you are going to install a ladder on the ladder racks, pull cotter pin and clevis pin to open ladder lock. (See Parts Explosion Ladder Rack to locate the ladder lock.) Replace clevis pin and cotter pin or you can use a paddle lock for theft prevention. A rubber strap or other strap is recommended to prevent ladder from moving around during transport.</p> |  |
| <p>Plug In Lights/Brakes</p> | <p>Plug 7-way electrical pin connector into vehicle.</p> | |
| <p>Raise The Jack</p> | <p>Always crank the jack into the UP position before towing.</p> | |
| <p>Tow</p> | <p>Tow the pressure washer to your desired work location. When towing, always adhere to the following safety rules.</p> <ul style="list-style-type: none"> • Read vehicle instructions. Review towing safety instructions in your towing vehicle manual. • Driving skills. Special attention and driving skills are necessary for towing any type of trailer. • Vehicle handling. Be aware that vehicle handling will be affected when towing the filled pressure washer. Exercise caution to avoid loss of control or pressure washer overturning: <ul style="list-style-type: none"> ○ Keep speed to a minimum so you can maintain control at all times. Reduce speed prior to turns. ○ Allow for wider turns and for more distance to stop. ○ Avoid any sudden steering maneuvers, starts, or stops that could create sway. • Rough or sloped terrain. Slow down and exercise extra caution on rough or sloped terrain in order to reduce risk of rollover. Pick the most level route possible when transporting across fields. Drive up and down slopes that cannot be avoided, rather than across. Use a vehicle equipped with a Roll over Protection System (ROPS) if you will be operating on non-level terrain. • Added length. Be aware of the added length of the pressure washer. • Reduced visibility. Be aware that visibility may be reduced with pressure washer attached. Be extra cautious when backing up or turning. • Ride / transport. Never ride or transport cargo on the pressure washer. • On public roads. If towing on a public road, make sure to comply with all local, state, and federal towing requirements. It is the sole responsibility of the purchaser to obtain licensing, trailer lights, safety chains, or signage as needed to comply. • Under the influence. Never tow or operate this pressure washer while under the influence of alcohol, drugs, or medication. | |
| <p>If Leaving Unattended</p> | <p>Turn off the vehicle and block the trailer wheels if leaving the pressure washer unattended.</p> | |

Moving & Towing the Pressure Washer
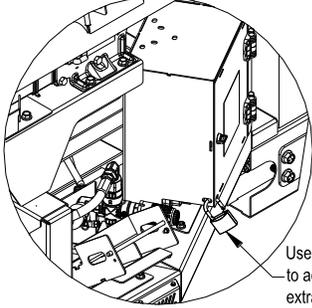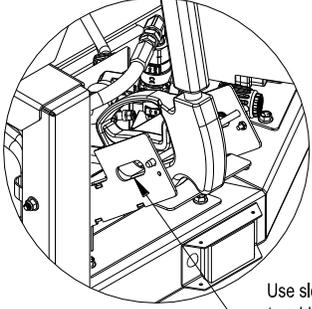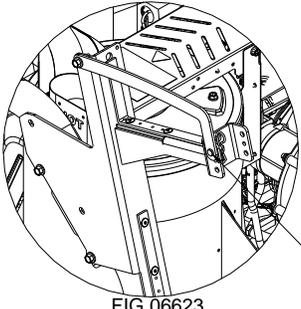
| SECURITY FEATURES | |
|----------------------------|--|
| Anti-Theft Features | <p>This skid is designed for easy use of cable locks and/or padlocks to secure your items.</p> <ul style="list-style-type: none"> • Lockable hitch coupler. Using an optional locking pin or a padlock. • Lockable spare tire mount. Using an optional lockable lug or use a cable lock. • Lockable control box/nozzle holder. Features are added for the use of a padlock. • Lockable spray gun mount. Features are added for the use of a cable lock. • Lockable ladder rack. Features are added for the use of a padlock. |
| Secure Control Box | <p>The control box housing has been designed with slots for the use of a padlock.</p>  <p style="text-align: right;">Use slot provided to add a padlock for extra security.</p> |
| Secure Spray Gun | <p>Secure spray gun in gun mount using the (2) detent pins before towing. The gun mount has been designed with added slots to allow the use of a cable lock.</p>  <p style="text-align: right;">Use slots provided to add a cable lock & padlock for extra security.</p> <p style="text-align: center;">FIG.06311</p> |
| Ladder Rack | <p>If you are going to install a ladder on the ladder racks, pull cotter pin and clevis pin to open ladder lock. (See Parts Explosion Ladder Rack to locate the ladder lock.) Replace clevis pin and cotter pin or you can use a paddle lock for theft prevention. A rubber strap or other strap is recommended to prevent ladder from moving around during transport.</p>  <p style="text-align: right;">Remove Cotter Pin & Celvis Pin to add a padlock for extra security.</p> <p style="text-align: center;">FIG.06623</p> |

Before Each Use

Follow the steps below prior to each use of the pressure washer.

STEPS TO FOLLOW BEFORE EACH USE

- Check Equipment
- Add fuels(s)
- Select a Suitable Worksite

STEP 1. CHECK EQUIPMENT

| | |
|-----------------------------|--|
| Check/Add Pump Oil | <p>Check/add pump oil. CAUTION: Never run the pump without sufficient lubrication!</p> <ol style="list-style-type: none"> 1) Check oil level. Verify that oil level is half way up the sight glass (or at the indicator line on the oil fill dipstick). 2) If oil level is low, fill using SAE Non-detergent 30wt. oil. 3) Replace oil fill dipstick. |
| Check/Add Engine Oil | <p>Check the engine oil level and add oil as needed. Use the recommended oil type for your engine and expected ambient conditions. <i>(See engine owner's manual for oil type and capacity, and more detailed oil check/fill instructions.)</i></p> <p>▲ WARNING: Burn hazard Never open oil port while engine is running. Hot oil can spray over face and body.</p> <p>NOTICE:</p> <ul style="list-style-type: none"> • Low oil shutdown feature prevents the engine from starting without sufficient oil. • Engine is shipped <u>with</u> oil. You must check oil before first use. |
| Inspect Spray System | <p>Always inspect spray system for damage and leaks before each use.</p> <p><u>DO NOT START PRESSURE WASHER UNTIL ALL NEEDED REPAIRS HAVE BEEN COMPLETED.</u></p> <p>▲ WARNING: High pressure fluid injection hazard</p> <p>High-pressure fluid discharge from leaks (even pin-sized) or ruptured components can pierce skin and inject fluid into the body. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene, and possibly loss of limb.</p> <ul style="list-style-type: none"> • Never use a finger or skin to check for leaks. • Never operate machine with damaged or missing hoses/parts. • Never attempt to repair a high-pressure hose or component – Always replace it with a part that is rated at or above the pressure rating of this machine. <ol style="list-style-type: none"> 1) Check hoses, fittings, wand, trigger gun, and connections for signs of wear, cracks, looseness, or leaks. Replace as required. 2) Check and clean the nozzle orifice. 3) Clean inlet filter (see Maintenance & Repair). |

Before Each Use

| | |
|--|---|
| <p>Inspect Fuel System</p> | <p>Always inspect (engine and burner) fuel systems and check for leaks BEFORE starting pressure washer.</p> <p><u>DO NOT START PRESSURE WASHER UNTIL ALL NEEDED REPAIRS HAVE BEEN COMPLETED.</u></p> <p>⚠ WARNING: Fuel leak hazard</p> <p>Gasoline and burner fuels are highly explosive and fuel leaks can result in fire or explosions. You can be burned and seriously injured if the fuel system is not properly hooked up or there is a fuel leak when you start the engine.</p> <p>Inspect the entire fuel system. Look for:</p> <ul style="list-style-type: none"> • signs of leaks or deterioration • chafed or spongy fuel hose • loose connections • loose or missing fuel hose clamps • damaged gasoline tank, or a defective gasoline shut-off valve |
| <p>Clean Inlet Filter</p> | <p>Clean the water inlet filter before each use. For instructions see section "Maintenance & Repair".</p> |
| <p>Perform Other Scheduled Maintenances as Needed</p> | <p>Make sure that any other regular maintenance has been performed as prescribed in this manual in the "Maintenance & Repair" section.</p> <ol style="list-style-type: none"> 1) Refer to the engine's owner's manual for engine maintenance instructions. 2) Make sure battery is charged. Charge as needed according to your battery manufacturer's instructions. |

STEP 2. ADD FUEL(S)

⚠ WARNING: Fuel fire/explosion hazard

Gasoline is highly flammable and explosive. Burner fuels are combustible at warm temperatures. Heat, sparks, and flames can ignite fuel vapors, which can become widespread during fueling. A flash fire and/or explosion could result and cause serious injury or death. Always use extreme care when handling fuels. Carefully follow all instructions to avoid the following conditions which could result in fuel ignition:

- gas vapor collection inside enclosures
- static electric sparks
- sparks from electric wiring, batteries, or running engines
- sources of heat (such as a hot engine, burner, or exhaust)
- open flames, including pilot lights



Always follow these general safety rules when fueling:

- 1) Turn pressure washer off and allow it to cool for at least two minutes before removing any fuel cap.

⚠ WARNING: A running or still-hot engine or burner is hot enough to ignite fuel.

- 2) Fill fuel tank OUTDOORS – never indoors. Fuel vapors can ignite if they collect inside and enclosure and explosion can result.
- 3) Stay away from all sources of heat, sparks, and flames. Do not smoke.
- 4) Never pump fuel directly into the gas tank or burner at a gas station – it could cause a static electric spark.

Before Each Use

Follow these steps to avoid static electric sparking during fueling:

- Use an approved portable container to transfer fuel to the pressure washer's tank. (A portable container made of metal or conductive plastic is preferred because it dissipates charge to ground more readily.)
- Always place container on the ground to be filled. Never fill the portable gas container while it is sitting inside a vehicle, trailer, trunk, or pick-up truck bed.
- Dissipate static charge from your body before beginning the fueling process by touching a grounded metal object at a safe distance from fuel sources.
- Keep nozzle in contact with container while filling. Do not use a nozzle lock-open device.

Clean up fuel spills /splashes immediately.

- If possible, move the pressure washer away from spilled fuel on the ground.
- Wipe up spilled fuel and wait 5 minutes for excess fuel to evaporate before starting engine.
- Fuel soaked rags are flammable and should be disposed of properly.
- If fuel is spilled on your skin or clothes, change clothes and wash skin immediately.

| | |
|---|---|
| <p>Fill Engine Fuel Tank</p> | <p>Check the gasoline tank level. If needed, fill tank with fresh unleaded gasoline from a portable container:</p> <ol style="list-style-type: none"> 1) Remove engine gas cap. 2) Add gasoline through the fill opening: <ul style="list-style-type: none"> - Use only a <u>UL-approved portable gasoline container</u> to transfer the gasoline to engine's tank. - Do NOT overfill the gasoline tank. Allow at least 1/2" of empty space the fill neck to allow for fuel expansion. 3) Replace gas tank cap securely before starting engine. 4) Store extra fuel in a cool, dry place in a UL-approved, tightly sealed container. <div data-bbox="1166 888 1382 1157" style="float: right; border: 1px solid black; padding: 5px; text-align: center;"> <p>WARNING</p> <p>FEDERAL LAW prohibits the use of E15 in small engines. Per the EPA, E15 should ONLY be used in 2001 and newer passenger vehicles.</p>  </div> <p style="text-align: right;">below</p> |
| <p>Fill Burner Fuel Tank (If Planning To Use Heated Water)</p> | <p>If you are planning to use heated water, fill burner fuel tank with #1 or #2 diesel, B5 or lower biodiesel, kerosene, or fuel oil.</p> <ol style="list-style-type: none"> 1) Remove burner fuel cap. 2) Add fuel through the fill opening. Do not overfill. Allow at least 1/2" of empty space below fill neck to allow for fuel expansion. 3) Replace fuel cap securely before starting engine. 4) Wipe any excess fuel from unit before starting. |

Before Each Use

STEP 3. SELECT A SUITABLE OUTDOOR WORKSITE

Before using the pressure washer, you must understand the criteria for selecting a suitable location for operation. Note that this pressure washer is for OUTDOOR USE only.

⚠ WARNING: You must choose a suitable site for operating your pressure washer to avoid equipment damage and/or injury and possible death from carbon monoxide poisoning, fire/explosion, uncontrolled equipment movement/tip over, or slips and falls. Choose a site that meets all of the following six criteria:

- 1) OUTDOORS only, and away from all building windows and air intakes.
- 2) Where no flammable vapors, dusts, and gases are present.
- 3) Where there is adequate, unobstructed ventilation airflow.
- 4) With adequate clearance from combustible materials.
- 5) On a firm, level, heat-resistant surface with good drainage.
- 6) If placed inside a truck bed, or on a trailer ensure skid is secured and properly grounded. To properly ground the skid, see the Assembly & Initial Set-Up instructions.

Details regarding each of these criteria are provided below.

| | |
|--|--|
| <p>Outdoor Use Only</p> | <p>⚠ DANGER: Carbon monoxide poisoning hazard</p> <p>Exhaust fumes from both the engine and the burner contain carbon monoxide (CO), a poisonous gas you cannot see, smell, or taste. The CO generated by the pressure washer can rapidly accumulate, even in areas that appear to be well-ventilated, resulting in dangerous and fatal concentrations within minutes. Follow the directions below for choosing a location to operate your pressure washer in order to avoid carbon monoxide poisoning.</p> <p>The location you choose to operate the pressure washer must be OUTDOORS and away from all building air intakes.</p> <ul style="list-style-type: none"> • Never run the pressure washer in an enclosed or partially enclosed location such as a building, garage, barn, shed, or house. <i>These spaces can trap poisonous gases. Running a fan or opening windows will not provide adequate ventilation to prevent dangerous CO build-up.</i> • Only use the pressure washer outdoors and far away from open windows, doors, and building or vehicle vents. • Place the pressure washer so that the exhaust fumes will not be directed towards people or building air intakes. • Ensure that working, battery-operated or battery back-up carbon monoxide alarms are used in any dwelling/structure that is in close proximity to the running pressure washer. • Note that this pressure washer is NOT designed or approved for use in vehicles or marine applications. Never run the pressure washer inside RVs, other vehicles or boats. <p>⚠ WARNING: Never attempt to attach ductwork to the engine muffler or burner exhaust to allow for installation inside an enclosure. This could cause hot air deflection, heat build-up, and increased exhaust back-pressure, resulting in possible exhaust leakage or overheating and damage to the pressure washer.</p> |
| <p>Stay Away From Combustible Dust, Liquids or Vapors</p> | <p>Do not locate and use the pressure washer in the presence of flammable vapors, dust, gases, or other potentially combustible materials.</p> <p>The burner is an open flame, which can ignite airborne dusts and flammable vapors. Operate only where open flames and torches are permitted.</p> |

Before Each Use

| | |
|---|---|
| <p>Be Sure to Have Adequate Airflow</p> | <p>The pressure washer needs adequate, unobstructed flow of air to allow for proper combustion and adequate cooling.</p> <p>Proper combustion can only be obtained when there is a sufficient supply of oxygen available for the amount of fuel being burned. Cooling ventilation is required to prevent overheating of the pressure washer and possible fire.</p> <ul style="list-style-type: none"> • Situate so there is adequate clearance around pressure washer to allow for airflow – at least 7 feet from any non-combustible wall or obstruction. • Never place any objects against or on top of the pressure washer. • Do not operate with a tarp, blanket, or cover surrounding the pressure washer. |
| <p>Have Clearance for Hot Exhaust</p> | <p>The exhaust gas from your pressure washer is extremely hot and can cause combustible materials to catch on fire.</p> <ul style="list-style-type: none"> • Make sure both the engine exhaust and burner exhaust are at least 7 feet from all combustible materials and buildings/structures during operation. • Equip the engine with a spark arrestor if the pressure washer will be used near any ignitable forest, brush, or grassy land. (See the engine manual provided with this equipment to determine if the engine is already equipped.) Make sure you comply with applicable local, state, and federal codes. • Keep a fire extinguisher rated "ABC" nearby. Keep it properly charged and be familiar with its use. |
| <p>Have a Firm, Level Heat-Resistant Surface</p> | <p>The pressure washer should be positioned on a firm, level (less than 3 degree slope), heat-resistant surface with good drainage.</p> <p>Ensure that the pressure washer sits level and will not slide or shift during operation. If applicable, block the pressure washer's wheels to prevent movement. Surface should be heat resistant if you will be using the burner for heated spray.</p> |

Operating the Pressure Washer

After you have checked and fueled the equipment and positioned it in a suitable worksite, it is time to start your pressure washer. The following are the procedures necessary for safe, successful operation of your pressure washer.

⚠ WARNING

Carefully read and follow all instructions and safety information for using this pressure washer. Improper use or maintenance of the pressure washer can result in **serious injury or death** to the operator or bystanders from:

- Carbon monoxide poisoning
- Skin/eye injury from high pressure spray
- Fire/explosion
- Burns
- Electric shock
- Chemical exposure
- Slips/falls
- Flying objects/debris

OPERATING INSTRUCTIONS

- Connect hoses, water supply, and spray nozzle
- Spraying
- Set up for chemical spray (if desired)
- Stopping

Each of these procedures will be discussed in detail below.

STEP 1. CONNECT HOSES, WATER SUPPLY, AND SPRAY NOZZLE

| | |
|--|---|
| <p>Position Pressure Washer For Use</p> | <p>Place pressure washer in a suitable location for use, as directed in the “Before Each Use, Step 3: Select Suitable Outdoor Worksite” section of this manual. A suitable location is:</p> <ul style="list-style-type: none"> • OUTDOORS only, away from all building air intakes. • Where no flammable vapors, dusts, and gases are present. • Where there is adequate, unobstructed ventilation airflow. • With adequate clearance from combustible materials. • On a firm, level, heat-resistant surface with good drainage. <p>⚠ DANGER: Carbon monoxide poisoning hazard. Exhaust fumes from both the engine and the burner contain carbon monoxide (CO), a poisonous gas you cannot see, smell, or taste. The CO generated by the pressure washer can rapidly accumulate, even in areas that appear to be well-ventilated, resulting in dangerous and fatal concentrations within minutes. ONLY run pressure washer OUTDOORS and at least 20 feet from the home, away from windows, vents and air intakes, to allow proper ventilation. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. NEVER run pressure washer inside any enclosed or semi-enclosed spaces, including homes, garages, basements, sheds, boxes, RVs, or boats. These spaces can trap poisonous gases, EVEN if you run a fan or open windows.</p> |
| <p>Fill Water Tank</p> | <p>Ensure the water in your tank is clean. Debris can cause excess pump wear and reduce performance.</p> <ol style="list-style-type: none"> 1) Use low pressure hose with garden hose to fill tank. 2) Fill from the drain tank. 3) Fill from top of tank. |

Operating the Pressure Washer

Attach Gun to the High Pressure Hose

Attach the high pressure hose to the pressure washer's water outlet.

⚠ WARNING: NEVER operate this pump with components (such as hose, connections, and spray gun) rated for lower pressure and/or temperature limits than the machine's maximum rated pressure and temperature, or component could rupture and cause serious personal injury from escaping high pressure fluids.

- 1) See "Component Identification" section of this manual for location of the pressure washer's water outlet.
- 2) Your pressure washer hose is equipped with quick couplers. Simply pull the collar back and push the coupler onto the water outlet nipple (figure 2a).

The collar should slide over the ball bearings.

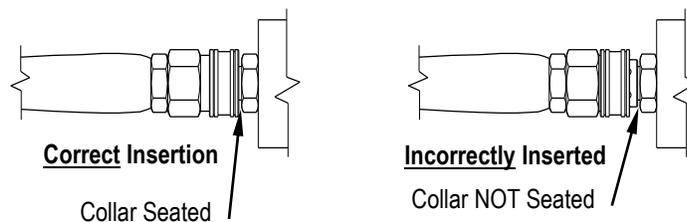


Figure 2a

- 3) Release the collar, making sure it springs back and re-seats to its original (non-retracted) position (figure 2b). Check the connection by pulling on the hose to ensure a positive connection.

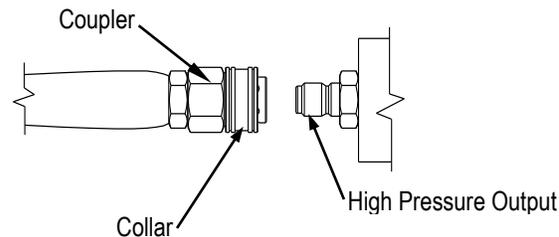


Figure 2b

Operating the Pressure Washer

Select the Spray Nozzle

Your pressure washer is equipped with five high-pressure nozzles and one low-pressure nozzle. Generally, the wider the spray angle of the nozzle, the lower the spray pressure produced. Select the appropriate nozzle for the job based on the following table:

| Color of Nozzle | Size | Spray Angle | Used For |
|--------------------|------|-------------|------------------------|
| Red | 4.0 | 0° | Highest Impact |
| Yellow | 4.0 | 15° | Tough Stains/Stripping |
| Green | 4.0 | 25° | General |
| White | 4.0 | 40° | Light Cleaning |
| Black-Low pressure | 40.0 | 65° | Chemicals |
| Yellow | 3.5 | 15° | Steam |

CAUTION: You must use the low pressure black nozzle for spraying chemicals.

Attach the Nozzle

Attach nozzle to the spray gun.

⚠ WARNING: DEPRESSURIZE FIRST

Any time you remove/install/change a nozzle, you must depressurize hose line by squeezing the spray gun trigger while the engine is off. Even if the engine has been off for a long period of time, the hose may remain dangerously pressurized.

- 1) Make sure the engine is off and the hose line depressurized.
- 2) To install the nozzle, pull the collar back and twist the nozzle firmly into the coupler on the end of the wand (figure 3a).

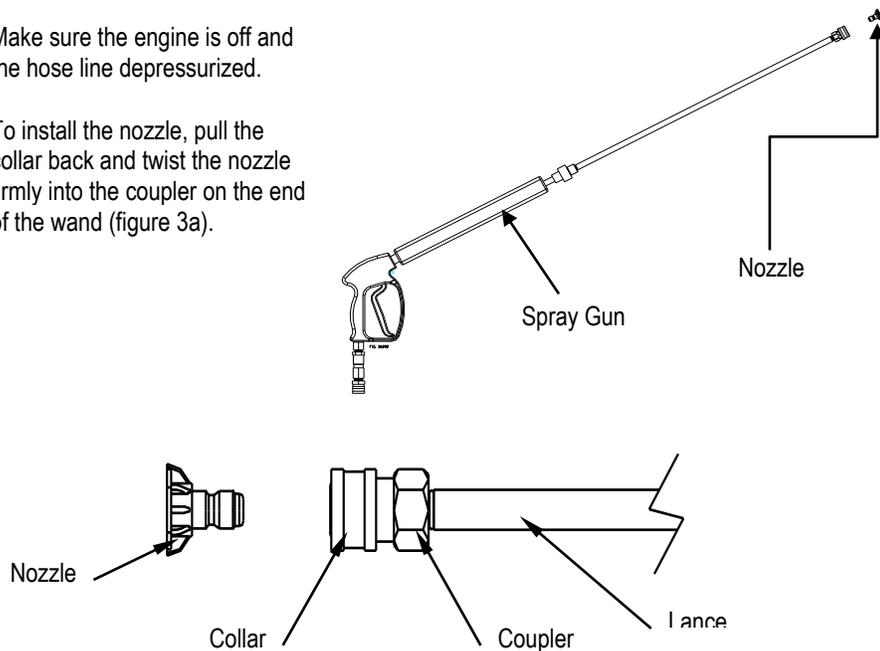


Figure 3a

- 3) Release the collar, making sure it springs back and re-seats to its original (non-retracted) position (figure 3b). Check the connection by pulling on the nozzle to ensure a tight connection -- if correctly inserted, nozzle will rotate but not pull out.

Operating the Pressure Washer

⚠ WARNING: Make sure the nozzle is correctly inserted. Sprayer nozzle can become a projectile and cause serious personal injury or property damage if not properly connected to the spray gun. Do not attempt to use different types of nozzles that may not fit the coupler.

Figure 3b

STEP 2. SET UP FOR CHEMICAL SPRAY (IF DESIRED)

Using the proper cleaning chemical for the application can speed up cleaning jobs tremendously.

Your pressure washer is equipped with a chemical tank and chemical injector, which siphons cleaning chemicals into a low-pressure washer spray downstream of the pump. Adequate suction pressure is created *only when the low pressure (black) spray nozzle* is used.

The introduction of cleaning chemicals via the chemical injector affords the following advantages:

- It protects the pump from damage because no chemical passes through the pump.

CAUTION: Certain chemicals, such as bleach or those containing muriatic acid, will cause pump damage if introduced upstream through the pump's water inlet.

- It mixes the cleaning chemical into a low pressure spray. Cleaning chemicals applied under low pressure adhere better to the surface being cleaned, allowing the formula time to react and remove dirt more effectively.

NOTICE: An external chemical injector pump is not recommended for use with this pressure washer.

⚠ WARNING: Chemical Spraying

- Never spray acids, corrosives, or abrasive or flammable liquids. Breathing hazards, surface burns/corrosion, or fire/explosion could result.
- Follow the chemical manufacturer's label instructions for proper use and handling of the chemical. Understand all safety hazards and first aid for all chemicals being used. Always wear protective gloves when handling and cleaning with chemicals, and wear other protective gear as directed by chemical manufacturer. Always dispose of hazardous fluids per local, state, and national guidelines.

Acquire Cleaning Chemicals

Use only NorthStar pressure washer chemicals or chemicals specifically formulated for use with pressure washers.

CAUTION: Non-approved chemicals can damage pressure washer components (seals, wand, hoses, pump, etc.) and be harmful to the environment. It could also void the warranty.

Operating the Pressure Washer

| | |
|---|---|
| <p>Prepare for Chemical Spray (If you plan on using)</p> | <p>Prepare the pressure washer for chemical spraying using the following steps:</p> <ol style="list-style-type: none"> 1) Prepare the chemical cleaning solution as recommended by the chemical label required for the job. This chemical injector is a 9:1 ratio. Place into chemical tank located on back of trailer. <p>NOTICE: The chemical injector is not adjustable and will mix the chemical solution into the spray. It is designed to be removable for added pressure.</p> <ol style="list-style-type: none"> 2) Connect garden hose coupler to coupler on chemical injector. 3) Turn ball valve to open position on chemical tank. 4) Use chemical nozzle and spray. |
|---|---|

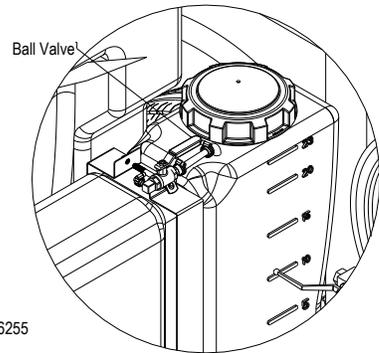
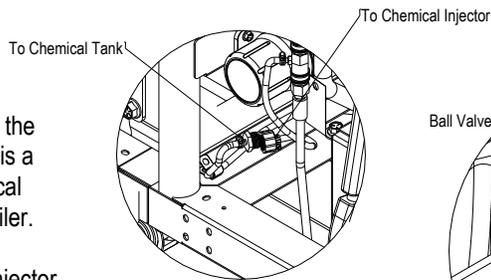


Fig.06255


STEP 3. SPRAYING

| | |
|--|---|
| <p>Safety Rules for Operation</p> | <p>Before starting the pressure washer, review the following general safety rules for operation:</p> <p style="text-align: center;"><u>CONDITIONS FOR USE</u></p> <p><u>Know how to stop.</u> Be thoroughly familiar with proper use of the equipment and all controls and connections. Know how to stop the pressure washer and depressurize system quickly if needed (see "Step 4. Stopping").</p> <p><u>Instruct all operators.</u> The pressure washer's owner must instruct all operators and potential renters in safe set-up and operation. Do not allow anyone to operate the pressure washer who has not read the owner's manual and been instructed on its safe use.</p> <p><u>Adult control only.</u> Only trained adults should set up and operate the pressure washer. Do not let children operate. Pressure washers can generate forces greater-than children can control and require judgment beyond what can be expected of children.</p> <p><u>Under the influence.</u> Never operate, or let anyone else operate, the pressure washer while fatigued or under the influence of alcohol, drugs, or medication.</p> <p><u>Safety equipment / controls in place.</u> Do not operate the pressure washer unless all safety covers, guards, and barriers are in place and in good working order, and all controls are properly adjusted for safe operation.</p> <p><u>Damaged.</u> Do not operate the pressure washer with damaged, missing, or broken parts. Never attempt to repair a high pressure hose or component. Always replace it with a part that is rated at or above the pressure rating of the machine.</p> <p><u>Modifications.</u> Do not modify the pressure washer in any way or deactivate any safety device. Do not change or add to fuel tank, fuel lines, or exhaust system. Modifications can result in hazards related to carbon monoxide poisoning, fuel leaks, fire, explosion or other serious safety hazards, and will also void the warranty.</p> <p style="text-align: center;"><u>DURING USE</u></p> <p><u>Stay alert.</u> Watch what you are doing at all times.</p> <p><u>Clear work area.</u> Clear the work area of all bystanders. Keep children and pets away.</p> |
|--|---|

Operating the Pressure Washer

| | |
|---|---|
| | <p><u>Dual gun use (if equipped).</u> During dual gun use, stay aware of the other operators location at all times and keep spray directed away from them.</p> <p><u>Keep spray away from electrical wiring.</u> Spray contact with electrical wiring will likely result in severe electrical shock or electrocution.</p> <p><u>Hot exhaust/parts.</u> Stay clear of the engine and burner exhausts. Never touch a hot engine muffler, burner/heating coil, or other hot surfaces. All are very hot and will burn you.</p> <p><u>Do not direct spray at this machine.</u> Do not attempt to clean this machine with its own spray. Engine damage will result. Cleaning should be done with a damp sponge with the engine OFF.</p> <p><u>Let engine cool.</u> At least two minutes before refueling.</p> <p><u>Avoid inhalation of exhaust.</u> This product emits CO and chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.</p> <p><u>Never pull by hose.</u> Do not move this machine by pulling on the hose. Hose or connections could fail and result in catastrophic high pressure release of fluid as well as hose whipping.</p> <p><u>Avoid sharp objects.</u> Keep hose away from sharp objects. Bursting hoses may cause injury.</p> <p><u>No load bearing.</u> Do not use the pump to support other items of equipment that impose unacceptable loads on the pump. Do not attempt to use this machine as a prop.</p> <p><u>Lock trigger safety latch when not spraying.</u> Spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger release. Rotate safety latch to the locked position when not spraying.</p> <p><u>Never leaving unattended.</u> Always turn off the pressure washer and relieve system pressure before leaving the sprayer unattended.</p> <p style="text-align: center;"><u>PROMPT EMERGENCY RESPONSE</u></p> <p><u>Seek medical aid for suspected injection injury.</u> If injured by high-pressure fluid, no matter how small the wound is, see a doctor at once. A typical injection injury may be a small puncture wound that does not look serious. However, severe infection or reaction can result if proper medical treatment is not administered immediately by a doctor who is familiar with injection injuries.</p> <p><u>Seek medical aid for suspected carbon monoxide poisoning.</u> The running engine gives off carbon monoxide, a poisonous gas that can kill you. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.</p> |
| <p>Put on Personal Protective Gear</p> | <p><u>⚠ WARNING:</u> Use personal protective gear to prevent:</p> <ul style="list-style-type: none"> • Eye and skin injection injury from high pressure spray • Hearing loss • Burns from hot water or steam • Eye injury from flying debris <ul style="list-style-type: none"> • Wear waterproof, thermally insulated gloves, safety goggles, face protection, and protective clothing when operating the machine. If spraying pressure washer specific chemicals, wear a respirator mask to avoid inhalation of vapors if directed on the chemical label. • Wear non-slip, protective footwear. Use of pressure washer can create puddles and slippery surfaces. Wear footwear capable of maintaining a good grip on wet surfaces. |

Operating the Pressure Washer
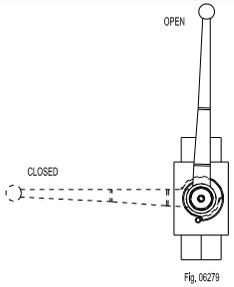
| | | |
|---|--|---|
| <p>Water Supply</p> | <p>Always have a constant water supply.</p> <p>CAUTION: Never run the pump without the water in the tank. Operating the pressure washer without a sufficient incoming flow of water will damage the pump.</p> <ol style="list-style-type: none"> 1) Make sure the water feed tank contains adequate water. 2) Turn ball valve on hose reel to the open position when spraying. |  |
| <p>Start Engine</p> | <p>Start the engine to power the pump.</p> <p>CAUTION: Running the pump dry will cause damage and void the warranty.</p> <ol style="list-style-type: none"> 1) To prevent accidental spraying, engage the safety latch on spray gun trigger by rotating it to the locked position. 2) Follow the instructions in the engine manual for starting the engine. <p>If the engine doesn't start on the first try, pressure may build up in the pump. Relieve pressure by squeezing the spray gun trigger before attempting to start engine again. This will make starting easier.</p> <p>▲ DANGER: Do not inhale engine exhaust. It contains dangerous carbon monoxide that can kill you.</p> | |
| <p>Apply Cleaning Chemical (if desired)</p> | <p>If desired, spray cleaning chemical at low pressure (with or without heated water).</p> <ol style="list-style-type: none"> 1) Make sure the chemical injector is properly set up according to the instructions in Step 2, "Set Up for Chemical Spraying". 2) Make sure the low pressure BLACK nozzle is attached before beginning to spray chemicals -- <i>Only the low pressure black nozzle will allow chemicals to be drawn through the chemical injector into the water stream.</i> 3) You can apply chemicals with either warm or cold water. Check chemical label. If warm water is specified, start burner according to instructions provided below. 4) Apply chemicals by squeezing the spray gun trigger. The chemical injector will draw the chemical into the water stream. 5) Apply chemicals evenly to the cleaning surface. Never use more chemical than is necessary to clean the surface. 6) Allow the chemicals time to react with the dirt before rinsing. 7) Prepare to rinse by changing to a high-pressure nozzle. Changing the nozzle from the low-pressure black nozzle to a high-pressure nozzle will stop the flow of chemicals into the water stream. <i>Refer to instructions for selecting and changing the nozzle in Step 1, "Connect Hoses, Water Supply, and Nozzle".</i> 8) Rinse with high-pressure spray, either hot or cold, as instructed below. | |
| <p>Turn on Burner (If hot spray or steam is desired)</p> | <p>If HOT spray or steam is desired, turn on the burner:</p> <ol style="list-style-type: none"> 1) First make sure vicinity is free of flammable vapors, dust, gases, or other potentially combustible materials. Operate only where open flame or torch is permitted. 2) Make sure there is fuel in the burner fuel tank. <p>CAUTION: Do not run the machine in hot mode without fuel in the burner's fuel tank, or damage can occur.</p> | |

Operating the Pressure Washer

3) Turn the heat switch ON and adjust the thermostat to the desired temperature.

4) If steam is desired set the thermostat to 212°F or higher and use the yellow steam nozzle.

⚠ WARNING:

- NEVER attempt to immediately run or re-light the burner if it doesn't ignite the first time. Unburned oil or gas may have accumulated, causing potential explosion or fire hazard.
- Do not attempt to set temperature limit above the preset limit.
- NEVER touch hot burner surfaces and stay clear of burner exhaust. All are very hot and will burn you.
- Do not inhale burner exhaust. It contains dangerous carbon monoxide that can kill you.

5) The burner will fire when the trigger is squeezed – follow instructions for spraying.

NOTICE: If burner exhaust is white, adjust burner for peak performance. See the "Maintenance & Repair" section of this manual.

6) When the trigger is released, a flow switch automatically turns the burner off. Also, when the temperature setting is reached, the thermostat automatically turns the burner off.

NOTICE: The blower fan will continue to run for approximately 90 seconds after thermostat is turned off.

⚠ WARNING: It is important that the burner stops firing when the trigger is released. If the burner remains firing, discontinue use until the pressure washer is serviced. Extremely high temperatures can result in serious injury and equipment damage.

Operating the Pressure Washer

Begin High Pressure Spray


High Pressure Spray Procedure

⚠ WARNING: High pressure spraying safety

- **Keep spray away from people.** Never direct discharge stream at or near any person. Do not allow any part of the body to come in contact with the fluid stream. High-pressure spray can cause serious skin, eye, or falling injuries, and hot water can burn. Injection injury will occur if high-pressure spray pierces the skin, injecting liquid under the skin. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene and possibly amputation. Seek medical attention.
- **Do not secure trigger open.** To reduce risk of injury, do not attempt to secure the spray gun open by blocking or tying the spray gun in the open position.
- **Prevent slips / loss of balance.** High-pressure spray could cause you to lose balance from kickback forces, and wet surfaces can be slippery.
 - Keep good footing and balance at all times. Do not overreach.
 - Do not stand on unstable support when spraying.
 - If spraying from an elevated surface, use fall protection because spray gun kickback can propel you off the elevated surface. When spraying from a ladder or scaffolding, ensure it is firmly anchored from sway or tip-over.
- **Be aware of puddles and slippery surfaces.** Ensure there is adequate drainage to prevent pooling of water.
- **Prevent surface damage & flying debris.** Surfaces being sprayed must be strong enough to withstand high-pressure spray or damage may result. In addition, high-pressure spray will dislodge unsecured objects as well as surface chips and debris, resulting in hazardous flying objects that can cause personal injury or property damage. Do not spray brittle surfaces or breakable, fragile, or unsecured objects such as:
 - stucco or laminar flagstone
 - some painted surfaces
 - windows or glass doors (because they may break)
 - light fixtures, flowerbeds, mailboxes
 - unsecured, lightweight objects

Procedure:

- 1) Put on one of the high-pressure spray nozzles (always relieve system pressure first and follow instructions for attaching a nozzle).
- 2) Clear the cleaning area of all persons. Keep children and pets away.
- 3) Hold the spray gun firmly with two hands and a sturdy stance: (gun kicks back when triggered).

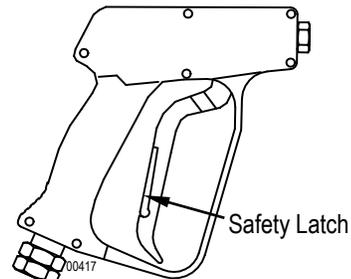

⚠ CAUTION: Spray gun metal gets extremely hot when using the burner and can burn you on contact. Never touch the metal screw or any metal parts of the spray gun when the heater is being used. Use only designated grip areas.

- 4) Wash from the bottom to the top, using side-to-side motions. This washes away heavy dirt and allows the detergent to soak as you work toward the top.
- 5) Use the width of the spray pattern to wash a wide path. Overlap the spray path for complete coverage.
- 6) The nozzle should be 12" to 24" from the work, closer for tough areas.
- 7) Small parts should be washed in a basket so the pressure does not push them away. Larger, lightweight parts should be clamped down.

Operating the Pressure Washer


- 8) The pressure washer's unloader is adjustable. It is set and locked to the maximum rated pressure when it leaves the factory. To reduce the pressure, turn the unloader knob counter-clockwise, to return it to the factory set maximum pressure, turn clockwise.

⚠ WARNING: Do not attempt to alter the unloader valve's maximum pressure. Excess pressure could cause serious injury from escaping high-pressure fluids and/or pump damage. Any alteration other than turning the adjustment knob will void your warranty.

- 9) If temporarily interrupting spraying, rotate trigger safety latch downward to the locked position to guard against accidental trigger release.

- 10) Always turn off the engine and activate spray gun trigger to relieve system pressure when:
- the sprayer is unattended, or
 - the operator is disconnecting hoses, installing/cleaning nozzles, or servicing the pump.

⚠ WARNING: Always turn off the engine and relieve system pressure when finished spraying or when leaving sprayer unattended. Serious injury could result from unintentional release of high-pressure spray.

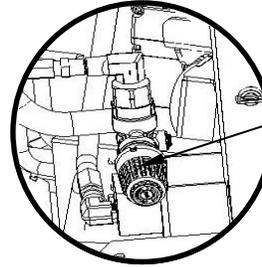

Turn counter-clockwise to reduce pressure.

Turn clockwise to increase pressure.

STEP 4. STOPPING

Stop the engine using the following steps:

⚠ WARNING: Never disconnect the high-pressure hose from the pump or spray gun while the system is pressurized. Relieve pressure by squeezing the spray gun trigger after the engine is turned OFF.

- 1) If the heater was used, turn thermostat OFF.
- 2) Spray cold water for two minutes.
- 3) Turn heat switch OFF.
- 4) Turn engine OFF.
- 5) Squeeze trigger to relieve pressure.

Storing the Pressure Washer

STORAGE

When you are finished using the pressure washer, you must prepare the pressure washer for storage and store it in a proper location.

NOTICE: If you will be storing the pressure washer in freezing conditions, follow the instructions below on how to prepare the pressure washer for freezing conditions.

- If you will not be using the pressure washer again for 30 days or more, follow the instructions for preparing the engine for long-term storage.


▲ WARNING:

- Fuel and its vapors can ignite and cause a fire. Select a well-ventilated storage area away from sources of heat, flame, or sparks.
- A hot engine can ignite flammable materials. Always let the engine cool at least five minutes before storing.

Detailed instructions are provided below.

| | |
|---|---|
| <p>Choose a Storage Location</p> | <p>Choose a storage location that is:</p> <ul style="list-style-type: none"> • Clean and dry. • Away from sources of heat, open flames, sparks, or pilot lights, even if the pressure washer's engine and burner fuel tanks are empty. Residual fuel fumes from tank can ignite. • Away from extreme high or low temperatures. Do not store the pressure washer in freezing conditions unless it is prepared as directed below for those conditions. |
| <p>Perform Regular Maintenance</p> | <p>Perform periodic maintenance as directed in this manual to keep the pressure washer in safe working condition.</p> |
| | <p>If you will be storing the pressure washer in freezing temperatures, you must properly prepare the pressure washer to prevent water from freezing in the system.</p> <p>▲ CAUTION: Do not allow water to freeze in the pressure washer, high pressure hose, or spray gun. Freezing water can cause damage to the equipment and cause the spray gun to fail in the open position. A spray gun that has failed in the open position can whip around and cause personal injury when the pressure washer is started.</p> <p>Freeze protection:</p> <p>The use of RV antifreeze will save the components from freeze damage and keep them lubricated.</p> <ol style="list-style-type: none"> 1) Disable the low-water shut-down by disconnecting the white float switch wire from the yellow engine wire (see fig.06430). 2) Fill attached feed tank with at least 5 gallons of RV antifreeze. 3) Run the engine (with heat switch off) until RV antifreeze comes out of the high pressure water outlet. 4) Make sure excess antifreeze is disposed of safely. 5) Re connect low water shut down. |

Storing the Pressure Washer
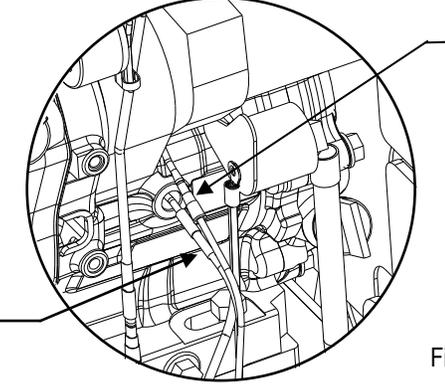
| | |
|---|---|
| |  <p>Yellow engine wire</p> <p>Float switch white wire</p> <p>Fig06430</p> |
| <p>Prepare Engine for Long Term Storage (if storing more than 30 days)</p> | <p>First prepare the engine for long term storage if you will not be using the pressure washer again for more than 30 days.</p> <p>Fuel can become stale when stored over 30 days. Stale fuel causes acid and gum deposits to form in the fuel system which can cause malfunction of the engine.</p> <p>1) Prepare fuel system for storage:</p> <ul style="list-style-type: none"> • Remove all fuel from the tank and carburetor (if applicable). This is most easily accomplished by running the pressure washer with the high pressure hose until the engine stops from lack of fuel. <p>OR</p> <ul style="list-style-type: none"> • Add fuel stabilizer to the fuel (following manufacturer's instructions) <p>Fuel stabilizer steps:</p> <ol style="list-style-type: none"> 1. Ensure engine fuel tank is full. 2. Add fuel stabilizer to fuel tank. 3. Run pressure washer with high pressure hose at least 5 minutes after adding stabilizer to allow it to enter the fuel system. 4. Shut off engine. <p>2) Lubricate cylinder and piston:</p> <ol style="list-style-type: none"> 1. Disconnect spark plug wire and remove spark plug. 2. Add one teaspoon oil through spark plug hole. 3. Place rag over spark plug hole and turn starter (or pull the recoil) a few times to lubricate the combustion chamber. 4. Replace spark plug, but do not reconnect the spark plug wire. |
| <p>Prepare Pressure Washer for Storage</p> | <p>Prepare the pressure washer for storage.</p> <ol style="list-style-type: none"> 1) Disconnect the battery, remove it from the battery compartment, and store it indoors above 32°. 2) Make sure the engine start switch is OFF and fuel valve is OFF. 3) Disconnect the engine spark plug wire if you haven't already done so. |
| <p>Move Pressure Washer to Storage Location</p> | <p>Let engine cool for 5 minutes before moving the pressure washer to its storage location.</p> |

Maintenance & Repair

BURNER ADJUSTMENT (only needed if white exhaust smoke appears)

The oil burner is preset and performance tested at the factory (elevation 1100 feet). Different altitudes may require a one-time initial burner adjustment.

CAUTION: If white smoke appears from the burner exhaust vent during start-up or operation, discontinue use and readjust air bands.

Specific steps for burner correction are given below.

Burner Correction

Adjusting the burner will require you to access the burner of the pressure washer while someone else is operating the spray gun.

Detailed instructions:

- 1) Locate the Air Damper Lever on blower housing.
- 2) Make sure burner is cool to the touch before attempting to adjust.
- 3) Begin operation of the pressure washer and switch on the burner, as instructed in the operation section of the manual. Have someone operate the spray gun so the burner fires.
- 4) Locate the air damper lever (figure 5 below). Observe the position of the arrow on the lever relative to the calibration numbers directly to the left. (0 is fully closed and 10 is fully open). (Note: Factory calibration starts out at close to 6).

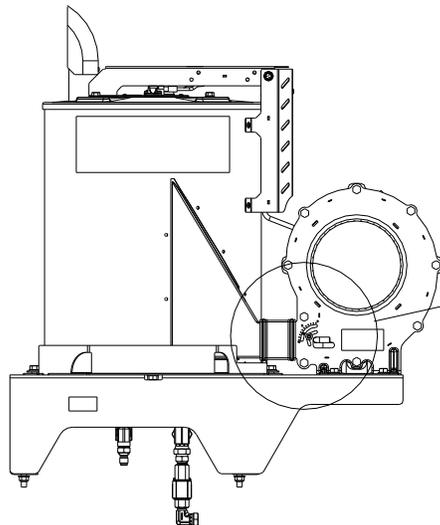


FIGURE 4

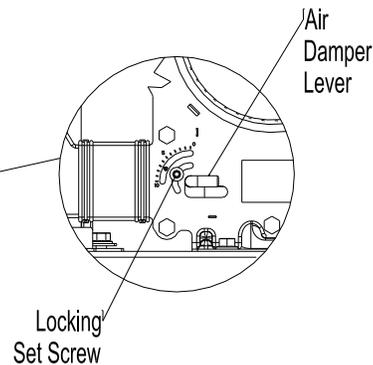


FIGURE 5

- 5) Locate and loosen the locking screw (figure 5) and rotate the lever counter clockwise until black smoke appears from the burner exhaust vent. Note which number the arrow now points to.
- 6) Slowly open the lever until white smoke just starts to appear.
- 7) Turn lever halfway back to the black smoke position previously noted. Tighten the locking screw.

Maintenance & Repair

Inspect and maintain your pressure washer as specified below in order to keep it in safe and optimal working order. Follow all safety rules and recommended maintenance instructions.

| ⚠ WARNING | |
|--|--|
| ALWAYS shut off water supply or drain tank, relieve spray gun pressure, turn off engine and disconnect the spark plug before cleaning, adjusting, or servicing the pressure washer. After servicing, make sure all guards and cover shields are replaced before using. | |
| MAINTENANCE SCHEDULE | |
| <u>Task</u> | <u>Frequency</u> |
| Keep Pressure Washer Clean | As needed |
| Inspect Fuel System | Each use |
| Inspect Spray System | Each use |
| Clean Inlet Filter | Each use |
| Check Tire Pressure | Each use |
| Recharge And Maintain Battery | As specified in battery manufacturer's instructions |
| Perform Engine Maintenance | As specified in engine owner's manual |
| Change Pump Oil | <ul style="list-style-type: none"> • After first 40 hours of use • Every 3 months or 500 hours of use after that |
| Maintain Burner's Fuel Filter / Water Separator | <ul style="list-style-type: none"> • Each Use • Change filter after every 500 hours of use |
| Descale Heating Coil | Annually, or more frequently as use and performance require (see instructions) |
| Inspect Heating Coil And Desoot | As needed |
| Inspect/Clean/Adjust Electrodes | Annually |
| Inspect/Tighten Or Replace Pump/Generator Belts | After the first 24 hours of use, then with each oil change. Tighten or change belts as needed. |
| Inspect And Clean Flow Switch | As needed |
| Inspect/Replace Fuel Filter/Pump | Each use/as needed |
| Clean Chemical Strainer & Injector | Clean the strainer and injector. Always start with a clean detergent container. Run clean water through the injector after each use. |
| Inspect/Maintain Brakes | Inspect brakes annually or more frequently as use and performance require. Clean and replace components as necessary. |
| Clean Combustion Head Flame Sensor Lens | Clean combustion head flame sensor lens every 100 hours. |

See detailed instructions for each maintenance item below.

(Note: For end-of-the-season storage instructions, see the "Storage" section of this manual.)


Maintenance & Repair

| MAINTENANCE & REPAIR-DETAILED INSTRUCTIONS | |
|--|--|
| Follow Safety Rules | <p>Read and follow these safety rules whenever you will be servicing the pressure washer:</p> <ul style="list-style-type: none"> Turn off / relieve pressure first. Always turn off pressure washer and relieve system pressure before inspection or maintenance. Remove spark plug or spark plug wire to prevent accidental starting. Fuel valve off. Turn fuel shut-off valve to OFF position (if applicable) before transporting or servicing the pressure washer. Replace guards. Make sure all guards and cover shields are replaced after servicing the pressure washer. Major repair. If machine is in need of major service, including the installation or replacement of parts, it should be performed only by a qualified service technician. Obtain factory approved parts from NorthStar ProSHOT Product Support at 1-800-969-7073. Replacement parts. If a part needs replacement, only use factory approved repair parts. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the pressure washer and will void the warranty. |
| Keep Pressure Washer Clean | <p>Keep pressure washer clean.</p> <p>If dust or debris accumulates on the pressure washer, clean the pressure washer with a damp cloth or soft bristle brush. Do not allow air intakes to become blocked.</p> <p>CAUTION: Do not spray pressure washer with a garden hose or pressure washer. Water may enter the pressure washer and cause damage.</p> |
| Inspect Fuel System(s) | <p>Inspect the fuel systems (of both engine and burner) and check for leaks before each use.</p> <p>Do not start pressure washer until all needed repairs have been completed.</p> <p>⚠ WARNING: Fuel leak hazard. Engine fuel and burner fuel are highly explosive and fuel leaks can result in fire or explosions. You can be burned and seriously injured if the fuel system is not properly hooked up or there is a fuel leak when you start the engine.</p> <p><u>Inspect the entire fuel system, for both engine and burner. Look for:</u></p> <ul style="list-style-type: none"> Signs of leaks or deterioration, Chafed or spongy fuel hose, Loose connections, Loose or missing fuel hose clamps, Damaged fuel tank, or Defective fuel shut-off valve. |



Maintenance & Repair

| | |
|------------------------------------|--|
| <p>Inspect Spray System</p> | <p>Inspect spray system for damage and leaks before each use.</p> <p>Do not start pressure washer until all needed repairs have been completed.</p> <p>⚠ WARNING: High pressure fluid injection hazard High pressure fluid discharge from leaks (even pin-sized) or ruptured components can pierce skin and inject fluid into the body. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene, and possibly amputation.</p> <ul style="list-style-type: none"> • Never use a finger or skin to check for leaks. • Never operate machine with damaged or missing hoses/parts. • Never attempt to repair a high-pressure hose or component. Always replace it with a part that is rated at or above the pressure rating of this machine. <ol style="list-style-type: none"> 1) Check hoses, fittings, wand, trigger gun and connections for signs of wear, cracks, looseness, or leaks. Replace as required. 2) Check and clean the nozzle orifice. <p>The diagram illustrates three different nozzle conditions. The top nozzle is labeled 'Good' and shows a clean, intact nozzle with no leaks. The middle nozzle is labeled 'Bad' and shows water dripping or spraying from the nozzle orifice, with an arrow pointing to the area and the text 'Water dripping or spraying, or localized moisture'. The bottom nozzle is also labeled 'Bad' and shows an exposed wire mesh inside the nozzle, with an arrow pointing to it and the text 'Exposed wire mesh due to wear'. A small reference code 'FIG00426' is visible near the bottom nozzle.</p> |
| <p>Clean Inlet Filter</p> | <p>Clean the water filter before each use.</p> <p>⚠ WARNING: When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.</p> <p>Self-cleaning method:</p> <ol style="list-style-type: none"> 1) Locate water filter on pump inlet hose. (See the Inlet Filter reference in the parts explosion section.) 2) Make sure there is water in tank. 3) Turn the red knob counterclockwise open. Allow the water to run thru the hose barb for a minute or two. Turn clockwise to close. <p>Manual cleaning method:</p> <ol style="list-style-type: none"> 1) Disassemble filter housing. 2) Remove filter. <p>The diagram shows a detailed view of the inlet filter assembly, which includes a filter housing with a red knob and a hose barb. The reference code 'Fig.06280' is located below the diagram.</p> |

Maintenance & Repair
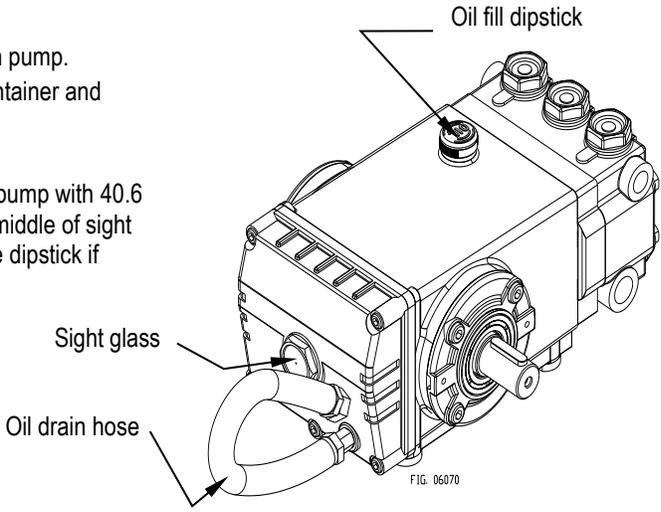
| | |
|---|---|
| | <ol style="list-style-type: none"> 3) Run under water to clean. Note: The filter can be ordered separately if it becomes damaged. (See the Inlet Filter reference in the parts explosion section.) 4) Reassemble. |
| <p>Check Tire Pressure</p> | <p>Check tires and trailer before each use.</p> <ol style="list-style-type: none"> 1. Make sure tires are fully inflated and in good repair. See tire sidewall for recommended pressure and fill as needed. 2. Check to make sure that trailer is in safe working condition. Make sure all nuts, bolts, and connections are tight. If a part needs replacement, only use parts that meet the manufacturer's specifications. <p>⚠ WARNING:</p> <ul style="list-style-type: none"> • Do not over-inflate tires. Serious injury can occur if tires explode. • Damaged or missing components, or replacement parts that do not meet specifications, may result in a safety hazard or poor operation of the trailer. |
| <p>Recharge and Maintain Battery</p> | <p>Inspect, recharge, and maintain battery according to your battery manufacturer's instructions.</p> <p>Do not store with battery charger always connected. Batteries that are over-charged can boil themselves dry and produce excessive amounts of hydrogen, an explosive gas.</p> |
| <p>Perform Engine Maintenance</p> | <p>Perform engine maintenance as specified in the engine owner's manual.</p> <p>Engine maintenance items include:</p> <ul style="list-style-type: none"> • Changing oil and oil filter if applicable. • Check Air filter replace if necessary. • Spark plug cleaning and replacement. • Fuel filter check/replacement. • Inspecting and cleaning muffler (and spark arrestor if equipped). |
| <p>Change Pump Oil</p> | <p>Change the pump oil after the first 40 hours of use, and then after every 3 months or 500 hours of use after that.</p> <ol style="list-style-type: none"> 1) Remove cap from oil drain hose on pump. 2) Drain the pump oil into suitable container and dispose of responsibly. 3) Replace cap on oil drain hose. 4) Make sure unit is sitting level. Fill pump with 40.6 oz. of SAE30 non-detergent oil to middle of sight glass (or at the indicator line on the dipstick if equipped). 5) Reinstall oil fill dipstick. <div style="text-align: right;">  <p>The diagram shows a perspective view of the pump assembly. An 'Oil fill dipstick' is located on top of the pump housing. A 'Sight glass' is positioned on the side of the pump. An 'Oil drain hose' is attached to the bottom of the pump housing. The diagram is labeled 'FIG. 06070'.</p> </div> |

Maintenance & Repair
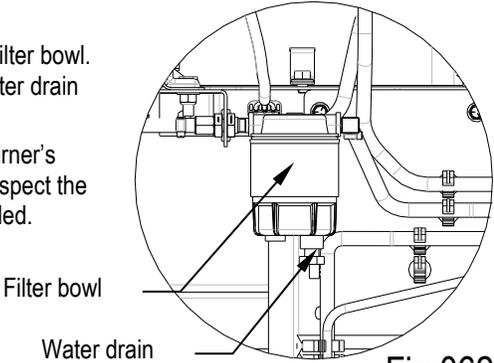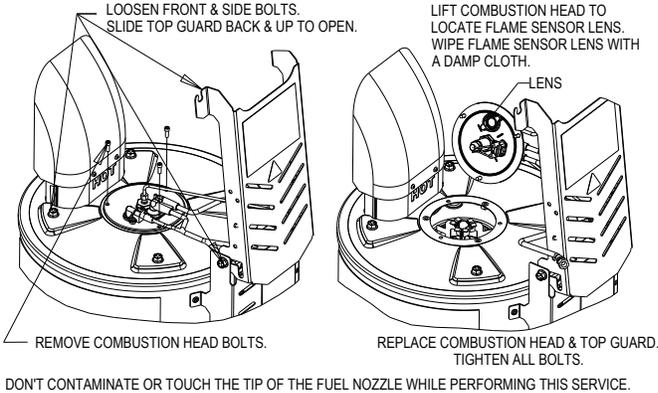
| | |
|---|--|
| <p>Maintain Burner's Fuel Filter/Water Separator</p> | <p>Drain water from burner's filter bowl before each use, and replace filter after every 500 hours of use or as needed.</p> <ol style="list-style-type: none"> 1) After each use of the burner, visually check the filter bowl. If any water has accumulated, drain it via the water drain at the bottom of the bowl. 2) After every 500 hours of operation, empty the burner's fuel tank in order to remove the filter bowl and inspect the fuel filter/water separator. Replace filter as needed. <p><u>Important:</u> Always empty the burner's fuel tank before removing the filter bowl. There is no shut-off valve between fuel filter/water separator and burner's fuel tank.</p>  |
| <p>Descale Heating Coil</p> | <p>Descale coil tubing annually or more frequently as needed.</p> <p>In hard water areas, scale can build up inside the heating coil tubing. Scale deposits will decrease the output pressure and temperature of heated spray, and may eventually clog water flow through the heating coil.</p> <p>Descale the coil tubing at least annually and more frequently if you detect a decrease in output pressure or temperature. <u>To descale the coil:</u></p> <ol style="list-style-type: none"> 1) Mix a commercial coil cleaner in a bucket and add 6 gallons to the water tank. Note: Drain water first. 2) Attach the high-pressure hose(s) to the high-pressure water outlet on the machine. Do not hook up the spray gun. 3) Disable the low water shutdown feature by disconnecting the yellow wire on engine from white wire on float switch (see fig.06430). 4) Run the pressure washer in cold mode for 1 to 3 hours, recirculating the cleaning solution. <p>⚠ WARNING: DO NOT RUN THE BURNER. The chemical used to descale could have an adverse effect and emit harmful vapors or fumes.</p> <ol style="list-style-type: none"> 5) Dispose of the cleaning solution where it is not harmful to animals or the environment. 6) Flush with fresh water and clean the inlet strainer when finished. 7) Reconnect the low water shutdown. |
| <p>Clean Combustion Head Flame Sensor Lens</p> | <p>CLEAN COMBUSTION HEAD FLAME SENSOR LENS EVERY 100 HOURS</p> <p>TOOLS REQUIRED: 1/2" SOCKET AND WRENCH, 5/32" HEX KEY ALLEN WRENCH.</p>  <p>LOOSEN FRONT & SIDE BOLTS. SLIDE TOP GUARD BACK & UP TO OPEN.</p> <p>LIFT COMBUSTION HEAD TO LOCATE FLAME SENSOR LENS. WIPE FLAME SENSOR LENS WITH A DAMP CLOTH.</p> <p>REPLACE COMBUSTION HEAD & TOP GUARD. TIGHTEN ALL BOLTS.</p> <p>DON'T CONTAMINATE OR TOUCH THE TIP OF THE FUEL NOZZLE WHILE PERFORMING THIS SERVICE.</p> |

Maintenance & Repair

| | | | |
|---|---|--|--|
| <p>Inspect Heating Coil and Desoot</p> | <p>Inspect and desoot coil annually.</p> | <p>Most coils never require desooting. However, poor grades of fuel oil or inadequate combustion air will cause heavy soot build-up on the outside surface of the heating coil tubing. These deposits will insulate the coil, which then restricts air flow through the heat exchanger and further aggravates the soot build-up. Be sure to wipe the sight glass. See Figure 06172 on the next page.</p> | |
| | <p>If soot has built up on the exterior of the coil tubing, clean as follows:</p> | | |
| | <ol style="list-style-type: none"> 1) Wear protective clothing, goggles, and gloves. 2) Disconnect Fuel Line from outer cover. Disconnect Flame sensor and High Tension Leads from black box bolted to the guard on side of Outer Wrap (see Parts Explosion Heat Exchanger & Blower Housing.) 3) Remove (4) 5/16" Bolts from Outer Cover. 4) Remove Outer Cover and set aside. 5) Remove (4) 5/16" bolts and nuts off the hold down brackets on the Outer Wrap. 6) Remove all inlet and outlet fittings. 7) Remove the (2) 1-1/4" jam nuts and the 3/8" bolt underneath the base. 8) Lift off Outer Wrap, Inner Wrap and Inner Cover. Set aside. 9) Using a couple of straps, wrap them around the Coil and attach to a hoist to lift off. You may also use the lifting eyes with hooks to lift with hoist. This coil weighs at least 125 lbs. If no hoist is available it is recommended that this become a 2 man job each with the ability to lift at least 65 lbs. 10) Clean the coil. 11) Reassemble the coil and lids to the machine. Make sure the white insulation remains in place. 12) Reattach high-pressure hose and thermostat and make sure all fittings are tight before using the machine. | | |

Maintenance & Repair

Inspect/Clean/Adjust Electrodes

Inspect electrodes yearly and make adjustments as needed.

- 1) Loosen front (2) bolts using a 1/2" socket. Loosen side (2) bolts using a 1/2" socket and wrench.
- 2) Remove (3) screws using a 5/32" hex key allen wrench from the combustion head. Lift off combustion head from outer cover.

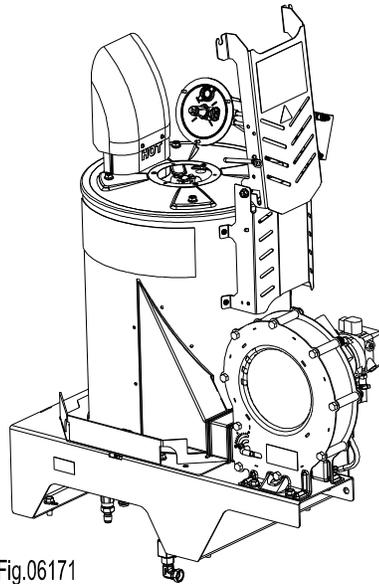


Fig.06171

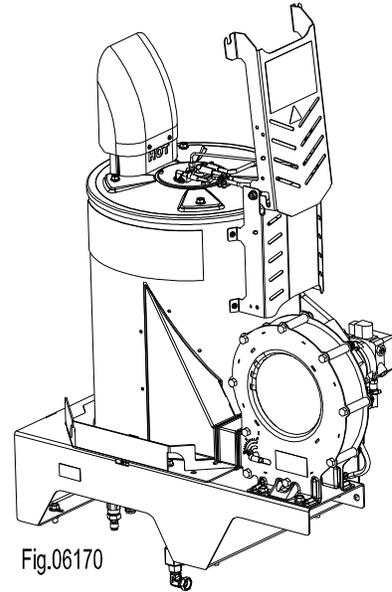


Fig.06170

- 3) Disconnect Flame Sensor and electrode wires. Disconnect Fuel Line.
- 4) Clean off carbon deposits, which may have accumulated on the tips of the electrodes.
- 5) Reset the spacing as shown.

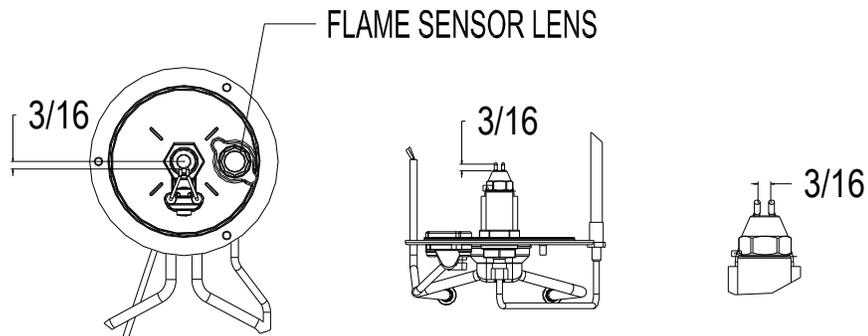


Fig.06172

NOTICE: Wipe combustion head flame sensor lens every 100 hours. If the flame sensor lens gets sooted up the flame sensor will be unable to sense a flame and therefore the burner will not fire. Do not contaminate or touch the fuel nozzle tip.

Maintenance & Repair

Inspect/Tighten or Replace Pump/Generator Belts



Check drive belt and generator belt after the first 24 hours of use, then with each oil change. Tighten or change belts as needed.

⚠ WARNING: Belt slippage can cause static electricity build-up, which may result in sparking. Fire ignition can result.


NOTICE: Belt tension and alignment are inter-related. Do not adjust one without checking the other.

To tighten belts:


- 1) Make sure engine is off.
- 2) Remove belt guard. See "Parts Explosion" (Pump, Engine, & Generator)/Belt Guard section of this manual for location.
- 3) Locate tensioner arm.
- 4) Using a straight edge make sure the pulleys are aligned with each other.
- 5) Loosen rear 1/2" tensioner bolt with 3/4" socket (keep it partially torqued to aid in the tensioning.)
- 6) Loosen front 1/2" tensioner bolt with 3/4" socket.
- 7) Using a 1/2" square drive, move the tensioner plate so notch lines up as shown. An extension is recommended for the pump tensioner.
- 8) Tighten the front and rear bolts.

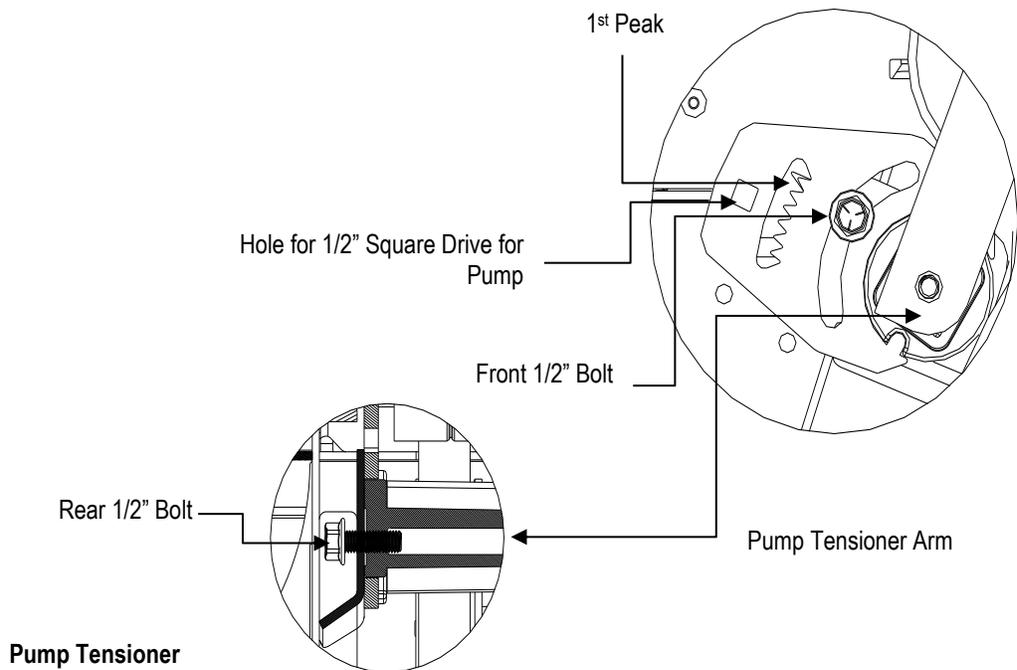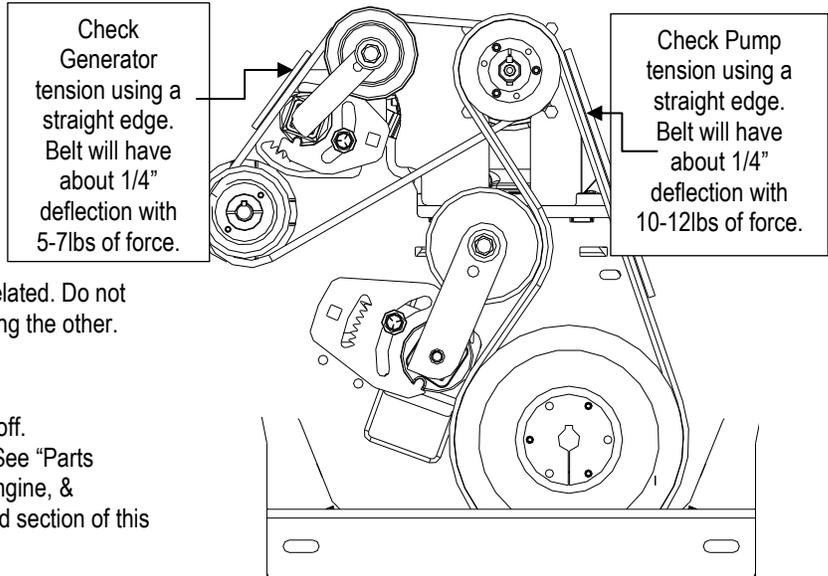

Maintenance & Repair

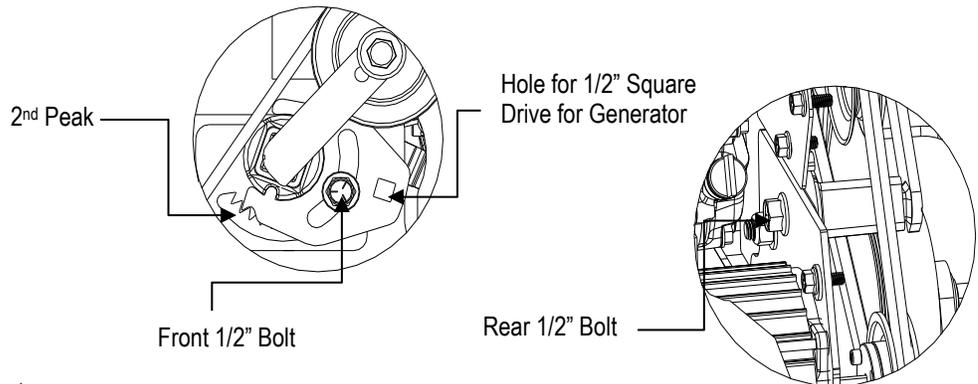

Generator Tensioner

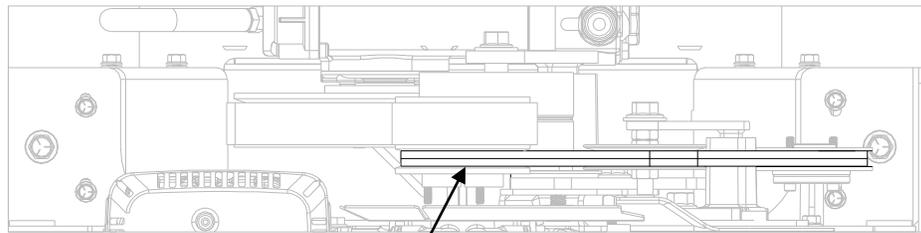

9) Replace the belt guard.

Make sure the pulleys are aligned.

⚠ DANGER: Do not operate unless the belt guard is in place to prevent access to rotating parts. Clothing or hair can become rapidly entangled in unguarded rotating parts, resulting in serious injury or death.

NOTICE: Some general rules for belt tensions are:



- The ideal tension is the lowest tension without belt slippage.
- Over-tightening decreases belt and bearing life.
- Keep belts clean and free of foreign material that may cause slippage.
- Do not apply belt dressing, which can cause damage and early belt failure.

Maintenance & Repair



Inspect and Clean Flow Switch

Inspect and clean flow switch as needed. Mineral build-up and/or debris within the flow switch can occur and may affect burner operation if not periodically cleaned. Mineral build-up and/or debris can stop the movement of the shuttle inside the flow switch body. Shuttle movement is important because the burner will not fire if the shuttle does not move. The shuttle movement actuates a switch inside the flow switch housing which allows the burner to fire during spray mode.


- 1) Disconnect the swivel fitting from elbow to the inlet of the coil.

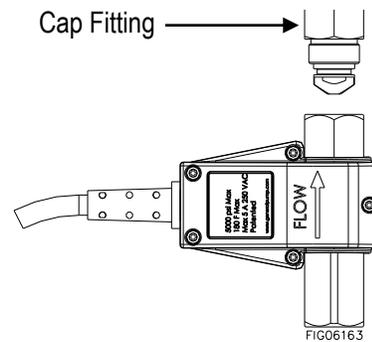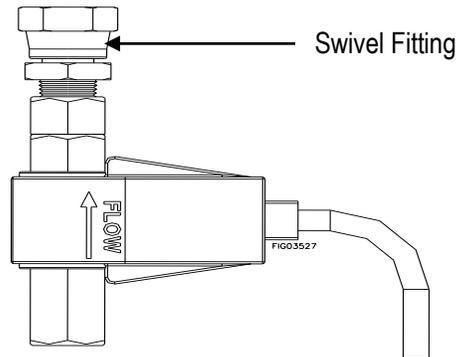

- 2) Remove the Cap fitting from the flow switch.
- 3) Slide out the Shuttle Assembly. If the magnet in the shuttle assembly is damaged or missing, replace the entire flow switch assembly. To order a replacement flow switch assembly, call NorthStar ProSHOT Product Support at **1-800-969-7073**.

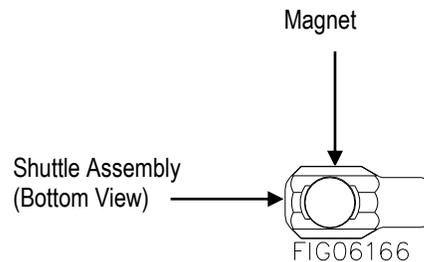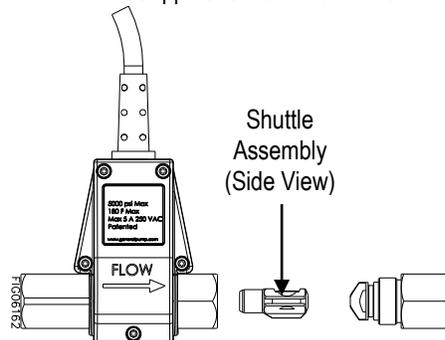


- 4) Observe the Shuttle Assembly and internal portion of Body for obstructions, hard water deposits and any other foreign debris. Remove the foreign debris with light scraping or compressed air. If no additional cleaning is required continue to Step 7. If additional cleaning is required continue to step 5.

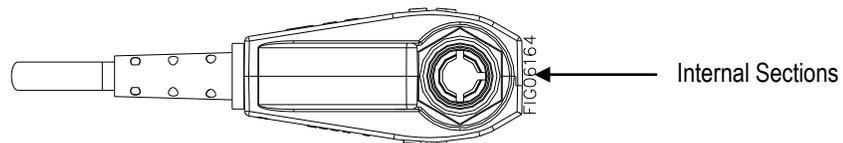


- 5) Remove the Body from the plastic Enclosure and soak the Body in CLR or similar solution to dislodge excess build-up. The screws (QTY 5) in the Enclosure are TORX T10.


Maintenance & Repair

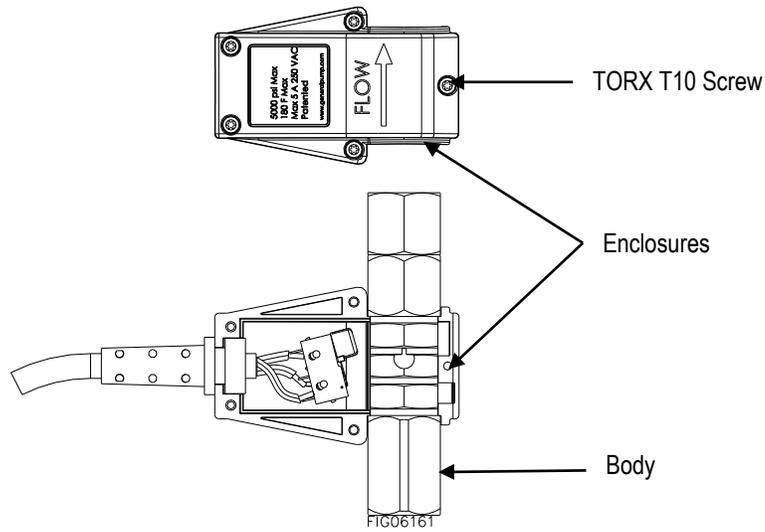

- 6) Rinse Body.
- 7) When cleaning is complete, reinstall the Body into the Enclosures, taking care not to cause damage.
- 8) Tighten the Screws into the body until they are snug. Do not over-tighten the screws.
- 9) Insert the Shuttle Assembly with the rounded end first, into the body. Align with grooves.

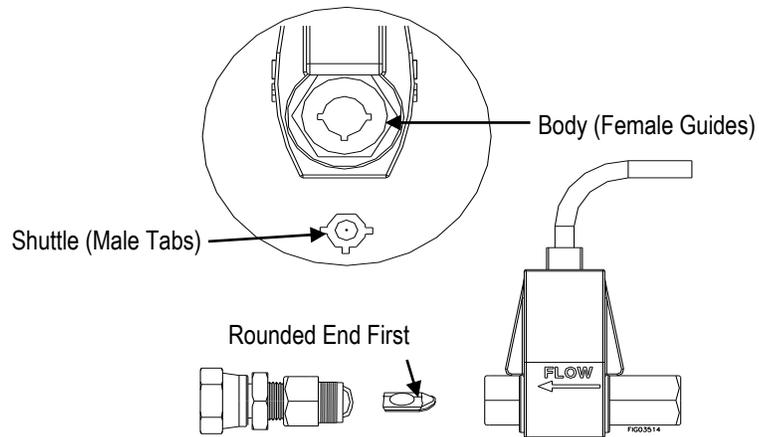

- 10) Inspect the O-ring on the Cap, if it is damaged, replace the entire flow switch assembly. To order a replacement flow switch assembly, call NorthStar ProSHOT Product Support at **1-800-969-7073**. If the O-ring is not damaged, re-install the Cap onto the Body. Torque the cap to 100lb-in.

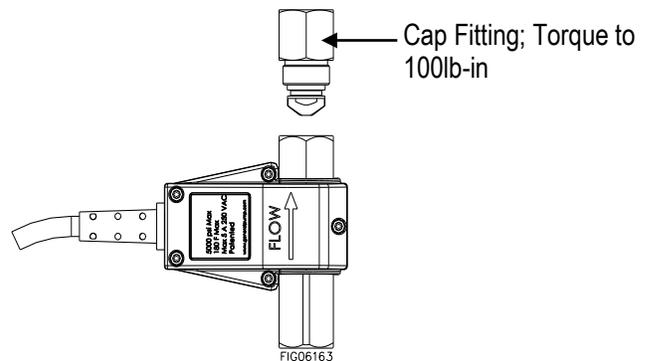

On the elbow on the inlet of the coil, remove any remaining thread tape/sealant. Re-apply new thread tape/sealant on the elbow. Re-connect the swivel to the elbow. Hand-tighten the swivel onto the elbow, and once snug, using a wrench continue to tighten the swivel a two additional revolutions.

Maintenance & Repair

| | |
|--|--|
| <p>Inspect/Replace Fuel Filter/Pump</p> | <p>Check fuel filter and fuel pump when inspecting fuel lines. Change/replace as needed. (See the Parts Explosion for locations: Skid and Roll Cage.)</p> |
| <p>Clean Chemical Strainer and Injector</p> | <p>Clean the strainer and injector. Always start with a clean detergent container. Run clean water through the injector after each use.</p> |
| <p>Inspect/Maintain Brakes</p> | <p>Inspect brakes annually or more frequently as use and performance requires. Clean and replace components as necessary.</p> <p>⚠WARNING: Always maintain the pressure washer's brakes in good working order. The pressure washer is very heavy. Brake failure could result in loss of control of towing vehicle.</p> <p><u>Instructions:</u></p> <ol style="list-style-type: none"> 1) Inspect magnets, shoes, and magnetic coil for wear. Replace as needed. Note: Magnets should always be replaced in pairs (both sides of an axle). <ol style="list-style-type: none"> a) Replace magnets and shoes if worn or scored. b) Replace magnets if they are wearing unevenly or abnormally. c) Replace magnets if any part of the magnetic coil becomes visible through the friction material facing of the magnet. 2) Reface the drum armature surface when replacing magnets. 3) Check springs for stretch or deformation and replace as needed. 4) Clean the backing plate, magnet arm, magnets, and brake shoes. 5) Check for other worn or loose parts. 6) Apply a light film of lubricate or similar grease on: <ol style="list-style-type: none"> a) The brake anchor pin, b) The actuating arm busing and pin, c) The actuating block that is mounted on the actuating arm, and d) The areas on the backing plate that are in contact with the brake shoes and magnet lever arm. <p>⚠WARNING: Do not get grease oil on brake linings or drums. Grease on these parts will reduce braking performance.</p> <ol style="list-style-type: none"> 7) Reassemble brake assembly. Make sure all parts are installed on the same brake assembly that they were removed from. |

NOTE TO COMMERCIAL USERS:

All mechanical equipment, no matter how well designed, will need maintenance and repairs. A NorthStar ProSHOT pressure washer is no exception. At times, a NorthStar ProSHOT pressure washer may become inoperable because repairs are required. NorthStar ProSHOT Product Support will assist in these repairs as needed, but if an inoperable pressure washer creates a major expense to your business, then we strongly recommend the following:

- Have a staff person become familiar with the mechanical operation of the pressure washer and capable of making minor repairs and performing all preventative maintenance procedures.
- Keep a stock of recommended service parts for maintenance and minor repairs.

IMPORTANT: If a part needs replacement, only use parts that meet the manufacturer's part number specifications. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the pressure washer.

Maintenance & Repair

| ENGINE WILL NOT START | |
|------------------------------|---|
| <u>Causes</u> | <u>Solutions</u> |
| Low oil shutdown | Fill engine with the adequate amount of oil. |
| Cold engine | Choke engine to start. |
| No fuel | Add fuel; make sure fuel shutoff valve is open. |
| Dead battery | Recharge/Replace battery. |
| Spark plug wire not attached | Attach spark plug wire to spark plug. |

| PRESSURE WASHER RUNS BUT BURNER DOESN'T FIRE | |
|--|--|
| <u>Causes</u> | <u>Solutions</u> |
| Heat switch turned OFF | Turn heat switch ON. |
| Thermostat set too low or off | Set thermostat to desired temp. |
| Fuel tank empty | Fill fuel tank with kerosene, diesel, or fuel oil. |
| Defective Flow Switch | Call Product Support. |
| Defective Burner | Call Product Support. |

| PRESSURE WASHER RUNS BUT NO PRESSURE | |
|--------------------------------------|---|
| <u>Causes</u> | <u>Solutions</u> |
| Partially clogged or damaged nozzle | Clean or replace nozzle. |
| Clogged water filter | Clean water filter. |
| Low water flow | Make sure the water supply is at least 4.8 gpm. |

| PRESSURE WASHER SURGES OR CYCLES WHILE IN BYPASS | |
|--|--|
| <u>Causes</u> | <u>Solutions</u> |
| Leak between unloader and gun | Check all connections between unloader and gun for leaks. Tighten loose components and replace damaged components. |
| Gun leaking internally | Replace spray gun. |

| SMOKE FROM HEAT EXCHANGER | |
|--------------------------------|---|
| <u>Causes</u> | <u>Solutions</u> |
| Air band not adjusted properly | Adjust the air band until the burner burns cleanly. See Installation Instructions. |
| Poor quality fuel | Use kerosene for the cleanest burn. |

| WATER NOT HEATING SUFFICIENTLY | |
|---|--|
| <u>Causes</u> | <u>Solutions</u> |
| Scale build-up in coil | See Coil Descaling under Maintenance Instructions. |
| Coil is full of soot | See Coil Desooting under Maintenance Instructions. |
| Combustion Head Flame Sensor Lens is full of soot | See Clean Combustion Head Flame Sensor under Maintenance Instructions. |

| RUPTURE DISC SPRAYS WATER | |
|--|-----------------------|
| <u>Causes</u> | <u>Solutions</u> |
| Pressure Washer/Burner Control Problem | Call Product Support. |

| POOR OR NO DETERGENT SUPPLY | |
|---------------------------------------|--|
| <u>Causes</u> | <u>Solutions</u> |
| Inadequate detergent supply | Refill detergent container. Be sure chemical strainer is fully submerged. |
| High pressure hose too long | Use less hose. Move machine closer to the work. |
| Chemical strainer or injector clogged | Clean the strainer and injector. Always start with a clean detergent container. Run clean water through the injector after each use. |

Major Components Call Out – REV. D.3


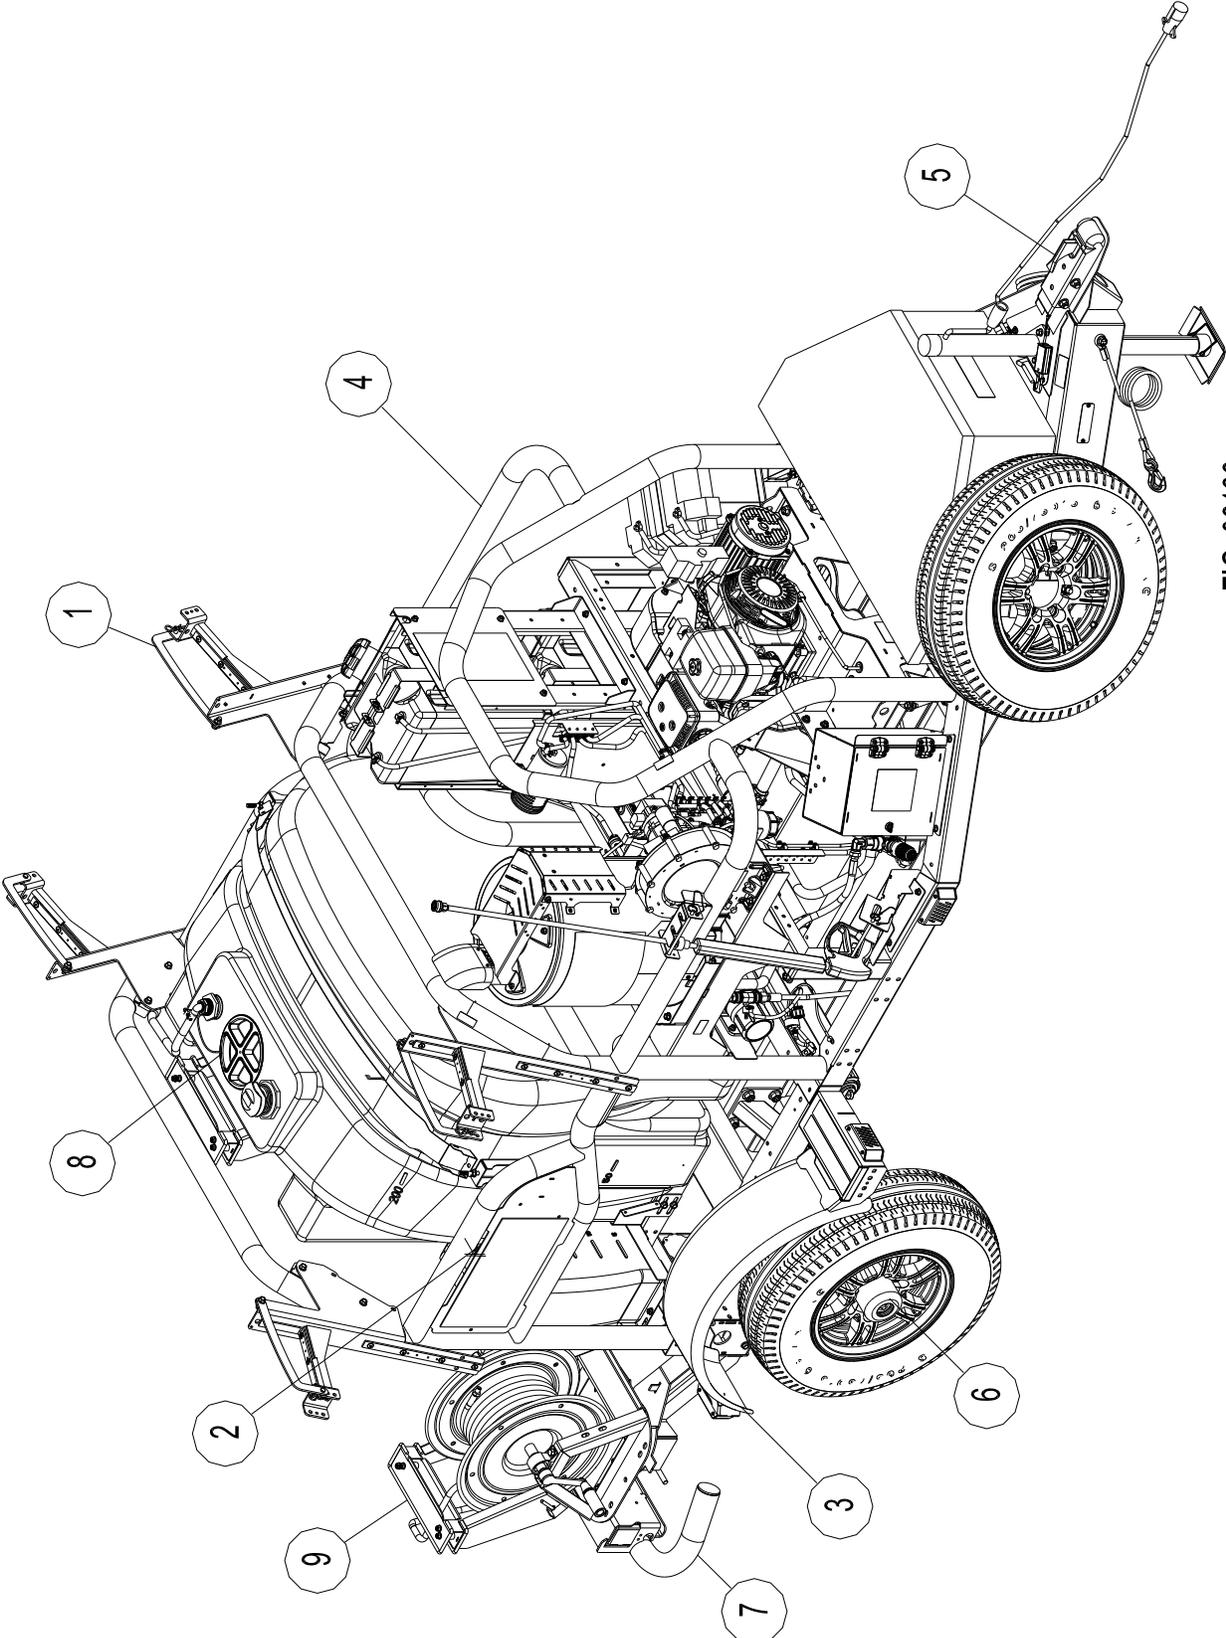


FIG. 06196

Major Components – REV. D.3

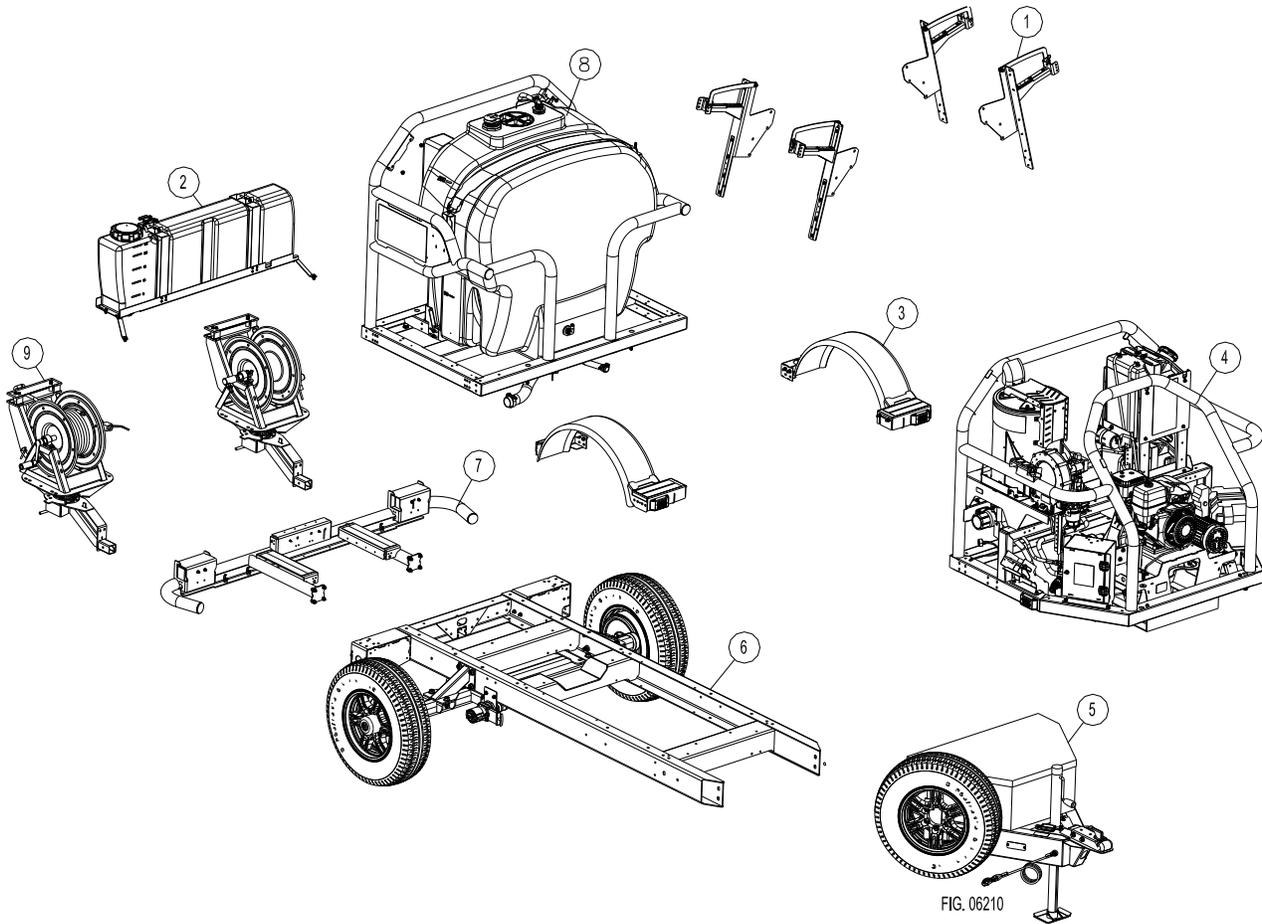

MAJOR COMPONENTS (FIG.06210)

| Ref.# | Description | Figure# |
|-------|--|-------------|
| 1 | Drivers Side Ladder Rack Passenger Side Ladder Rack | 06239 |
| 2 | Chemical Tank | 06216 |
| 3 | Drivers Side Single Axle Fender Passenger Side Single Axle Fender | 06217 |
| 4 | Skid | 06082 |
| | Heat Exchanger | 06075 |
| | Blower Housing | 06076 |
| | Pump, Engine & Generator | 06152 |
| | Skid (Roll Cage) | 06080 |
| 5 | Tongue | 06212 |
| 6 | Single Axle Frame 106" | 06211 |
| 7 | Bumper | 06213 |
| 8 | Water Tank Platform | 06215/06214 |
| 9 | Hose Reel A-Frame 150' | 06218/06219 |

These components go into more detail on the following pages.

Parts Explosion (Ladder Rack & Chemical Tank) – REV. D.3


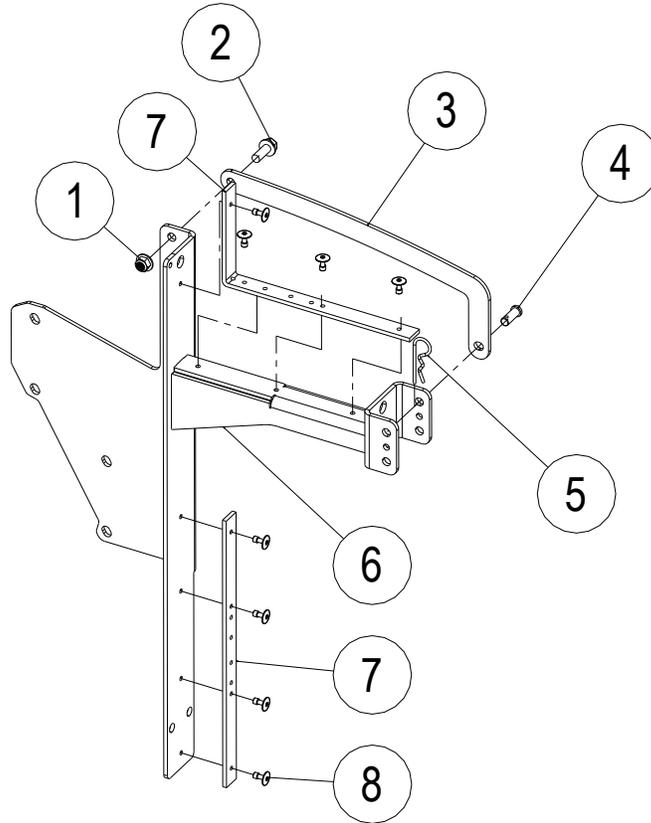


FIG.06239

| LADDER RACK (FIG. 06239) | | | |
|--------------------------|--------|--|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 82631 | Nut, 3/8-16 hex flange nylon | 4 |
| 2 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 4 |
| 3 | 794836 | Ladder rack lock | 4 |
| 4 | 797144 | Pin, 3/8" x 1" clevis | 4 |
| 5 | 30312 | Pin, .12 bridge | 4 |
| 6 | 794832 | Ladder rack (1) Drivers side front (1) Passenger side rear | 2 |
| | 797959 | Ladder rack (1) Passenger side front (1) Drivers side rear | 2 |
| 7 | 796635 | 8" rubber pad | 8 |
| 8 | 82660 | Rivet, 3/16" SS | 32 |


Parts Explosion (Ladder Rack & Chemical Tank) – REV. D.3

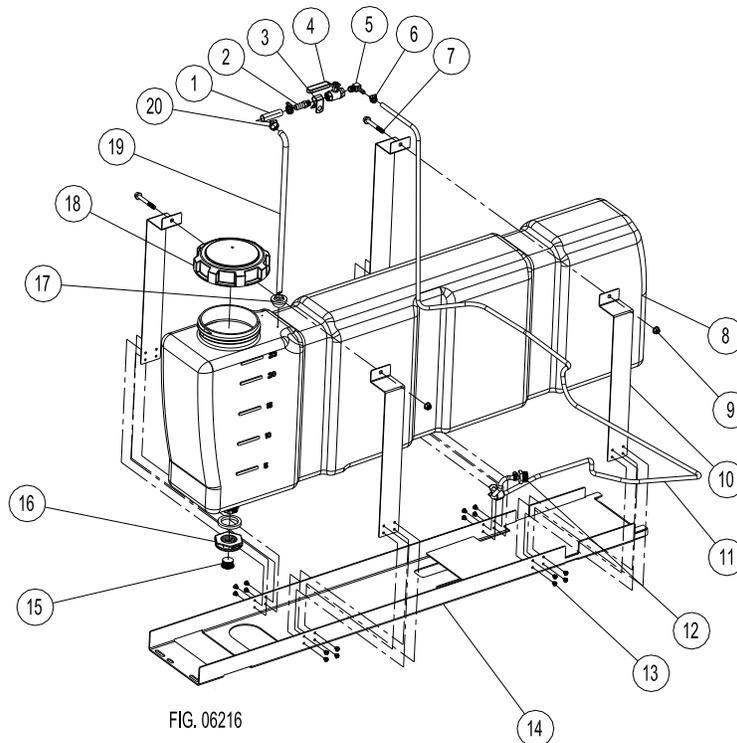

CHEMICAL TANK (FIG. 06216)

| Ref.# | Part# | Description | Qty. |
|-------|--------|---|------|
| 1 | 798651 | Hose, 1/2" x 2" | 1 |
| 2 | 777840 | Fitting, 1/2" x 1/4" MPT | 1 |
| 3 | 777110 | Clip, hose | 1 |
| 4 | 796327 | Ball valve, 1/4" FPT | 1 |
| 5 | 783212 | Elbow, 1/4" MPT x 1/4" HB | 1 |
| 6 | 777834 | Clamp, Hose | 2 |
| 7 | 82623 | Bolt, 5/16-18 x 2-1/2" hex head flange | 2 |
| 8 | 793184 | Tank, chemical | 1 |
| 9 | 82630 | Nut, 5/16-18 nylon insert lock | 8 |
| 10 | 794226 | Chemical tank hold down | 4 |
| 11 | 798338 | Hose, 1/4" braided 7.75' | 1 |
| 12 | 797559 | Fitting, 3/4" MGHT x 1/4" HB | 1 |
| 13 | 82649 | Blind rivet, 3/16" | 16 |
| 14 | 794222 | Chemical tank holder | 1 |
| 15 | 796667 | Plug, 3/4" | 1 |
| 16 | 5370 | Fitting, 3/4" bulkhead | 1 |
| 17 | 35203 | Strainer, 50 mesh | 1 |
| 18 | 792701 | Cap, tank with tether | 1 |
| 19 | 779390 | Tube, suction 1/2" | 1 |
| 20 | 777119 | Clamp, 1/2" | 2 |
| - | 82159 | Screw, hex head self-tapping for tether cap to tank (not shown) | 1 |

Parts Explosion (Fenders) – REV. D.3

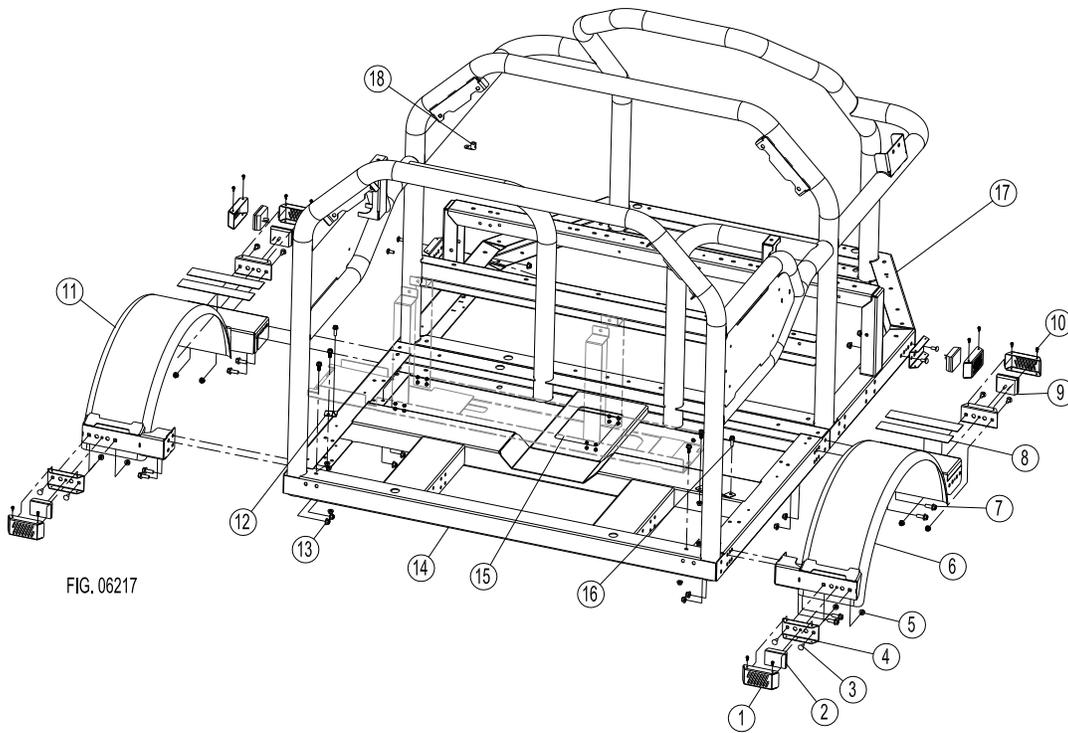

| FENDERS (FIG.06217) | | | |
|----------------------------|--------------|---|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 796431 | Side marker guard | 6 |
| 2 | 795195 | Side marker, red | 2 |
| 3 | 82088 | Bolt, 5/16-18 x 3/4" carriage Gr 5 | 12 |
| 4 | 796420 | Side marker cover | 6 |
| 5 | 82630 | Nut, 5/16-18 nylon insert lock | 14 |
| 6 | 795981 | Single fender, passenger side | 1 |
| 7 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 8 |
| 8 | 779647 | Tape, Anti-Skid (sold by the foot) | 4 |
| 9 | 795193 | Side marker, amber | 4 |
| 10 | 82159 | Screw, hex head self-tapping for tether cap to tank | 12 |
| 11 | 795980 | Single fender, drivers side | 1 |
| 12 | 794225 | Chemical tank support bracket | 2 |
| 13 | 82631 | Nut, 3/8-16 hex flange nylon | 8 |
| 14 | 794154 | 200 gallon water tank platform | 1 |
| 15 | 794222 | Chemical tank holder | 1 |
| 16 | 82016 | Bolt, 5/16-18 x 1" Gr. 5 | 2 |
| 17 | 793000 | Skid (roll cage) weldment | 1 |
| 18 | 32754 | Lug, grounding | 1 |
| - | 82686 | Washer, 1/2" external star (not shown) | 2 |

Parts Explosion (Heat Exchanger/Blower) – REV. D.3

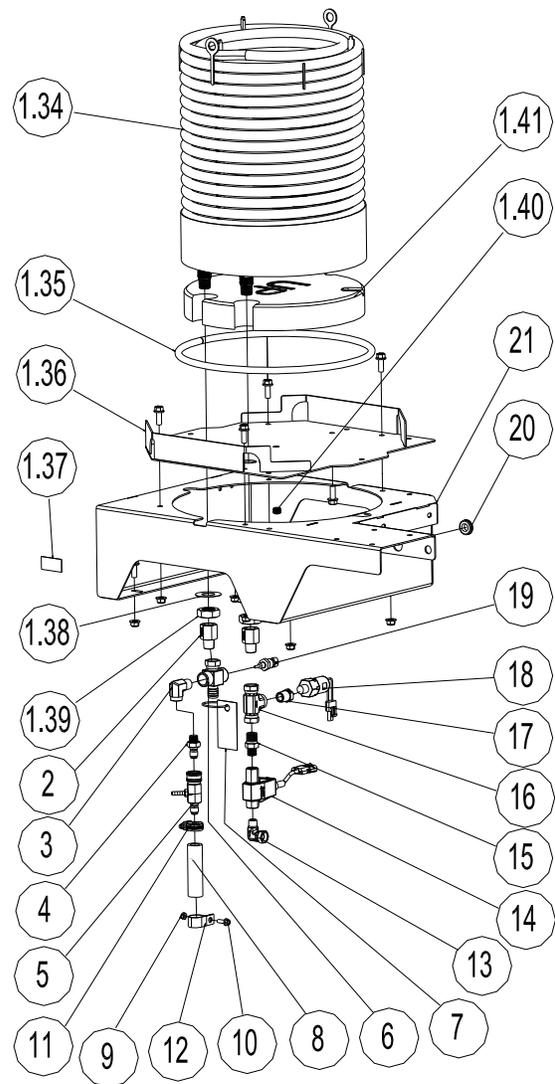
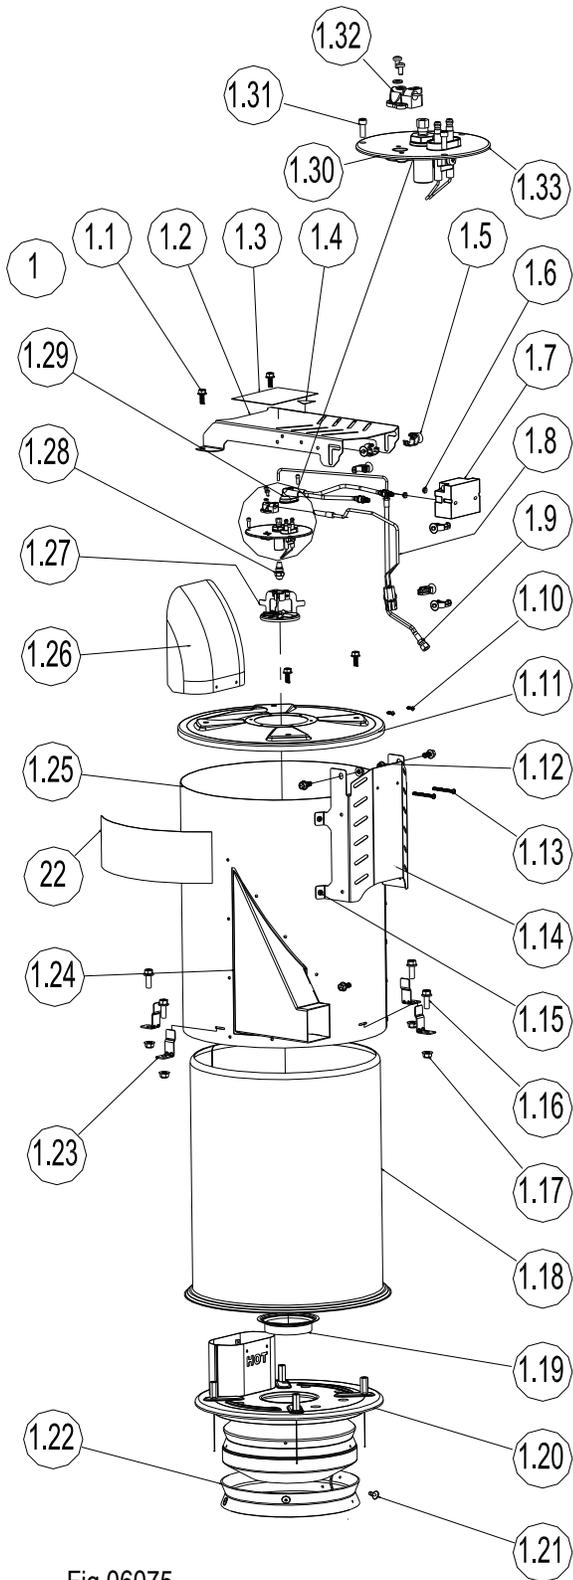



Fig.06075

Parts Explosion (Heat Exchanger/Blower) – REV. D.3

| HEAT EXCHANGER (FIG.06075) | | | |
|----------------------------|--------|--|------|
| Ref.# | Part # | Description | Qty. |
| 1 | 796954 | Medium heat exchanger assembly | 1 |
| 1.1 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 6 |
| 1.2 | 796266 | Fuel line guard, top | 1 |
| 1.3 | 798383 | Decal, Flame Sensor Lens Cleaning Instructions | 1 |
| 1.4 | 796496 | Decal, Electrical Shock Hazard | 1 |
| 1.5 | 793645 | Clip, hose/wire | 6 |
| 1.6 | 82065 | Nut, #10-24 nylon insert lock | 2 |
| 1.7 | 792260 | Igniter, 120V | 1 |
| 1.8 | 792286 | Flame sensor | 1 |
| 1.9 | 794148 | Fuel line | 1 |
| 1.10 | 82004 | Screw, 8-32 x 1/2" button head cap | 2 |
| 1.11 | 797037 | Outer cover | 1 |
| 1.12 | 82630 | Nut, 5/16-18 nylon insert lock | 2 |
| 1.13 | 82245 | Screw, 10-24 x 2" pan phillips thread cutting | 2 |
| 1.14 | 797649 | Fuel line guard, side | 1 |
| 1.15 | 82649 | Blind rivet, 3/16" | 21 |
| 1.16 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 13 |
| 1.17 | 82631 | Nut, 3/8-16 hex flange nylon | 12 |
| 1.18 | 792131 | Inner wrap, | 1 |
| 1.19 | 795763 | Air Jacket Ring, 89mm | 1 |
| 1.20 | 796702 | Inner cover weldment | 1 |
| 1.21 | 82660 | Rivet, 3/16 large flange | 6 |
| 1.22 | 792248 | Gasket | 1 |
| 1.23 | 792135 | Hold down bracket | 4 |
| 1.24 | 797466 | Angled intake duct weldment | 1 |
| 1.25 | 792126 | Outer wrap | 1 |
| 1.26 | 796863 | Rain cap, exhaust vent | 1 |
| 1.27 | 796311 | Diffuser 9 fin 3" weldment | 1 |
| 1.28 | 798336 | Fuel nozzle, 2.00 60a sintered | 1 |
| 1.29 | 792262 | High tension lead wires | 1 |
| 1.30 | 797751 | Combustion head assembly | 1 |
| 1.31 | 82006 | Screw, 10-32 x 1/2" button head cap | 3 |
| 1.32 | 793595 | Flame sensor bracket kit | 1 |
| 1.33 | 792227 | Electrode | 1 |
| 1.34 | 791883 | Coil weldment, 105ft | 1 |
| 1.35 | 792224 | Gasket | 1 |
| 1.36 | 792136 | Base weldment | 1 |
| 1.37 | 797513 | Decal, burn hazard | 1 |
| 1.38 | 82606 | Washer, 1" ID x 2" OD copper | 2 |
| 1.39 | 82605 | Nut, 1"-14 jam | 2 |
| 1.40 | 777838 | Plug, hex 1/4" counter sunk | 1 |
| 1.41 | 792223 | Firebrick insulation | 1 |
| 2 | 779847 | Adapter, 8MP-8FP | 2 |
| 3 | 796493 | Elbow, 1/2 MPT x 3/8" FPT | 1 |

Parts Explosion (Heat Exchanger/Blower) – REV. D.3


| HEAT EXCHANGER (FIG.06075) cont'd | | | |
|-----------------------------------|--------|---|---|
| 4 | 777913 | Nipple, Male O.C. 3/8" | 1 |
| 5 | 797316 | Injector, quick connect (found in hardware bag) | 1 |
| 6 | 798188 | Fitting, Coil outlet manifold with rupture disk | 1 |
| 7 | 798057 | Hangtag, Rupture Disk Warning | 1 |
| 7.1 | 32821 | Lanyard, Hangtag Warning | 1 |
| 8 | 793873 | Hose, 3/4" for manifold with rupture disk | 1 |
| 9 | 82009 | Bolt, 1/4"-20 X 3/4" HHSF | 1 |
| 10 | 82222 | Nut, 1/4"-20 nylon insert lock | 1 |
| 11 | 17141 | Clamp, 3/4" loop | 1 |
| 12 | 779666 | Clamp, 1" loop | 1 |
| 13 | 797199 | Elbow, 3/8" MPT x 3/8" FPT | 1 |
| 14 | 796492 | Switch, Flow 12.0GPM 5000psi WP SSN | 1 |
| 15 | 777337 | Nipple, hex 8MP-6MP | 1 |
| 16 | 793967 | Fitting, 1/2" NPT swivel tee | 1 |
| 17 | 30048 | Reducer, 8MP-6FP | 1 |
| 18 | 793964 | Hi-PSI limit, 6500PSI | 1 |
| 19 | 793966 | Thermistor, 10K0HM | 1 |
| 20 | 787403 | Grommet | 1 |
| 21 | 794562 | Base, heat exchanger | 1 |
| 22 | 798008 | Decal, Branding | 1 |

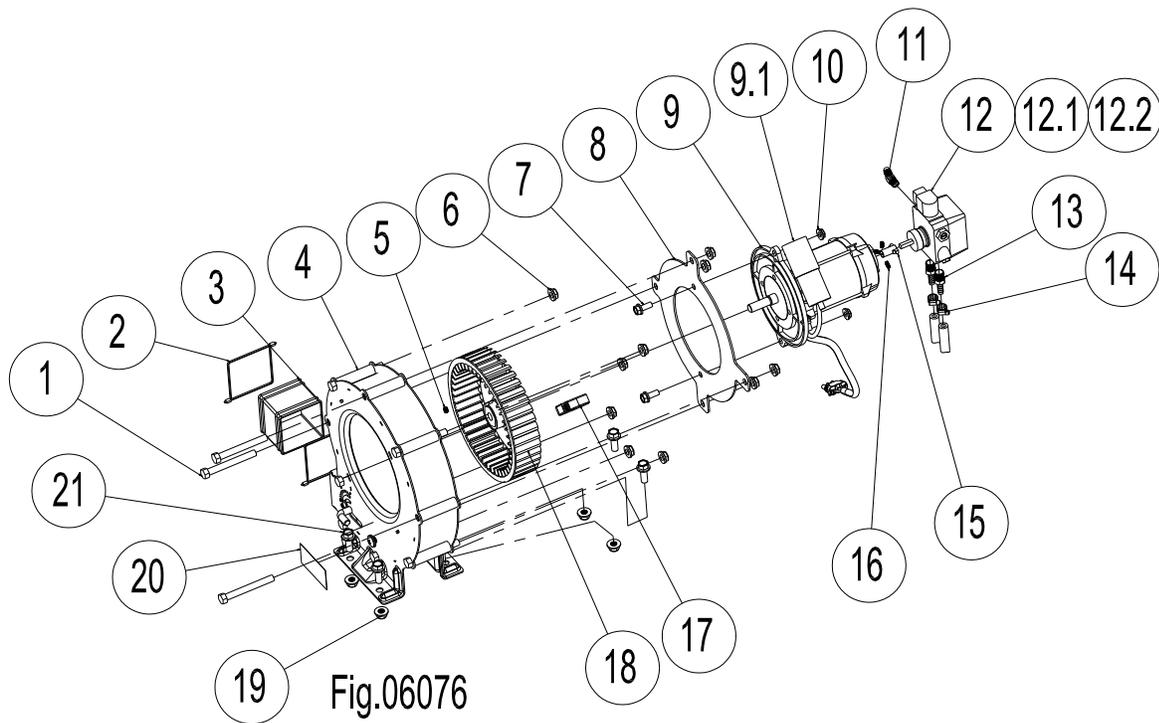

Parts Explosion (Heat Exchanger/Blower) – REV. D.3

| BLOWER HOUSING (FIG.06076) | | | |
|-----------------------------------|---------------|--|-------------|
| Ref.# | Part # | Description | Qty. |
| 1 | 82109 | Bolt, 3/8-16 x 3-1/4" hex head, Gr. 5 | 9 |
| 2 | 82155 | Tie, cable black,50# 11 | 4 |
| 3 | 792288 | Connector, rubber | 1 |
| 4 | 792295 | AC housing assembly | 1 |
| 5 | 82613 | Screw, M6-1x8 set | 1 |
| 6 | 82026 | Nut, 3/8 -16 serrated hex head flange | 10 |
| 7 | 82015 | Bolt, 5/16-18 x 3/4" hex head serrated flange, Gr. 5 | 2 |
| 8 | 792297 | Motor adapter plate, AC | 1 |
| 9 | 796919 | Motor, 350W 120V | 1 |
| 9.1 | 798189 | Capacitor | 1 |
| 10 | 82019 | Nut, 5/16-18 flange hex head | 2 |
| 11 | 794146 | Fitting, 1/4" JIC to 1/8" NPT 45° | 1 |
| 12 | 792265 | Fuel Pump, 120V | 1 |
| 12.1 | 798190 | Coil (not shown) | 1 |
| 12.2 | 798628 | Tube assembly (not shown) | 1 |
| 13 | 777340 | Fitting, 1/4" MPT X 1/4" | 2 |
| 14 | 777834 | Clamp, Hose | 2 |
| 15 | 795015 | Coupler, pump/motor | 1 |
| 16 | 82612 | Screw, M5-.8x10 set | 3 |
| 17 | 797548 | Clamp, 1-3/4" loop | 1 |
| 18 | 792268 | Blower wheel, 200mm | 1 |
| 19 | 82631 | Nut, 3/8-16 hex flange nylon | 4 |
| 20 | 786632 | Decal, Rotating Equipment Warning | 1 |
| 21 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 4 |

Parts Explosion (Pump, Engine, & Generator) – REV. D.3

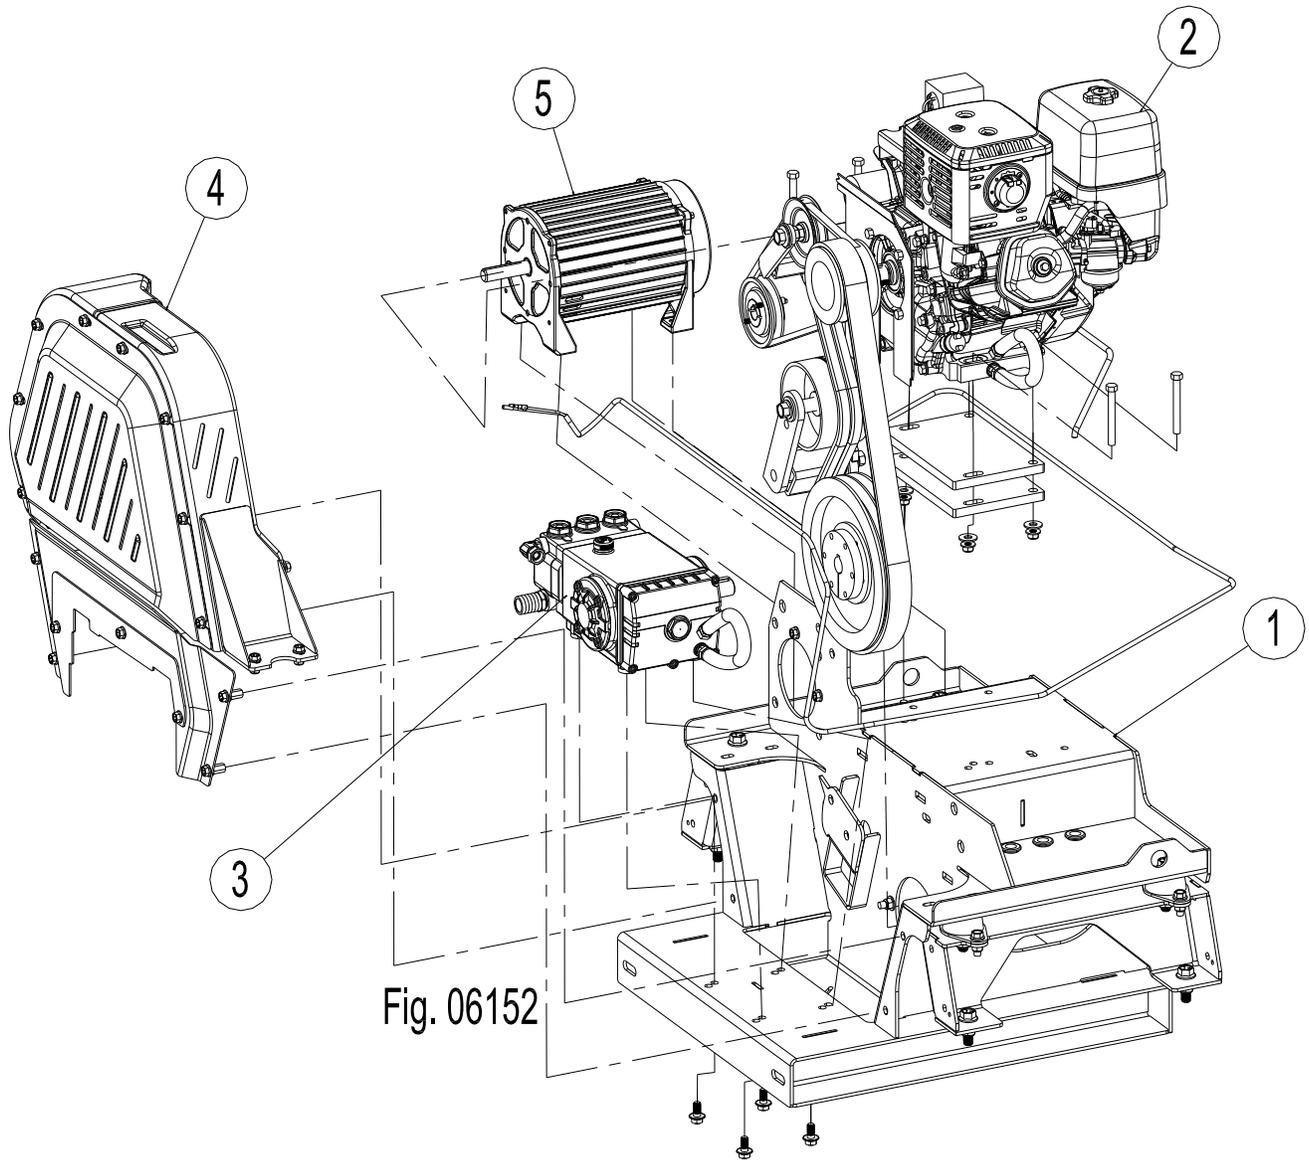

PUMP, ENGINE, GENERATOR (FIG.06152)

| <u>Ref.#</u> | <u>Description</u> | <u>Figure#</u> |
|--------------|--|----------------|
| 1 | Base for the Pump, Engine and Generator Head | 06154 |
| 2 | Engine/Belts/Pulleys | 06153 |
| 3 | Pump | 06155 |
| 4 | Belt Guard | 06156 |
| 5 | Generator | 06157 |

Parts Explosion (Pump, Engine, & Generator) – REV. D.3

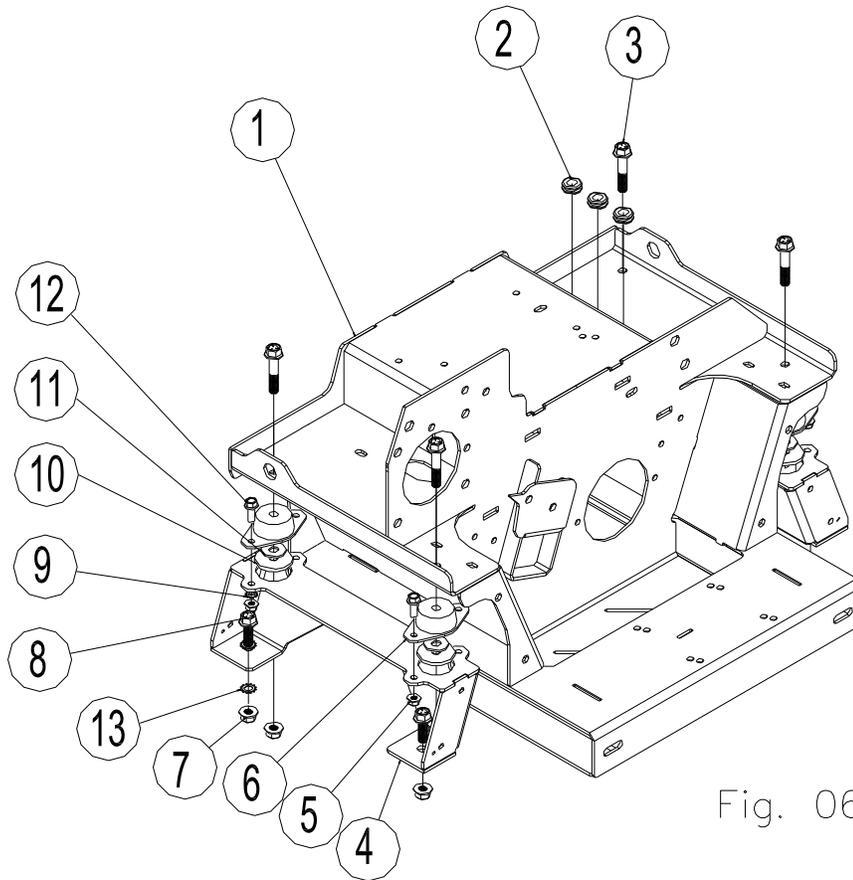


Fig. 06154

| PUMP, ENGINE AND GENERATOR BASE WITH ISO MOUNTS (FIG.06154) | | | |
|--|--------------|---|-------------|
| Ref.# | Part# | Description | Qty. |
| 1 | 792840 | Base for the Pump, Engine and Generator Head | 1 |
| 2 | 795030 | Rubber Grommet | 3 |
| 3 | 82628 | Bolt, 1/2-13 x 2-1/2" hex head | 4 |
| 4 | 793909 | Iso Mount for Pump, Engine and Generator Base | 2 |
| 5 | 82631 | Nut, 3/8-16 hex flange nylon | 8 |
| 6 | 795645 | Iso Mnt Red/Gold 155 Lbs Tech Prod. 51641-4 | 4 |
| 7 | 82632 | Nut, 1/2-13 nylon flange lock | 8 |
| 8 | 82627 | Bolt, 1/2-13 x 1-1/2" hex head | 4 |
| 9 | 82465 | Washer, 3/8" External Star | 1 |
| 10 | 794460 | Washer, snubbing | 4 |
| 11 | 82122 | Washer, 1/2" USS | 4 |
| 12 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 8 |
| 13 | 82686 | Washer, 1/2" External Star | 2 |

Parts Explosion (Pump, Engine, & Generator) – REV. D.3

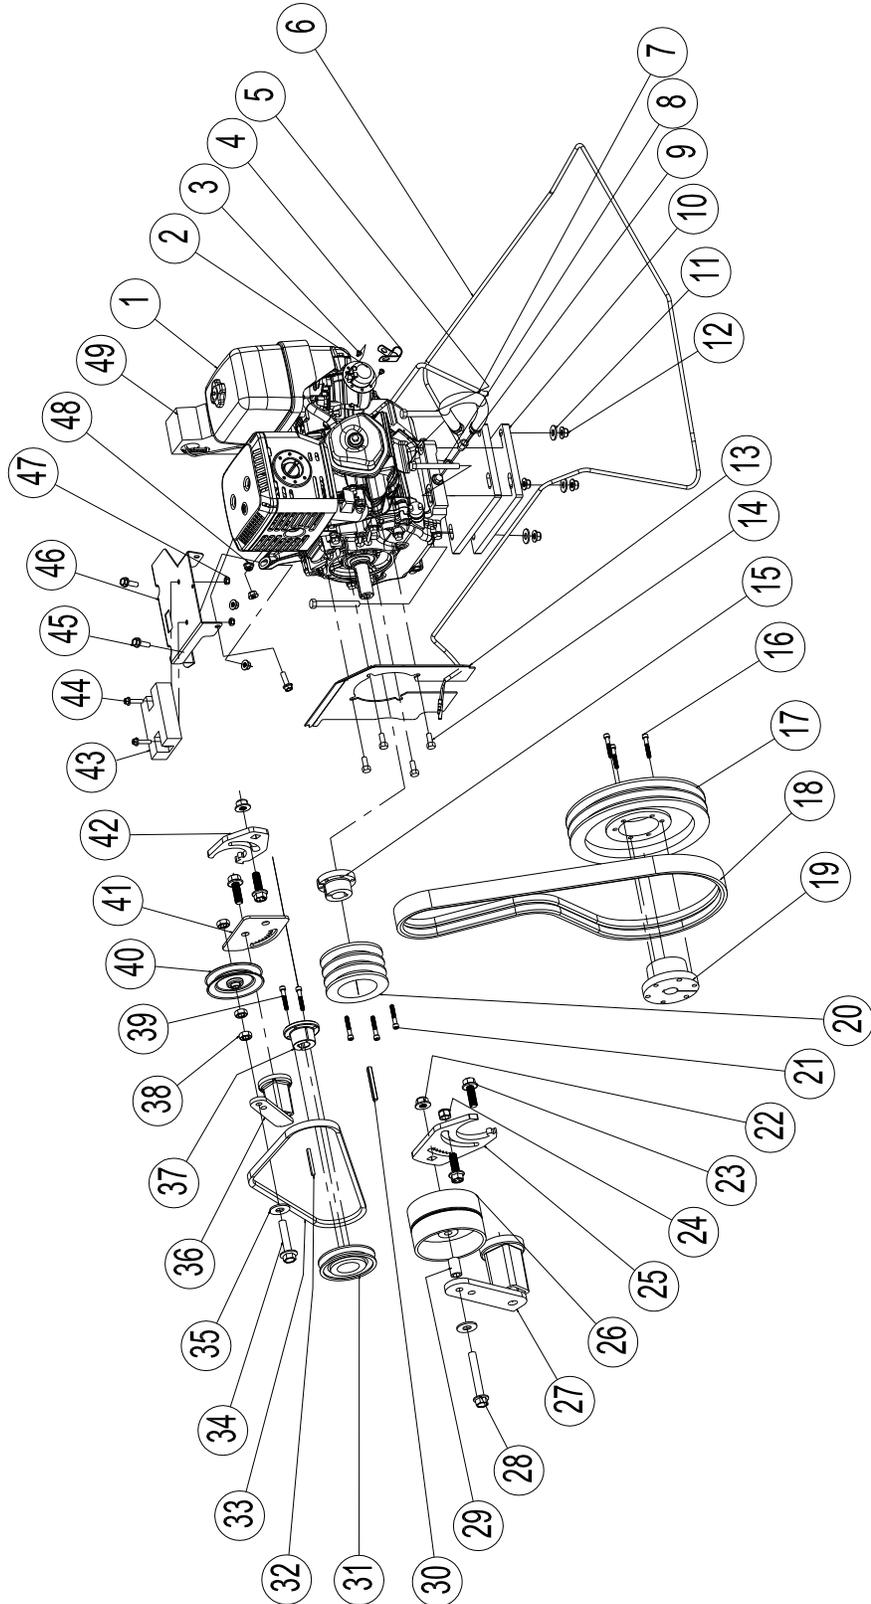


Fig. 06153

Parts Explosion (Pump, Engine, & Generator) – REV. D.3

| ENGINE/BELTS/PULLEYS (FIG.06153) | | | |
|---|---------------|--|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 794463 | Engine, 13hp Honda GX390 | 1 |
| 1.1 | HC17210ZE3505 | Element, Air Cleaner | 1 |
| 1.2 | HC17218ZE3505 | Filter, Outer | 1 |
| 2 | 786549 | Exhaust deflector | 1 |
| 3 | 785907 | Exhaust deflector screw | 2 |
| 4 | 777110 | Clip, hose | 1 |
| 5 | 82109 | Bolt, 3/8-16 x 3-1/4" hex head, Gr. 5 | 4 |
| 6 | 796302 | Wire Harness, Fuel pump | 1 |
| 7 | 796339 | Hose, drain for engine oil | 1 |
| 8 | 796324 | Seal, 1/4" bonded | 1 |
| 9 | 796321 | Adapter, oil drain | 1 |
| 10 | 794140 | Plate, Engine riser | 2 |
| 11 | 82028 | Washer, 3/8" USS flat | 4 |
| 12 | 82631 | Nut, 3/8-16 hex flange nylon | 4 |
| 13 | 793927 | Honda patch plate | 1 |
| 14 | 82086 | Bolt, 5/16"-24 x 3/4" hex head w/patch | 4 |
| 15 | 797920 | Bushing, SH 1 | 1 |
| 16 | 798589 | Bolt with lock washer for Pump bushing | 3 |
| 17 | 794404 | Sheave, 2A9.0B9.4-SK | 1 |
| 18 | 794392 | Belt, 2BX53 | 1 |
| 19 | 779529 | Bushing, SK X 24MM - PW | 1 |
| 20 | 794400 | Sheave, 3A3.6B4.0-SH | 1 |
| 21 | 82636 | Screw, 1/4-20 x 1-1/2" | 3 |
| 22 | 82632 | Nut, 1/2-13 nylon flange lock | 2 |
| 23 | 82627 | Bolt, 1/2-13 x 1-1/2" hex head | 4 |
| 24 | 82037 | Nut, 1/2-13 nylon insert lock | 1 |
| 25 | 793855 | Pump tension adjustment plate | 1 |
| 26 | 794410 | Pulley, idler 5" flat | 1 |
| 27 | 794413 | Tensioner, Lovejoy SE-R27 | 1 |
| 28 | 82474 | Bolt, 1/2-13 x 3-1/2" hex head flange | 1 |
| 29 | 794021 | Spacer, pump idler pulley | 1 |
| 30 | 82144 | Key, 1/4" x 1/4" x 2-1/2" shaft | 1 |
| 31 | 794406 | Sheave, AK41H | 1 |

Parts Explosion (Pump, Engine, & Generator) – REV. D.3

| ENGINE/BELTS/PULLEYS (FIG.06153) cont'd | | | |
|---|---------------|--|---|
| 32 | 82142 | Key, 3/16" x 3/16" x 2" shaft | 1 |
| 33 | 794397 | Belt, AX38 | 1 |
| 34 | 82035 | Bolt, 1/2-13 x 2-1/2" hex head serrated flange | 1 |
| 35 | 82122 | Washer, 1/2" USS | 2 |
| 36 | 794412 | Tensioner, Lovejoy SE-R18 | 1 |
| 37 | 33562 | Bushing, H-3/4 | 1 |
| 38 | 82653 | Nut, 1/2-13 prevailing torque jam | 3 |
| 39 | 798590 | Bolt with lock washer for Generator bushing | 2 |
| 40 | 794411 | Pulley, idler 4" A groove | 1 |
| 41 | 794020 | Generator tensioner spacer plate | 1 |
| 42 | 793913 | Generator tension adjustment plate | 1 |
| 43 | HC31620ZG5033 | Honda rectifier (comes with complete engine) | 1 |
| 44 | 82010 | Bolt, 1/4-20 x 1" | 2 |
| 45 | 82016 | Bolt, 5/16 - 18 x 1" | 4 |
| 46 | 796632 | Gas tank filler bracket/rectifier mount plate | 1 |
| 47 | 82222 | Nut, 1/4-20 nylon insert lock | 2 |
| 48 | 82630 | Nut, 5/16-18 nylon insert lock | 4 |
| 49 | 798265 | Key switch with lead wire | 1 |

Parts Explosion (Pump, Engine, & Generator) – REV. D.3


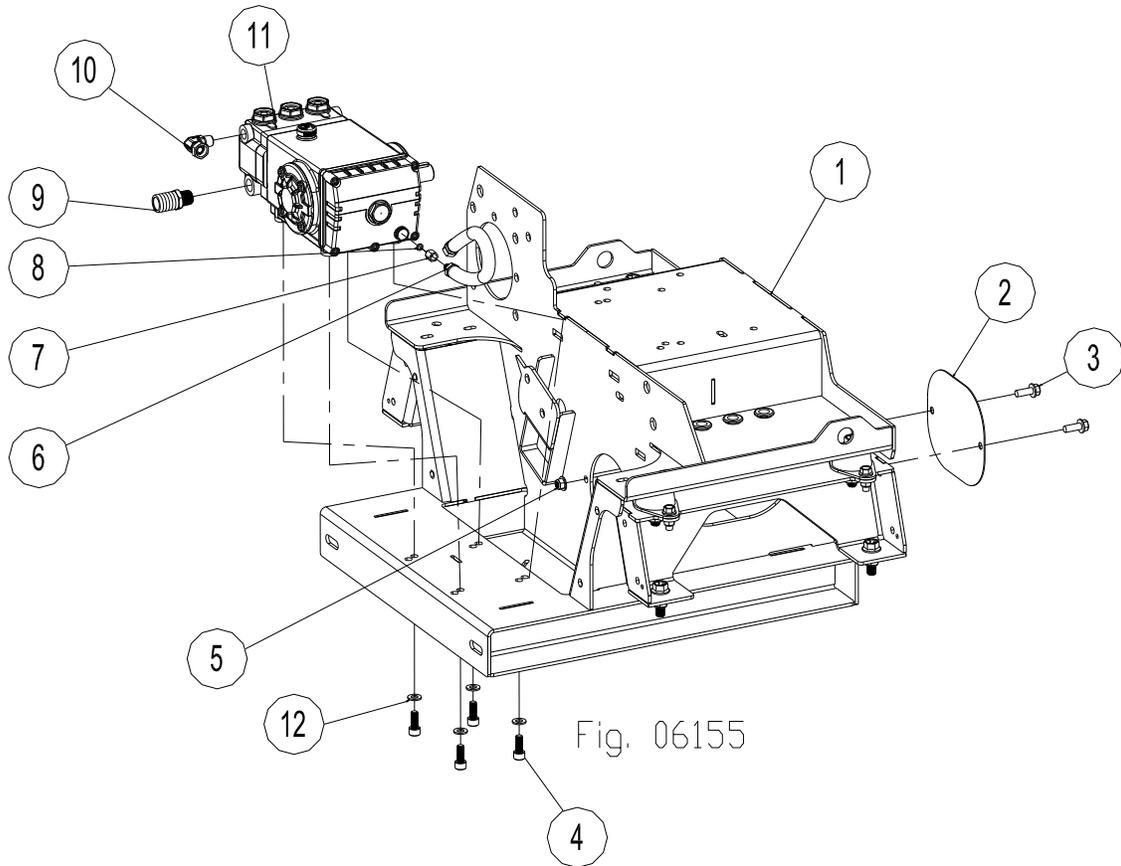


Fig. 06155

| PUMP (FIG.06155) | | | |
|-------------------------|--------------|--|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 792840 | Base for the Pump, Engine and Generator Head | 1 |
| 2 | 796082 | Patch plate | 1 |
| 3 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 2 |
| 4 | 82706 | Bolt, M10 -1.5 x 25mm SHCS | 4 |
| 5 | 82631 | Nut, 3/8-16 hex flange nylon | 2 |
| 6 | 796339 | Hose, drain for engine oil | 1 |
| 7 | 796320 | Oil drain adapter | 1 |
| 8 | 796326 | Bonded Seal 1/4 | 1 |
| 9 | 794042 | Fitting, 1/2" MNPT x 1" hose barb, steel | 1 |
| 10 | 797199 | Elbow, 3/8 MPT x 3/8 FPT swivel | 1 |
| 11 | 794388 | General Pump 4 @ 3000 BD Left Crank (See Parts Explosion Pump) | 1 |
| 12 | 82201 | Washer, M10 Flat | 4 |

Parts Explosion (Pump, Engine, & Generator) – REV. D.3

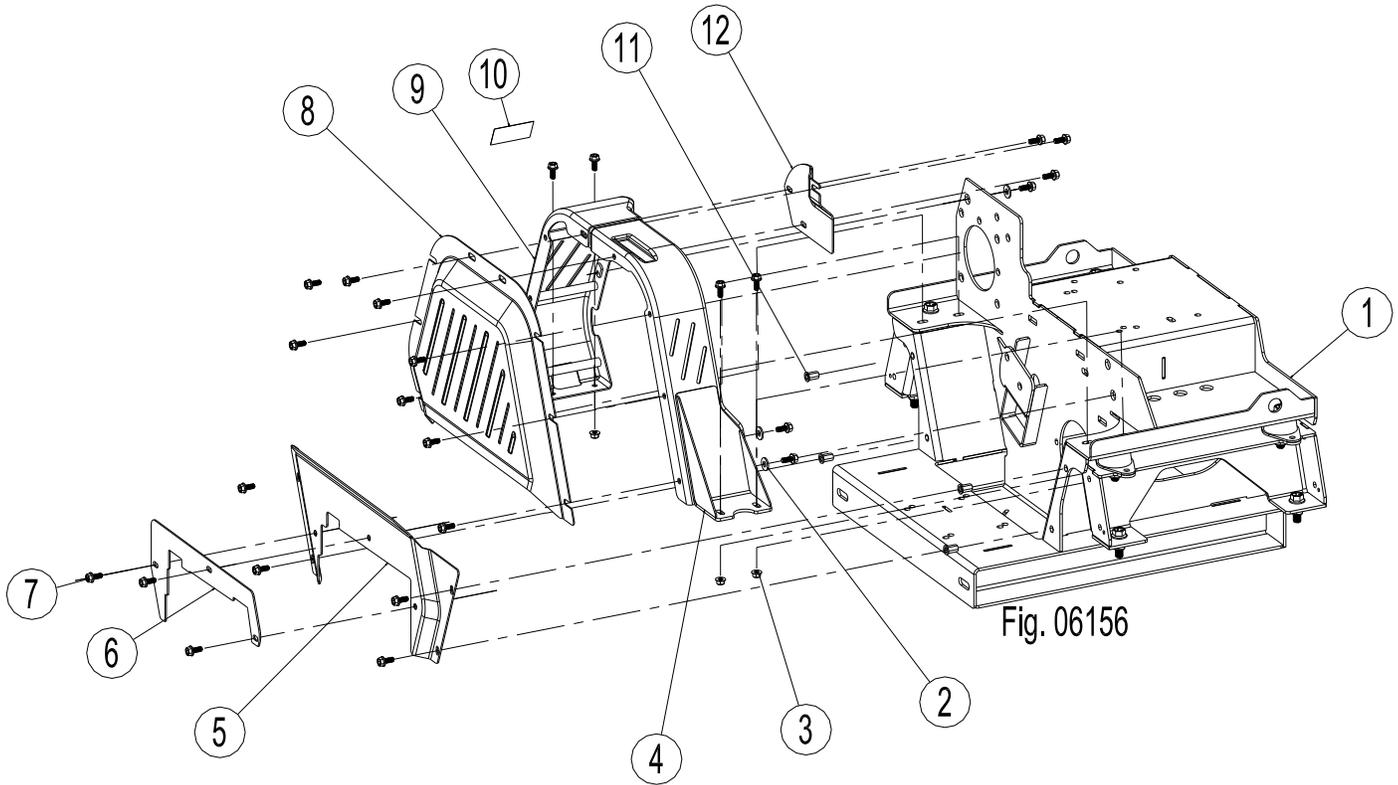

| BELT GUARD (FIG. 06156) | | | |
|--------------------------------|--------------|---|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 792840 | Base for the Pump, Engine and Generator Head | 1 |
| 2 | 82021 | Washer, 5/16" USS | 3 |
| 3 | 82630 | Nut, 5/16-18 nylon insert lock | 4 |
| 4 | 793917 | Belt guard (right) | 1 |
| 5 | 794014 | Pump plate | 1 |
| 6 | 794013 | Belt guard pump patch plate (Honda models only) | 1 |
| 7 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 25 |
| 8 | 793985 | Belt guard front vover | 1 |
| 9 | 793827 | Belt guard (left) | 1 |
| 10 | 786632 | Decal, Rotating Equipment Warning | 1 |
| 11 | 82650 | Rivet, 5/16-18 UNC x .771 | 4 |
| 12 | 793968 | Belt guard patch | 1 |

Parts Explosion (Pump, Engine, & Generator) – REV. D.3


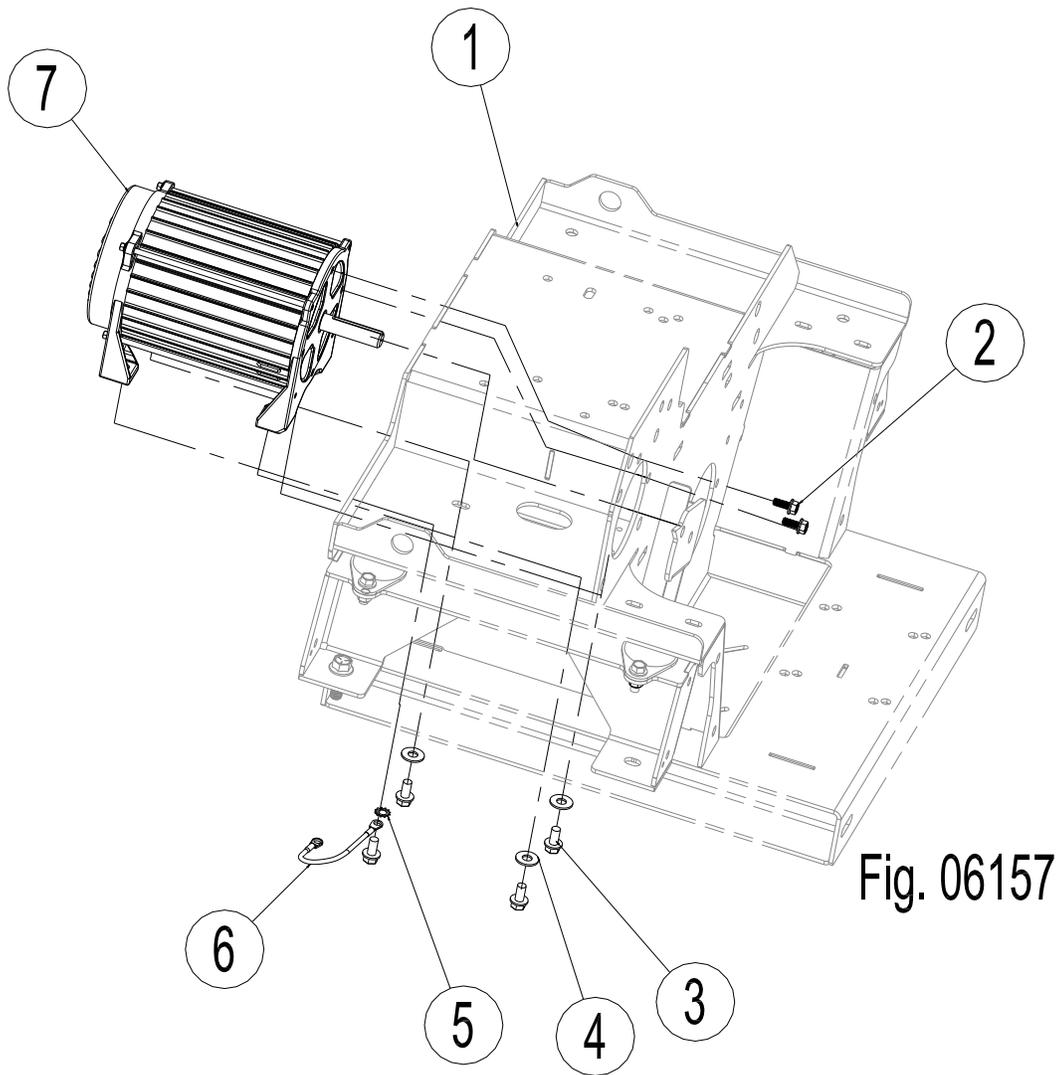


Fig. 06157

GENERATOR HEAD (FIG. 06157)

| Ref.# | Part# | Description | Qty. |
|-------|--------|---|------|
| 1 | 792840 | Base for the Pump, Engine and Generator Head | 1 |
| 2 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 2 |
| 3 | 82022 | Bolt, 3/8-16 x 3/4" hex head serrated flange | 4 |
| 4 | 82028 | Washer, 3/8" USS flat | 4 |
| 5 | 82465 | Washer, 3/8" external star | 1 |
| 6 | 306459 | Wire, engine ground | 1 |
| 7 | 795080 | 2000W Belt Drive Generator Head (See Parts Explosion Generator) | 1 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3

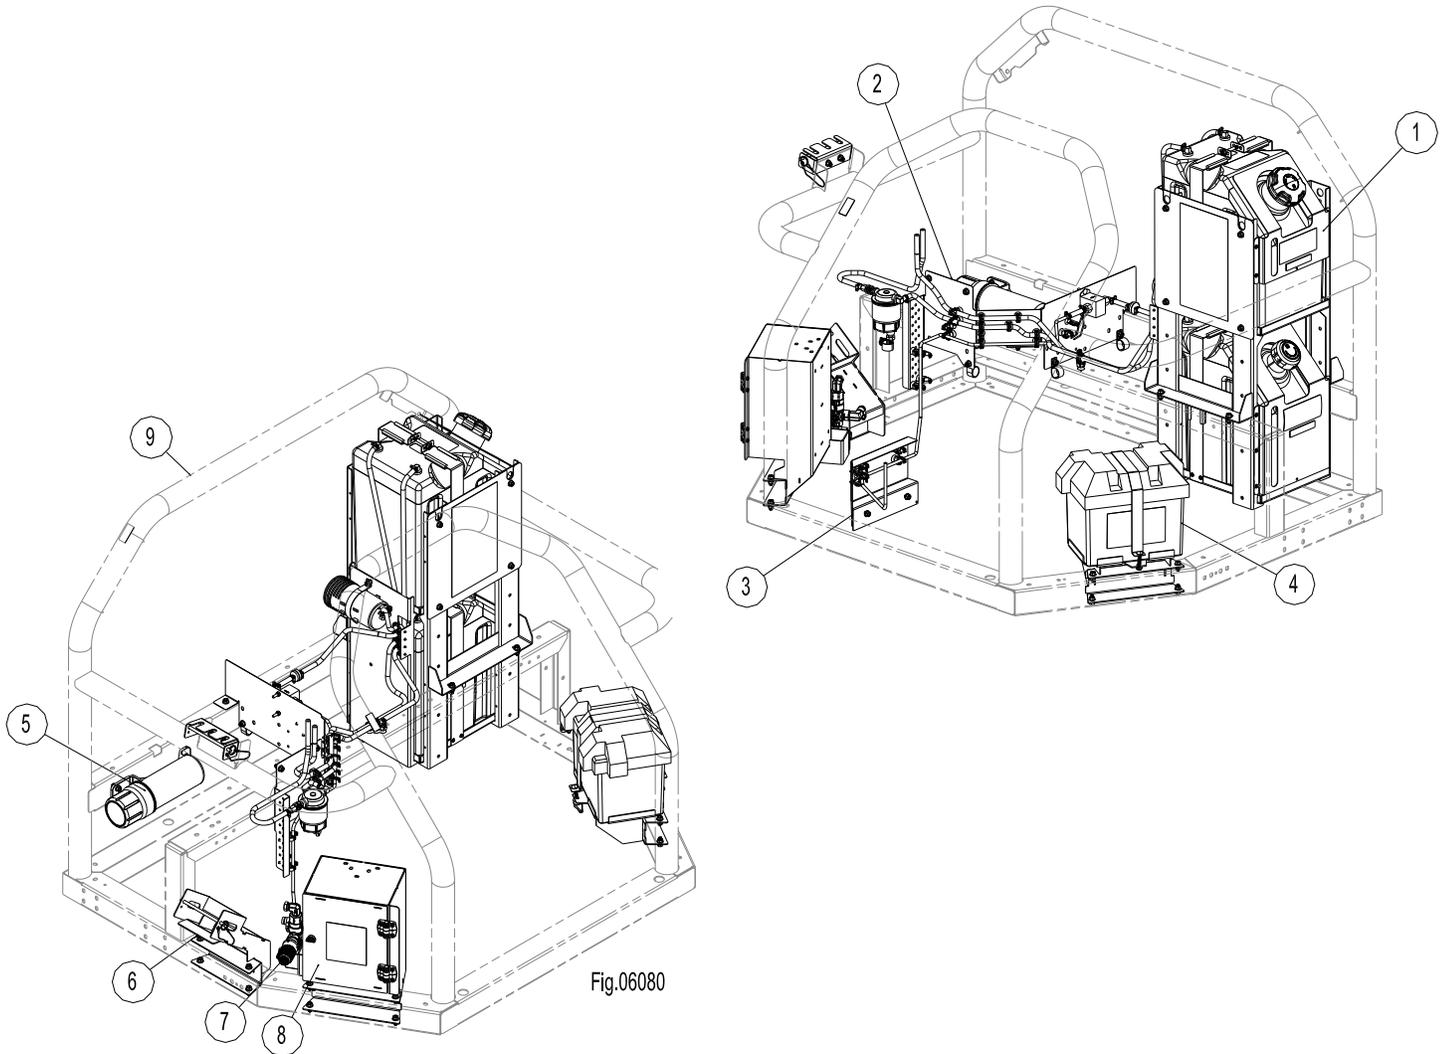

Skid (Roll Cage) (Fig.06080)

| <u>Ref.#</u> | <u>Description</u> | <u>Figure#</u> |
|--------------|---|----------------|
| 1 | Fuel Tank Housing | 06081 |
| 2 | Fuel Routing Management System | 06159 |
| 3 | Fuel Line Routing Burner Fuel Line Routing Engine Fuel Line Routing | 06094 06095 |
| 4 | Battery Housing | 06082 |
| 5 | Manual Tube | 06085 |
| 6 | Gun Mount Spray Gun | 06084 06077 |
| 7 | Unloader | 06083 |
| 8 | Control Box Housing | 06086 |
| 9 | Skid (Roll Cage) Weldment | 06217 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3


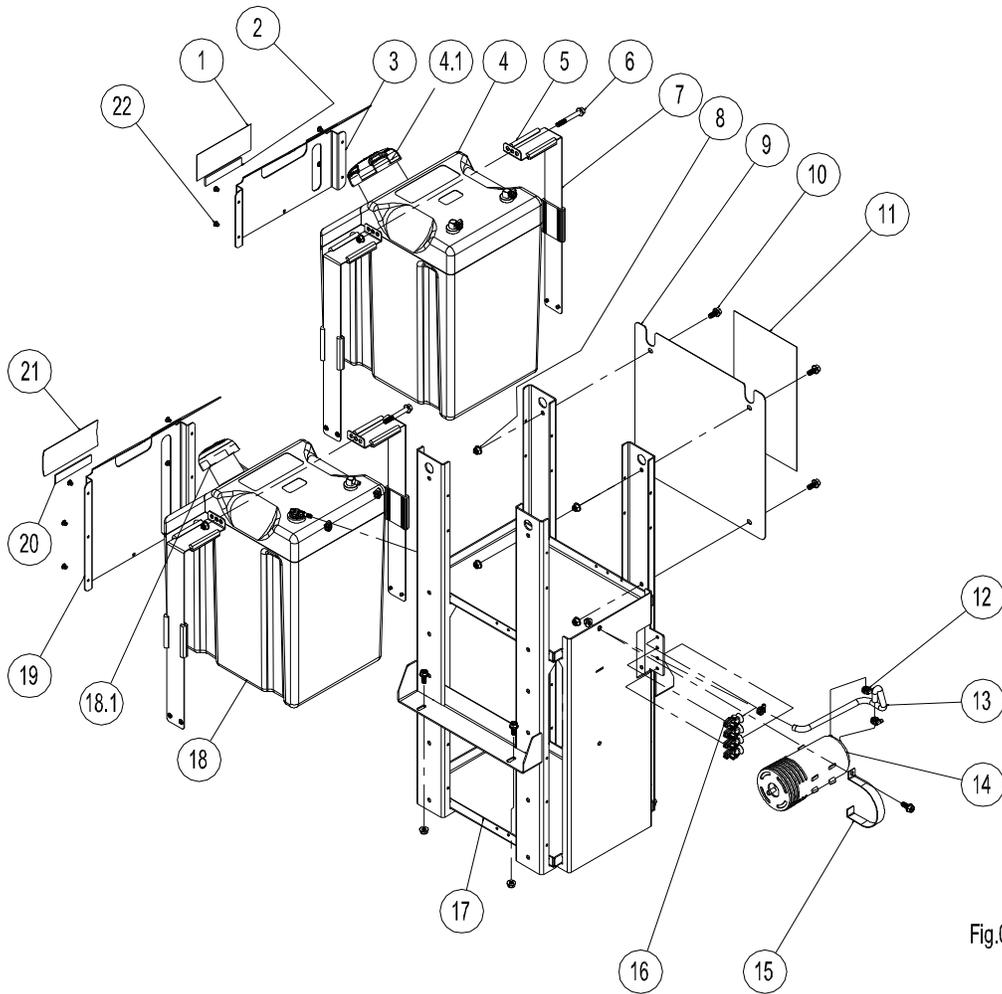


Fig.06081

| FUEL TANK HOUSING (FIG.06081) | | | |
|--------------------------------------|--------------|--|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 787827 | Decal, Diesel, Kerosene or Fuel Oil Only | 1 |
| 2 | 796861 | Decal, Burner Fuel | 1 |
| 3 | 796607 | Burner tank front cover | 1 |
| 4 | 793219 | Burner fuel tank with cap | 1 |
| 4.1 | 793225 | Burner fuel tank cap with tether | 1 |
| 5 | 793643 | Tank strap protector | 8 |
| 6 | 82623 | Bolt, 5/16-18 x 2-1/2" hex head flange | 2 |
| 7 | 794380 | Tank strap tension arm | 4 |
| 8 | 82630 | Nut, 5/16-18 nylon insert lock | 11 |
| 9 | 794887 | Heat shield | 1 |
| 10 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 9 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3


| FUEL TANK HOUSING (FIG.06081) Cont'd | | | |
|--------------------------------------|--------|---|----|
| 11 | 782325 | Decal, Danger and Warning Decal | 1 |
| 12 | 777834 | Clamp, Hose | 8 |
| 13 | 798218 | Hose, 1/4" Fuel Line – Return Line from Carbon Canister to Tank (1' long) | 1 |
| 14 | 783016 | Carbon canister (800cc) | 1 |
| 15 | 793914 | Carb. can strap | 1 |
| 16 | 793645 | Clip, hose/wire | 3 |
| 17 | 793755 | Fuel tray housing | 1 |
| 18 | 793588 | Engine fuel tank with cap | 1 |
| 18.1 | 792908 | Engine fuel tank cap with tether | 1 |
| 19 | 796140 | Engine tank front cover | 1 |
| 20 | 796862 | Decal, Engine Fuel Tank | 1 |
| 21 | 777666 | Decal, Gasoline Only | 1 |
| 22 | 82649 | Blind rivet, 3/16" | 18 |
| 23 | 82301 | Washer, 5/16" external star (not shown) | 2 |

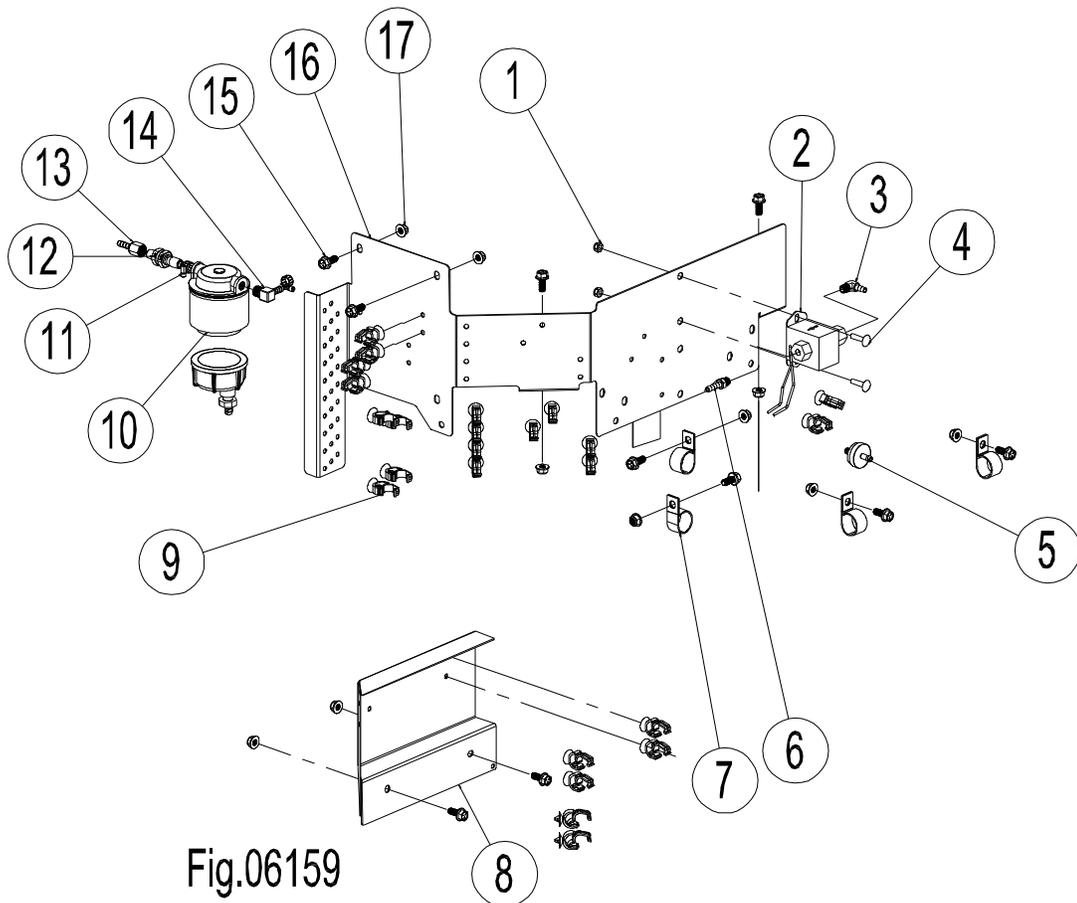

Parts Explosion (Skid) (Roll Cage) – REV. D.3

| FUEL ROUTING MANAGEMENT SYSTEM (FIG.06159) | | | |
|---|--------------|--------------------------------------|-------------|
| Ref.# | Part# | Description | Qty. |
| 1 | 82222 | Nut, 1/4-20 nylon insert lock | 2 |
| 2 | 798575 | Fuel Pump Assembly, 2-3.5PSI 15GPH | 1 |
| 2.1 | 32417 | Wire, Snap plug terminal, male | 1 |
| 2.2 | 32420 | Wire, Snap plug terminal, female | 1 |
| 3 | 796161 | Elbow, 1/4" x 1/8" hose barb | 1 |
| 4 | 82315 | Bolt, 1/4 -20 x 1" carriage | 2 |
| 5 | 30755 | Filter, fuel, red, 150 microns | 1 |
| 6 | 796162 | Fitting, 1/4" x 1/8" NPT | 1 |
| 7 | 779666 | Clamp, 1" loop | 4 |
| 8 | 793210 | Frame rail clip mount | 1 |
| 9 | 793645 | Clip, hose/wire | 24 |
| 10 | 32308 | Filter, Fuel, water separator | 1 |
| 10.1 | RCR12T | Filter element | 1 |
| 11 | 777834 | Clamp, Hose | 6 |
| 12 | 795027 | Fitting, 1/4" NPT Bulkhead | 1 |
| 13 | 796282 | Fitting, 1/4" HB x 1/4" | 1 |
| 14 | 783212 | Elbow, 1/4" MPT x 1/4" HB | 1 |
| 15 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 10 |
| 16 | 793206 | Fuel hose bracket | 1 |
| 17 | 82630 | Nut, 5/16-18 nylon insert lock | 10 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3

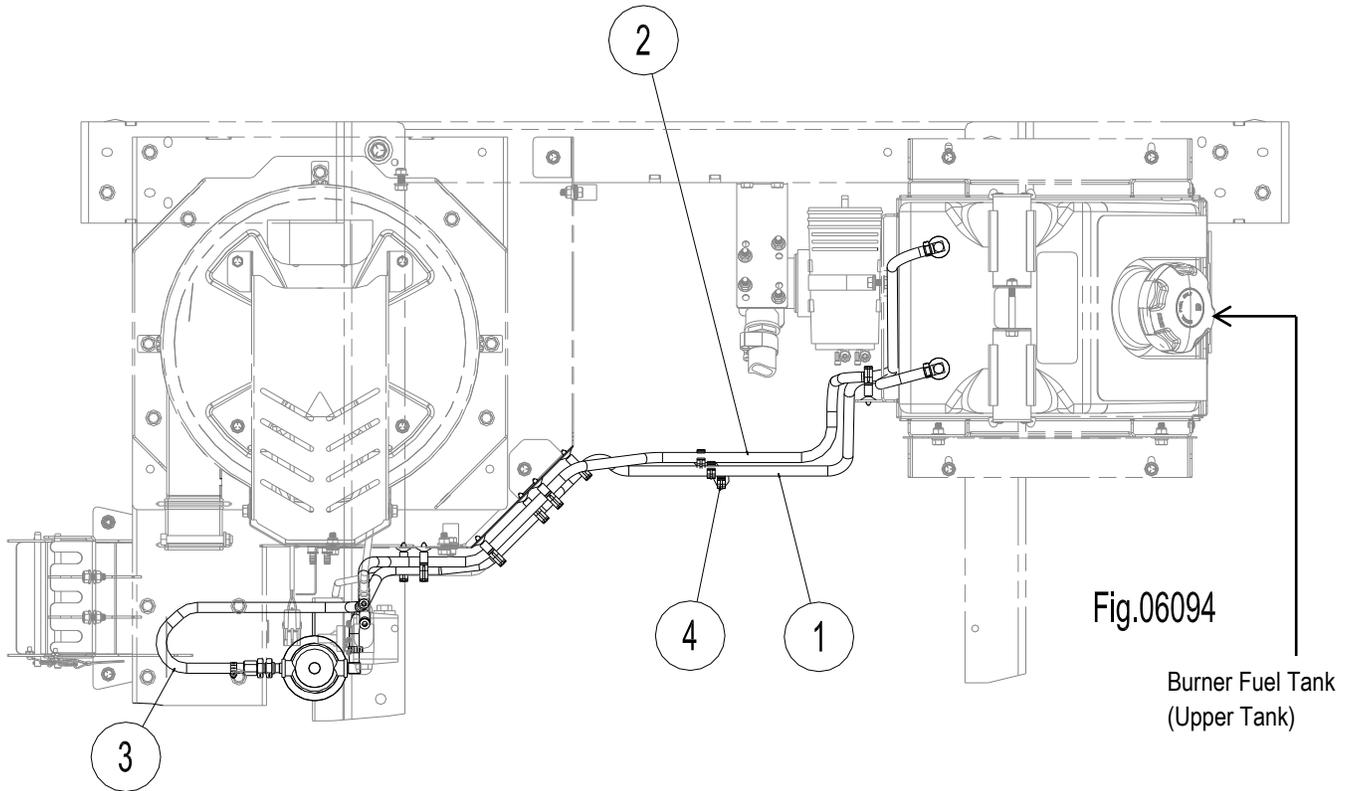

BURNER FUEL LINE ROUTING (FIG.06094)

| Ref. # | Part# | Description | Qty. |
|--------|--------|--|------|
| 1 | 798213 | Hose, 1/4" Fuel Line – Burner Fuel Supply Line (5.25' long) | 1 |
| 2 | 798214 | Hose, 1/4" Fuel Line – Burner Fuel Return Line (5.67' long) | 1 |
| 3 | 798215 | Hose, 1/4" Fuel Line – Filter to Fuel Pump Line (1.92' long) | 1 |
| 4 | 793645 | Clip, hose/wire | 3 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3


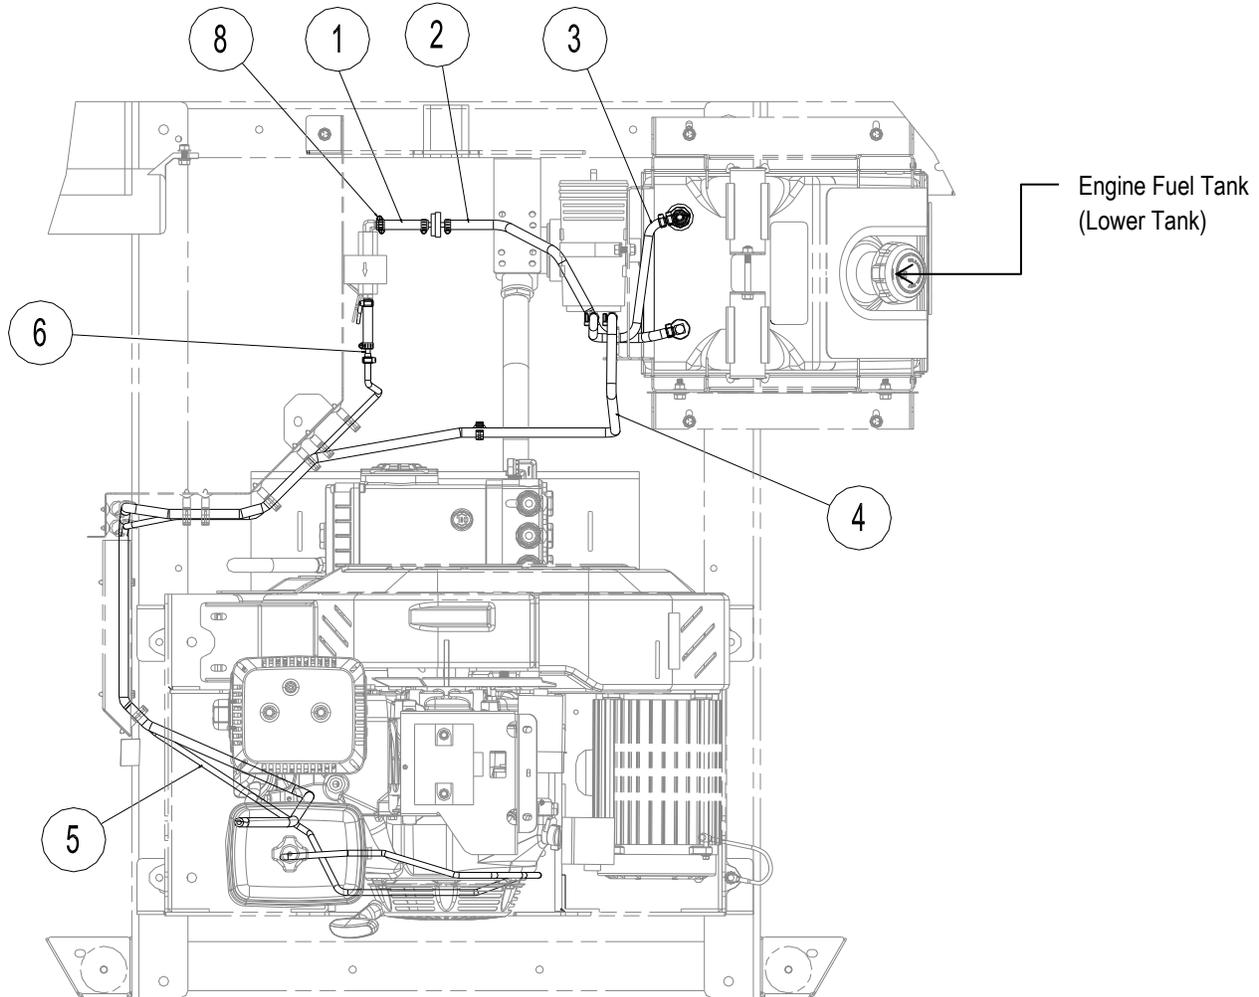


Fig.06095

ENGINE FUEL LINE ROUTING (FIG.06095)


| Ref. # | Part# | Description | Qty. |
|--------|--------|--|------|
| 1 | 798216 | Hose, 1/4" Fuel Line – Engine Fuel Supply Line (.32' long) | 2 |
| 2 | 798217 | Hose, 1/4" Fuel Line – Supply Line from Fuel Filter to Tank (1.42' long) | 1 |
| 3 | 798218 | Hose, 1/4" Fuel Line – Return Line from Carbon Canister to Tank (1' long) | 1 |
| 4 | 798219 | Hose, 1/4" Fuel Line – Return Line from Engine to Carbon Canister (8.25' long) | 1 |
| 5 | 798638 | Hose, 4.5MM Fuel Line (By Ft) - Supply Line - from Engine to Hose Mender (7.5' long) | 1 |
| 6 | 785767 | Hose Mender, 1/4" x 3/16" Nylon | 1 |
| 7 | 777135 | 3/8" Split Loom (not shown) sold by the inch – (36" long) | 1 |
| 8 | 777834 | Clamp, Hose | 8 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3

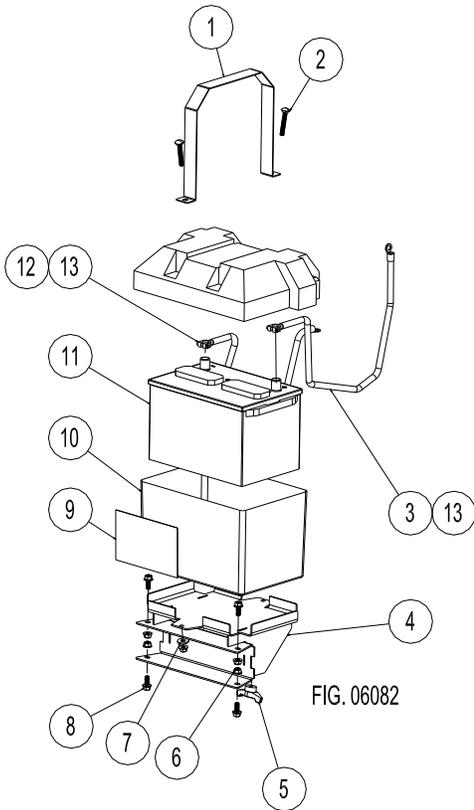


| BATTERY HOUSING (FIG.06082) | | | |
|------------------------------------|--------------|--|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 777489 | Battery strap | 1 |
| 2 | 82233 | Bolt, 5/16-18 x 2" carriage | 2 |
| 3 | 777667 | Cable, battery red with top post terminal | 1 |
| 4 | 794449 | Battery box tray weldment | 1 |
| 5 | 38578 | T-handle knob | 1 |
| 6 | 82630 | Nut, 5/16-18 nylon insert lock | 5 |
| 7 | 82021 | Washer, 5/16" USS | 1 |
| 8 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 4 |
| 9 | 782397 | Decal, Battery Warning Decal | 1 |
| 10 | 777647 | Standard battery box with lid | 1 |
| 11 | 799018 | Top post battery | 1 |
| 12 | 777668 | Cable, battery black with top post terminal | 1 |
| 13 | 777135 | Split loom, 3/8" on battery cables 18" for each battery cable (not shown) | 2 |


| MANUAL TUBE (FIG.06085) | | | |
|--------------------------------|--------------|--------------------------------------|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 788040 | Manual Tube | 1 |
| 2 | 82630 | Nut, 5/16-18 nylon insert lock | 2 |
| 3 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 2 |

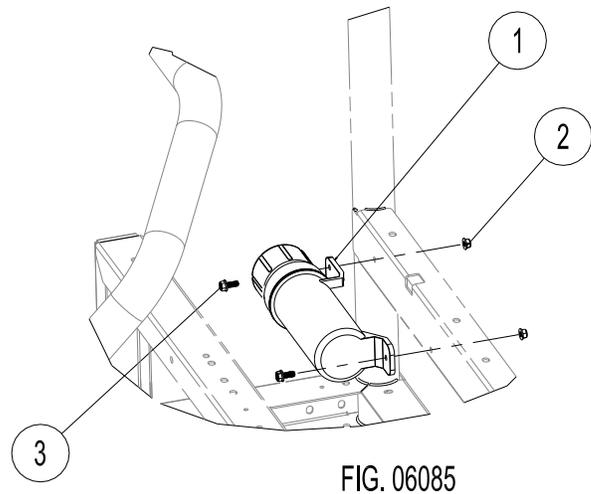

Parts Explosion (Skid) (Roll Cage) – REV. D.3

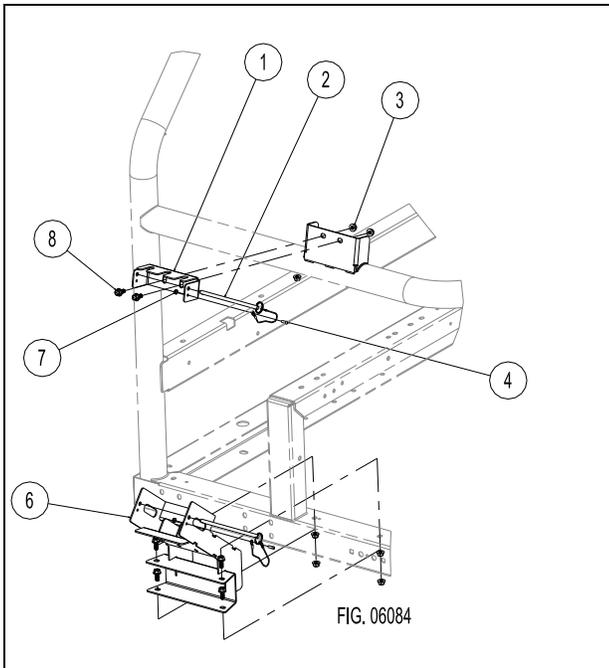

| SPRAY GUN MOUNT (FIG.06084) | | | |
|-----------------------------|--------|--------------------------------------|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 796940 | Upper gun mount (Lance Rest) | 1 |
| 2 | 797021 | Detent pin with lanyard | 2 |
| 3 | 82630 | Nut, 5/16-18 nylon insert lock | 6 |
| 4 | 82059 | 10-24 x 1/2" Phillips Head Screw | 2 |
| 5 | 796612 | Lower gun mount | 1 |
| 6 | 82065 | Nut, #10-24 nylon insert lock | 2 |
| 7 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 6 |

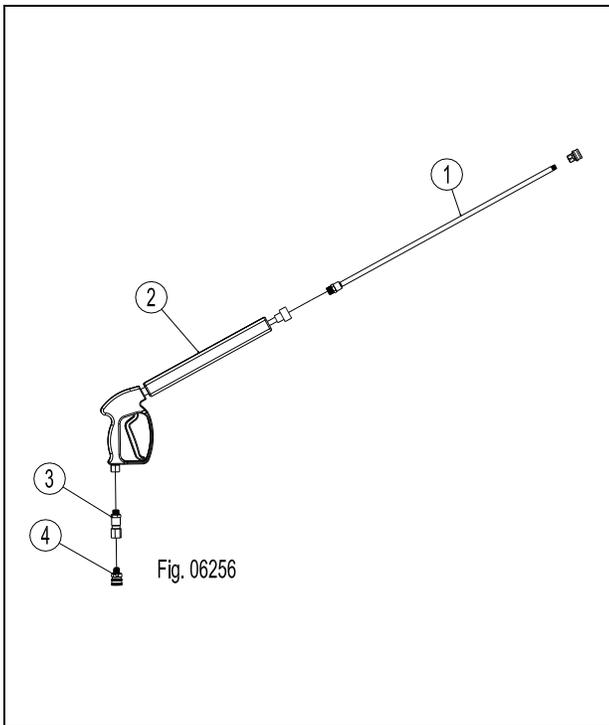

| SPRAY GUN (FIG.06256) | | | |
|-----------------------|-----------|--|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 791279 | Lance, 28" Viton coupler | 1 |
| 1.1 | 796379 | O-Ring (not shown) | 1 |
| 1.2 | 791274 | 1/4" Coupler with O-Ring (not shown) | 1 |
| 2 | 796731 | Gun With Lance | 1 |
| 2.1 | GP2701015 | O-Ring (not shown) | 1 |
| 2.2 | GP2701024 | O-Ring (not shown) | 2 |
| 2.3 | GP2710004 | O-Ring (not shown) | 1 |
| 3 | 796634 | Gun swivel | 1 |
| 4 | 780455 | Fitting, 3/8" quick connect x 3/8" MPT | 1 |
| 4.1 | GP2701020 | O-Ring (not shown) | 1 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3

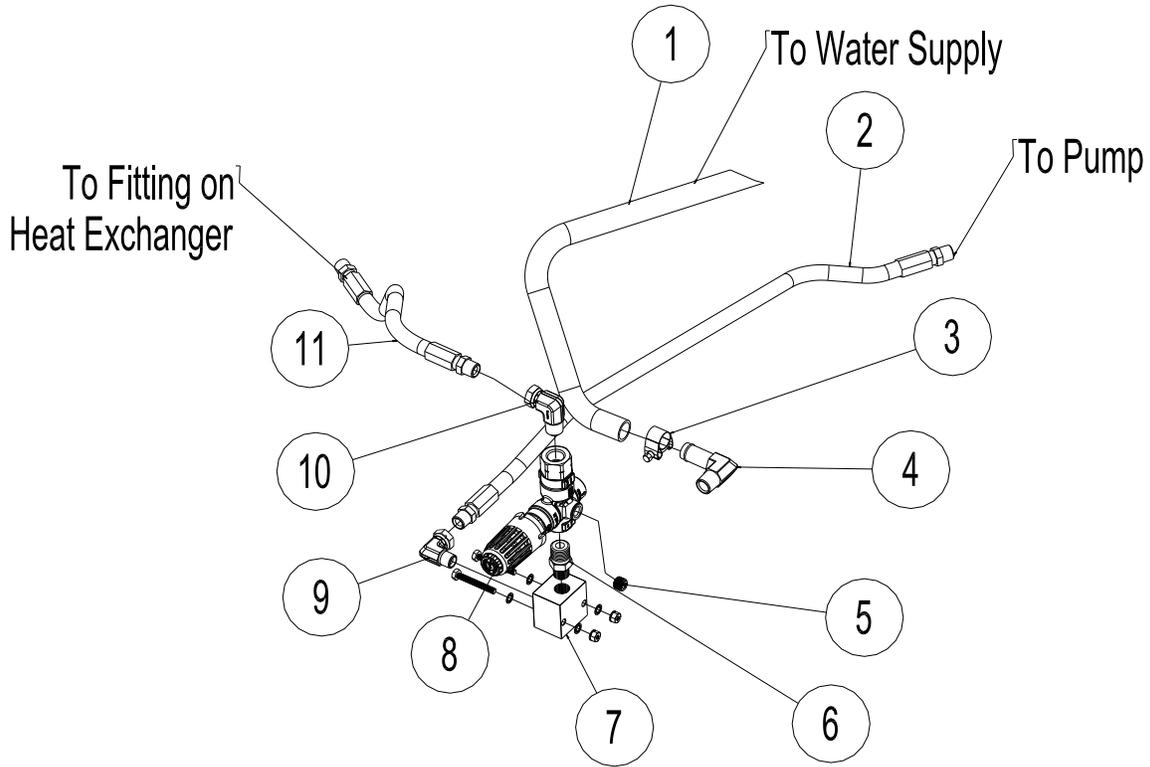


FIG. 06083

| UNLOADER (FIG.06083) | | | |
|----------------------|--------|--|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 798639 | Hose, 3/4" x 4' | 1 |
| 2 | 798264 | Hose ,3/8" X 31' | 1 |
| 3 | 796618 | Clamp, T-bolt 1.06" - 1.14" OD | 1 |
| 4 | 796160 | Elbow, 1/2" MPT X 3/4" beaded | 1 |
| 5 | 777838 | Plug, hex 1/4" counter sunk | 1 |
| 6 | 777337 | Nipple, hex 8MP-6MP | 1 |
| 7 | 777409 | Unloader block mount with bolts & nuts | 1 |
| 8 | 796502 | Unloader valve | 1 |
| 9 | 797199 | Elbow, 3/8" MPT x 3/8" FPT swivel | 1 |
| 10 | 797203 | Elbow, 1/2" MPT x 3/8" FPT swivel | 1 |
| 11 | 796513 | Hose, 3/8 x 15" - Connects to Part # 797199 in heat exchanger parts explosion. | 1 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3

| UNLOADER PARTS LIST (PART #796502) Cont'd | | | |
|---|--------------|--|---|
| 13 | GPY10329285 | O-ring | 1 |
| 14 | GPY60048831 | Shutter pin, brass + O-ring | 1 |
| 15 | GPY60048951 | Spring, 0.8x13.3x27, SST | 1 |
| 16 | GPY60185231 | Shutter coupling, 1/2" f, NPT, brass | 1 |
| 17 | GPY10307260 | O-Ring, 1.78x21.95 | 1 |
| 18 | GPY60172684 | Valve regulating knob | 1 |
| 19 | GPY60172731 | Valve regulating insert, brass | 1 |
| 20 | GPY60097561 | Spring, 4.5x15.8x47 | 1 |
| 21 | GPY60181331 | Spring rest pin, brass | 1 |
| 22 | GPY14744310 | Ball, 11/32", SST | 1 |
| 23 | GPY60182151 | Piston, M8, SST | 1 |
| 24 | GPY10400875 | Piston seal | 1 |
| 25 | GPY10317175 | O-ring | 1 |
| - | GPYKIT4021HT | Repair kit, Ref# 1, 2, 3, 5, 6, 10, 11, 13, 17, 24, 25 | 1 |

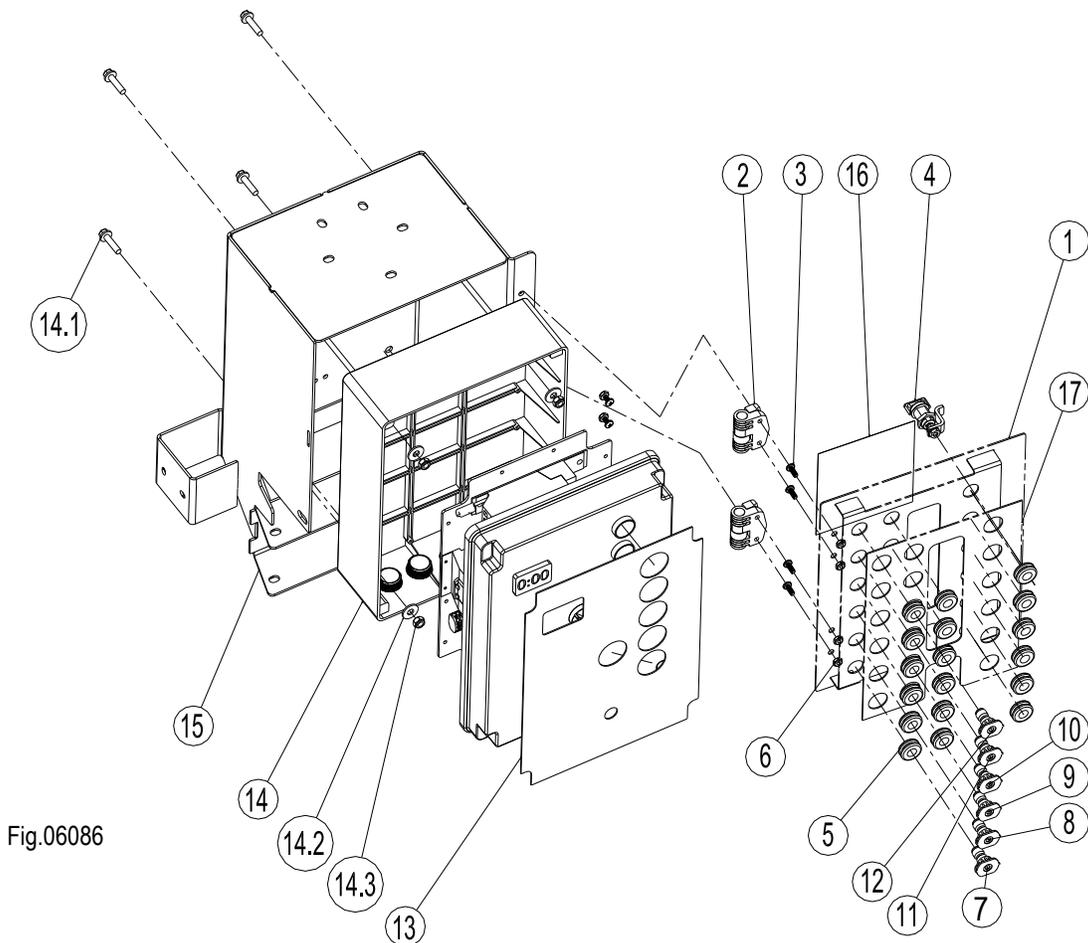


Fig.06086

Parts Explosion (Skid) (Roll Cage) – REV. D.3

| CONTROL BOX (FIG.06086) | | | |
|--------------------------------|--------------|---|-------------|
| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
| 1 | 796737 | Control box mount panel door | 1 |
| 2 | 777201 | Detent hinge | 2 |
| 3 | 82059 | 10-24 x 1/2" Phillips Head Screw | 8 |
| 4 | 796536 | Control panel door latch | 1 |
| 5 | 777111 | Grommet | 18 |
| 6 | 82065 | Nut, #10-24 nylon insert lock | 8 |
| 7 | 778945 | 15°x3.5/Yellow - Steam Nozzle (found in hardware bag) | 1 |
| 8 | 778949 | Nozzle, Soap (found in hardware bag) | 1 |
| 9 | 778947 | Nozzle, #4.0, 40° (found in hardware bag) | 1 |
| 10 | 778948 | Nozzle, #4.0, 25° (found in hardware bag) | 1 |
| 11 | 778739 | Nozzle, #4.0, 15° (found in hardware bag) | 1 |
| 12 | 778946 | Nozzle, #4.0, 0° (found in hardware bag) | 1 |
| 13 | 797448 | Decal, Control Box | 1 |
| 14 | 794861 | Control Box, gas assembly without decal | 1 |
| 14.1 | 82010 | Bolt, 1/4-20 x 1" | 4 |
| 14.2 | 82085 | Washer, 1/4" flat | 4 |
| 14.3 | 82222 | Nut, 1/4-20 nylon insert lock | 4 |
| 15 | 799609 | Control box mount weldment | 1 |
| 16 | 797447 | Decal, Control Box Door | 1 |
| 17 | 797449 | Decal, Nozzle Holder | 1 |

Parts Explosion (Skid) (Roll Cage) – REV. D.3



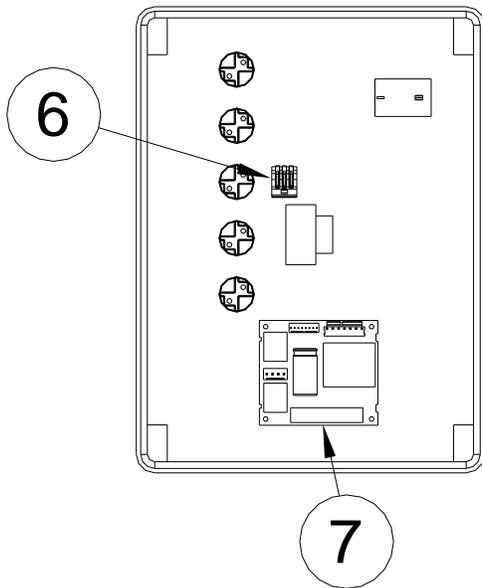


Fig.06433

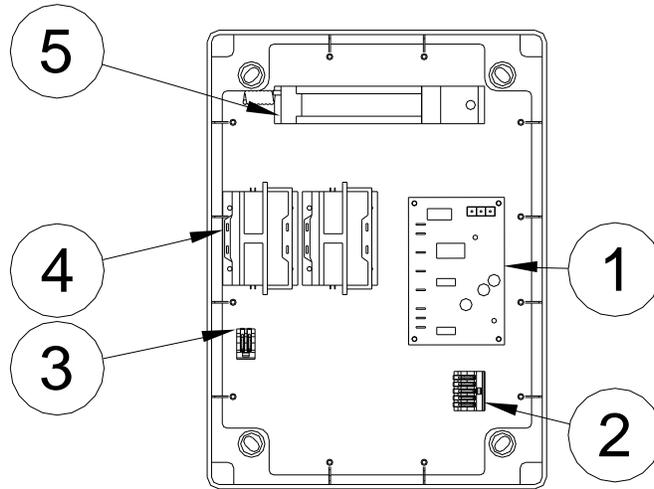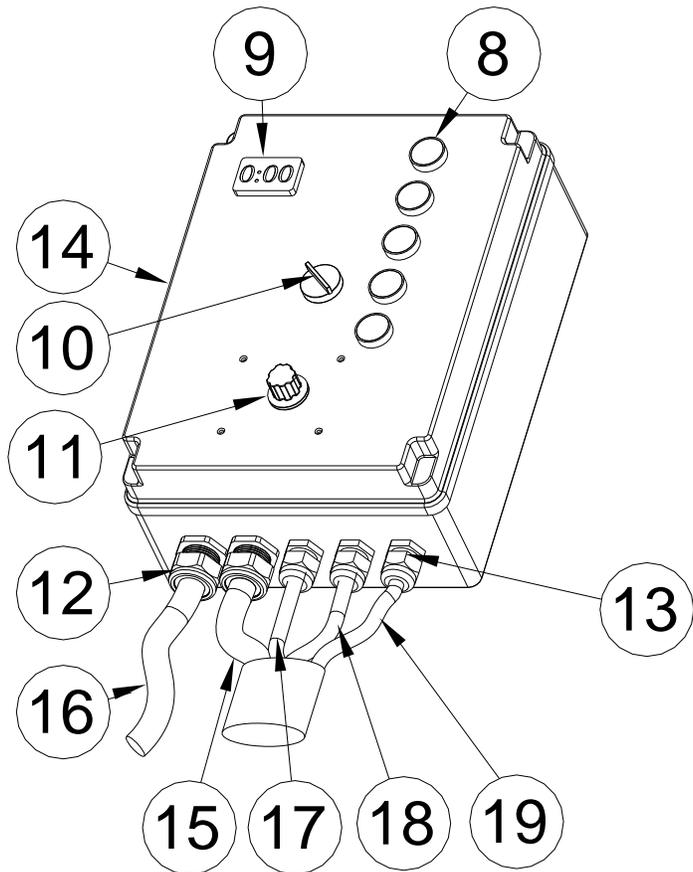

Parts Explosion (Skid) (Roll Cage) – REV. D.3

| CONTROL BOX ASSEMBLY (FIG.06433) | | | |
|---|--------------|--------------------------------|-------------|
| Ref.# | Part# | Description | Qty. |
| 1 | 793568 | Primary control board | 1 |
| 2 | 797045 | 5 position lever lock | 1 |
| 3 | 797047 | 2 position lever lock | 1 |
| 4 | 797049 | Relay switch | 2 |
| 5 | 799549 | Ground fault circuit breaker | 1 |
| 6 | 797046 | 3 position lever lock | 1 |
| 7 | 791661 | Thermostat board | 1 |
| 8 | 797044 | Led indicator light | 5 |
| 9 | 797050 | Hour meter | 1 |
| 10 | 797051 | Heat switch | 1 |
| 11 | 797052 | Thermostat knob | 1 |
| 12 | 797511 | Strain relief 3/4" | 2 |
| 13 | 22502 | Strain relief 1/2" | 3 |
| 14 | 798670 | Control Box enclosure | 1 |
| 15 | 798687 | Motor & ignitor cable | 1 |
| 16 | 797411 | Generator Control wire harness | 1 |
| 17 | 798686 | Thermistor & high psi limit | 1 |
| 18 | 798689 | Flow switch cable | 1 |
| 19 | 798688 | Flame sensor & fuel solenoid | 1 |

Parts Explosion (Tongue, Frame & Bumper) – REV. D.3

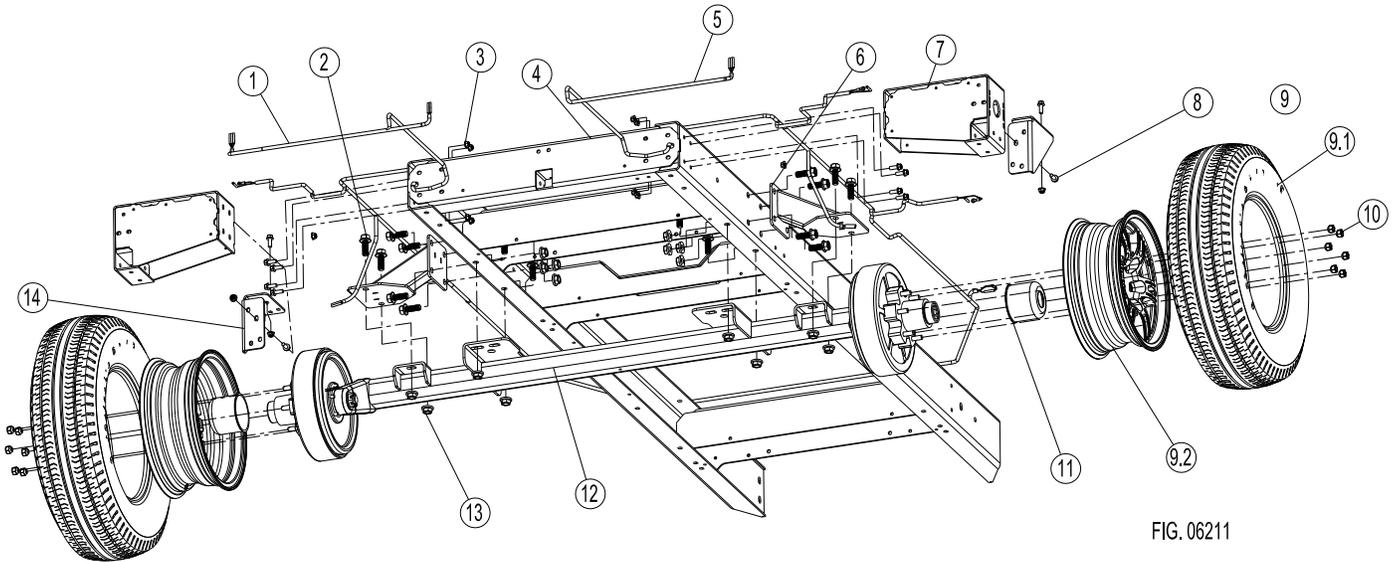


FIG. 06211

| SINGLE AXLE FRAME 106" (FIG.06211) | | | |
|------------------------------------|--------|--|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 796013 | Harness, wire 200 gallon drivers side | 1 |
| 2 | 82664 | Bolt, 5/8-11 x 1-3/4" hex head flange | 16 |
| 3 | 82631 | Nut, 3/8-16 hex flange nylon | 8 |
| 4 | 794083 | Ladder frame, 106" | 1 |
| 5 | 796014 | Harness, wire 200 gallon passenger | 1 |
| 6 | 794935 | 6" torsion axle gusset | 2 |
| 7 | 794237 | Foot/hose reel mount | 2 |
| 8 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 12 |
| 9 | 798353 | Tire, 15" 6 Lug on 5.5 and Wheel | 2 |
| 9.1 | 798485 | Tire, 15" 6 Lug on 5.5 | 2 |
| 9.2 | 798486 | Rim, 15" 6 Lug on 5.5 | 2 |
| 10 | 82521 | Nut, lug | 14 |
| 11 | 796651 | Hub cap | 2 |
| 12 | 794928 | Axle, torsion 5200# | 1 |
| 13 | 82288 | Nut, 5/8-11 class G flange | 16 |
| 14 | 797074 | Gusset, hose reel mount/foot | 2 |

Parts Explosion (Tongue, Frame & Bumper) – REV. D.3


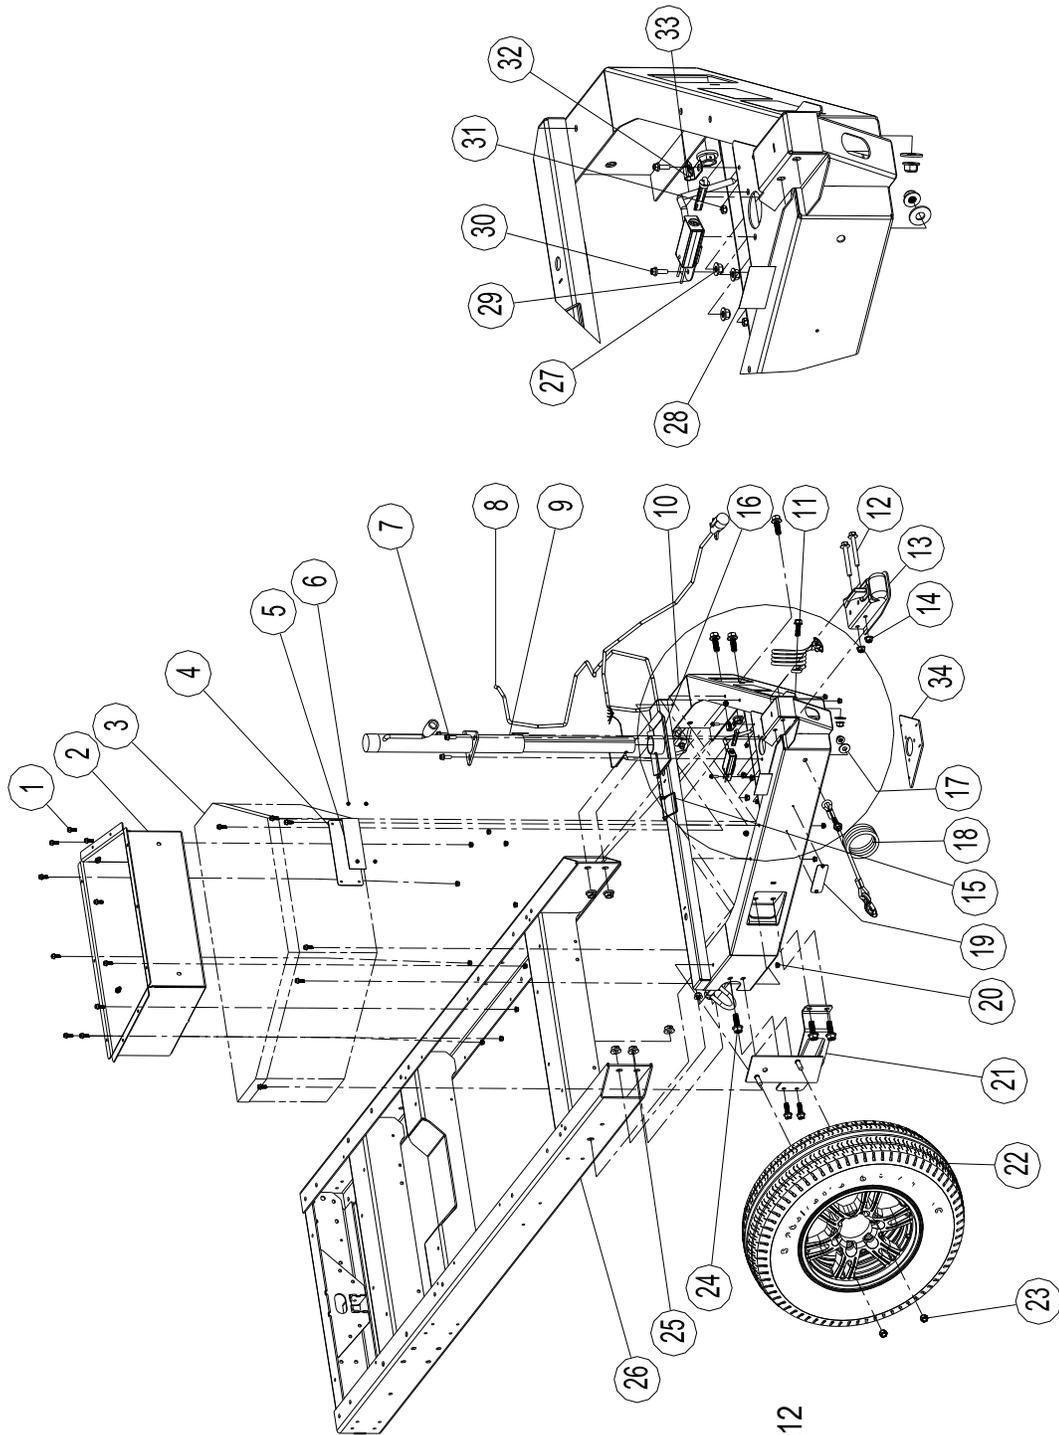


FIG.06212

Parts Explosion (Tongue, Frame & Bumper) – REV. D.3

| TONGUE (FIG.06212) | | | |
|--------------------|--------|--|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 38 |
| 2 | 794889 | Tool box extender | 1 |
| 3 | 794244 | Tool box | 1 |
| 4 | 798433 | Toolbox nameplate | 1 |
| 5 | 797619 | Decal, Toolbox | 1 |
| 6 | 82649 | Blind rivet, 3/16" | 6 |
| 7 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 3 |
| 8 | 779701 | Harness, 7-way molded | 1 |
| 9 | 796875 | Jack, 2000# A-Frame | 1 |
| 10 | 794199 | Tongue, Class 3 | 1 |
| 11 | 82627 | Bolt, 1/2-13 x 1-1/2" hex head | 2 |
| 12 | 82255 | Bolt, 1/2-13 x 4" hex head serrated | 2 |
| 13 | 777775 | Coupler, 2" ball, class 3 | 1 |
| 14 | 82632 | Nut, 1/2-13 nylon flange lock | 2 |
| 15 | 778498 | Coupler pin for jack plate | 1 |
| 16 | 796876 | Jack foot plate, 2000# | 1 |
| 17 | 82122 | Washer, 1/2" USS | 10 |
| 18 | 779542 | Safety cable, pair | 1 |
| 19 | - | Vin Plate, not available | 1 |
| 20 | 82630 | Nut, 5/16-18 nylon insert lock | 53 |
| 21 | 796172 | Spare tire mount | 1 |
| 22 | 798353 | Tire, 15" 6 Lug on 5.5 and Wheel | 1 |
| 23 | 82521 | Nut, lug | 4 |
| 24 | 82664 | Bolt, 5/8-11 x 1-3/4" hex head flange | 6 |
| 25 | 82288 | Nut, 5/8-11 class G flange | 6 |
| 26 | 794083 | Ladder frame, 106" | 1 |
| 27 | 82631 | Nut, 3/8-16 hex flange nylon | 5 |
| 28 | 792538 | Decal, Breakaway Switch | 1 |
| 29 | 779699 | Switch, breakaway | 1 |
| 30 | 82009 | Bolt, 1/4-20 x 3/4" hex head serrated flange | 3 |
| 31 | 82222 | Nut, 1/4-20 nylon insert lock | 3 |
| 32 | 777110 | Clip, hose | 11 |
| 33 | 797996 | Wire Harness, break away switch | 1 |
| 34 | 799036 | Stiffener Jack plate, class 3 Tongue | 1 |


Parts Explosion (Tongue, Frame & Bumper) – REV. D.3

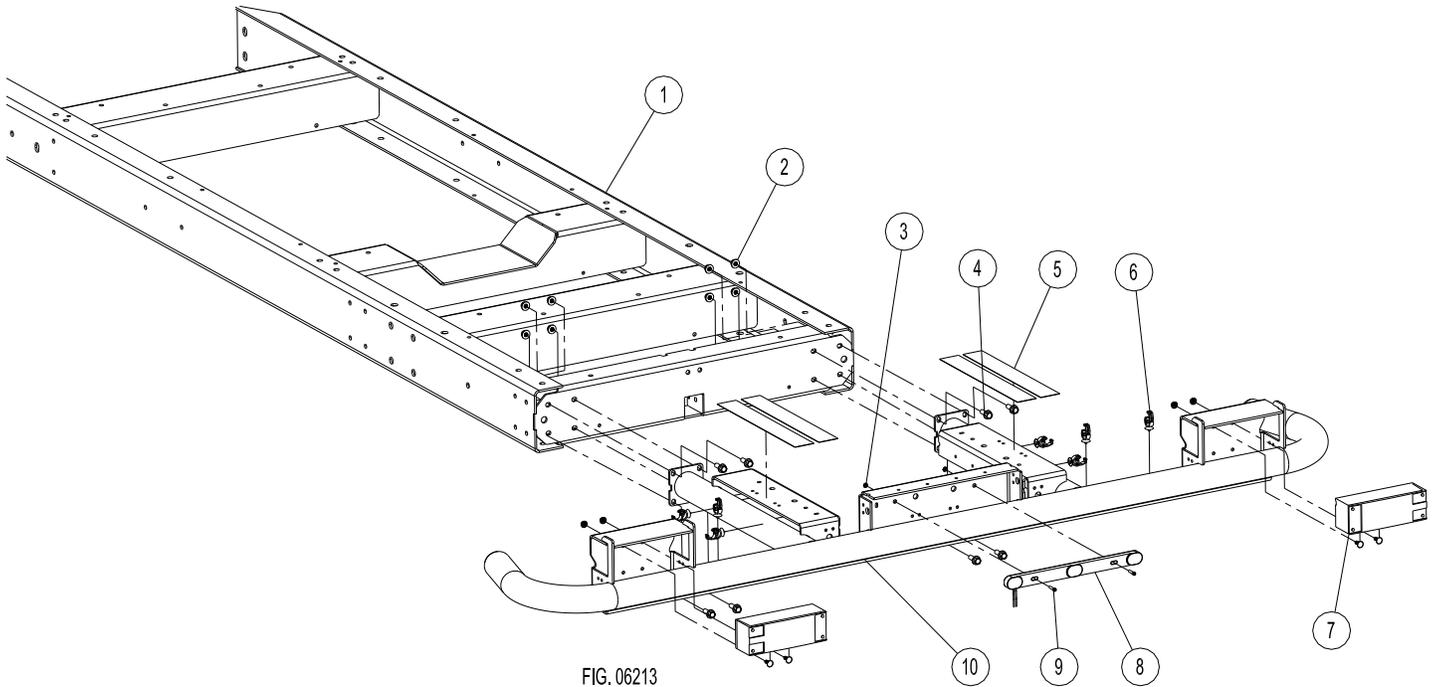


BUMPER (FIG.06213)

| Ref.# | Part# | Description | Qty. |
|-------|--------|---|------|
| 1 | 794083 | Ladder Frame 106" | 1 |
| 2 | 82631 | Nut, 3/8-16 hex flange nylon | 8 |
| 3 | 82008 | Nut, #10-32 | 2 |
| 4 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 8 |
| 5 | 779647 | Tape, Anti-Skid - sold by the foot | 4.67 |
| 6 | 793645 | Clip, hose/wire | 18 |
| 7 | 795192 | Trailer Light Pair – Kit includes Lights (2), License Plate Bracket, and Hardware | 1 |
| 8 | 795194 | Rear ID lamp | 1 |
| 9 | 82007 | Screw, #10-32 x 3/4" | 2 |
| 10 | 794227 | Trailer bumper | 1 |

Parts Explosion (Trailer Water Tank) – REV. D.3

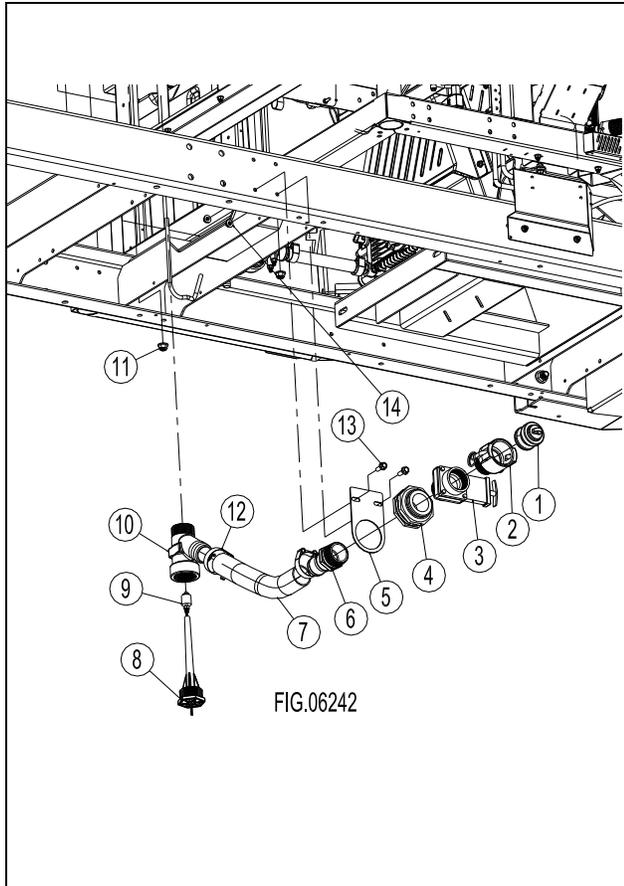


| WATER TANK PLATFORM (FIG.06242) | | | |
|---------------------------------|--------|--|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 782720 | Plug, 2" quick connect | 1 |
| 2 | 782719 | Fitting, quick connect 2" | 1 |
| 3 | 796350 | Fitting, 2" FNPT x 2" MNPT gate valve | 1 |
| 4 | 796405 | Fitting, 2" bulkhead | 1 |
| 5 | 795979 | Tank drain bracket | 1 |
| 6 | 782715 | Fitting, 2" x 2" HB plastic | 1 |
| 7 | 798649 | Hose, 2" x 1.375' discharge | 1 |
| 8 | 796900 | Fitting, 2" MPT x 1/8" | 1 |
| 9 | 796899 | Float switch, tank level | 1 |
| 10 | 796874 | Fitting, 2" MPT X 2" FPT X 2" HB | 1 |
| 11 | 82632 | Nut, 1/2-13 nylon flange lock | 2 |
| 12 | 782716 | Clamp, t-bolt 2.44-2.75 | 2 |
| 13 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 2 |
| 14 | 82631 | Nut, 3/8-16 hex flange nylon | 2 |

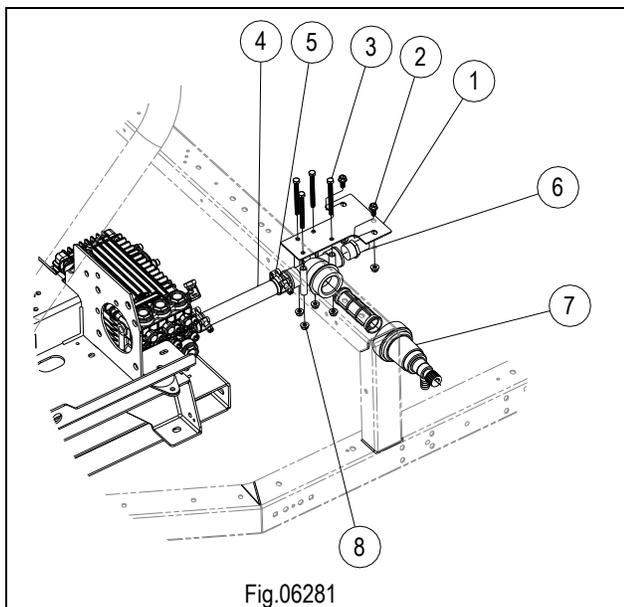

| INLET FILTER (FIG.06241) | | | |
|--------------------------|--------|--------------------------------------|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 795348 | Inlet filter mounting bracket | 1 |
| 2 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 2 |
| 3 | 82096 | Bolt, 5/16-18 x 3-1/2" | 4 |
| 4 | 798641 | Hose, 1" x .833' | 1 |
| 5 | 796619 | Clamp, 1.34"-1.46" OD | 2 |
| 6 | 779496 | Fitting, 1" MPT x 1" hose barb nylon | 2 |
| 7 | 795301 | Inlet filter | 1 |
| 7.1 | 798263 | 50 mesh filter screen | 1 |
| 8 | 82630 | Nut, 5/16-18 nylon insert lock | 6 |

Parts Explosion (Trailer Water Tank) – REV. D.3

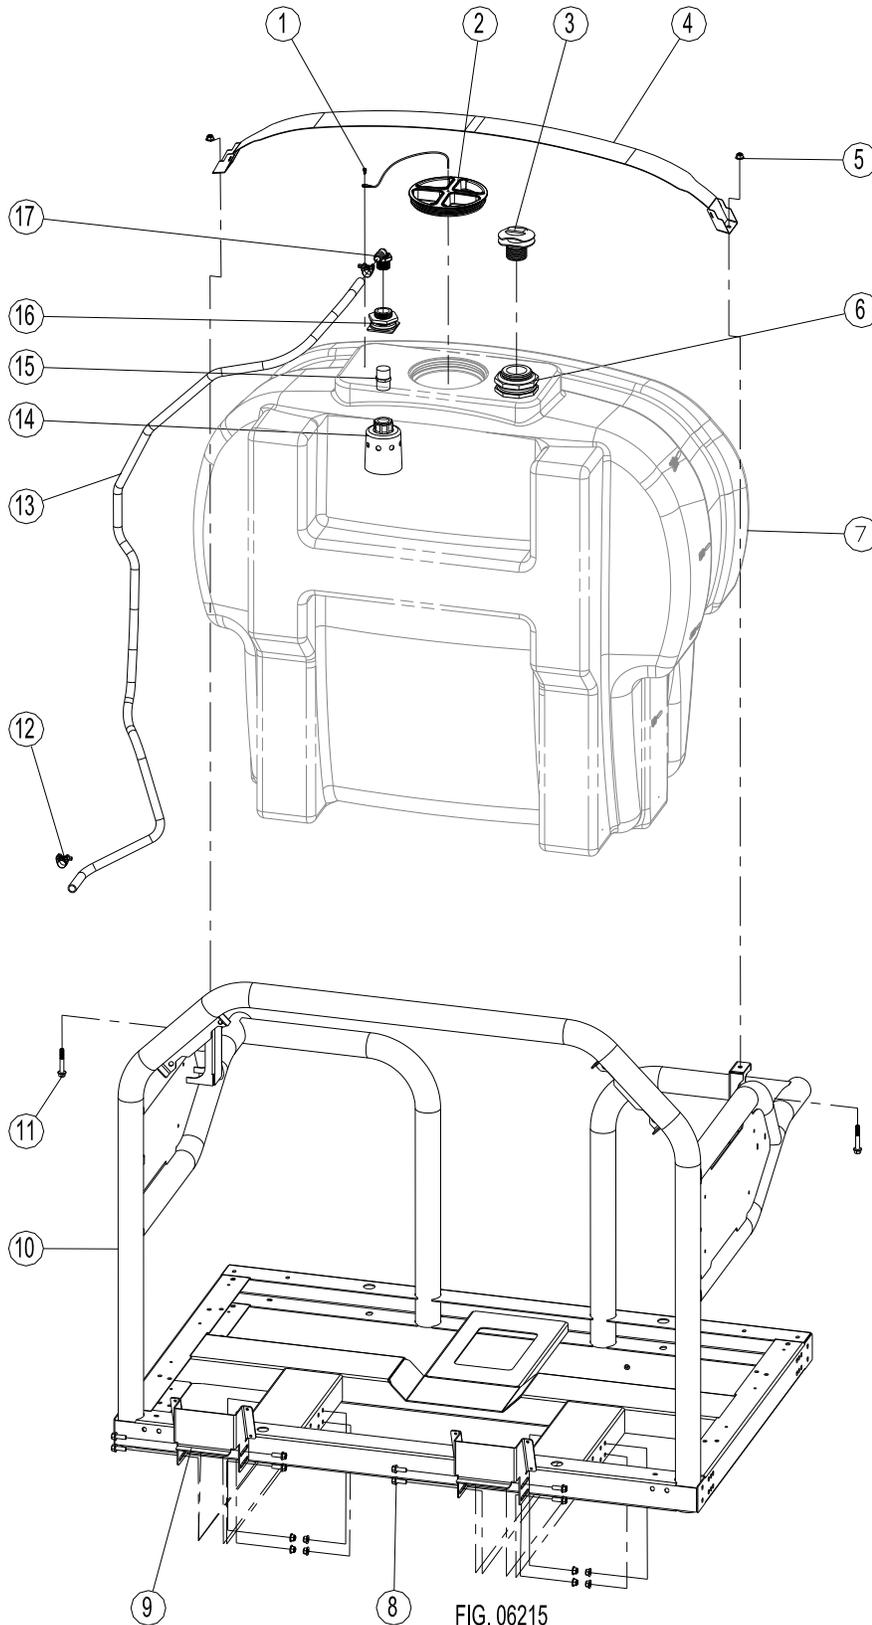

Parts Explosion (Trailer Water Tank) – REV. D.3

WATER TANK PLATFORM (FIG.06215)

| Ref.# | Part# | Description | Qty. |
|-------|--------|---|------|
| 1 | 82159 | Screw, hex head self-tapping for tether cap to tank | 1 |
| 2 | 794111 | Tank cap with tether | 1 |
| 3 | 796404 | 2" Vent Cap with poly screen | 1 |
| 4 | 794766 | Tank strap | 1 |
| 5 | 82631 | Nut, 3/8-16 hex flange nylon | 10 |
| 6 | 796405 | Fitting, 2" bulkhead | 1 |
| 7 | 793167 | Tank, 200 gallon | 1 |
| 8 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 8 |
| 9 | 794878 | Tank snigger | 2 |
| 10 | 794154 | 200 gallon water tank platform | 1 |
| 11 | 82626 | Bolt, 3/8-16 x 2-1/2" hex head flange | 2 |
| 12 | 796618 | Clamp, T-bolt 1.06" - 1.14" OD | 2 |
| 13 | 798644 | Hose, 3/4" x 7.167' | 1 |
| 14 | 794031 | Inlet float valve | 1 |
| 15 | 779086 | Nipple, 1" nylon | 1 |
| 16 | 5361 | Fitting, 1" bulkhead | 1 |
| 17 | 796165 | Fitting, 1" x 3/4" Elbow | 1 |

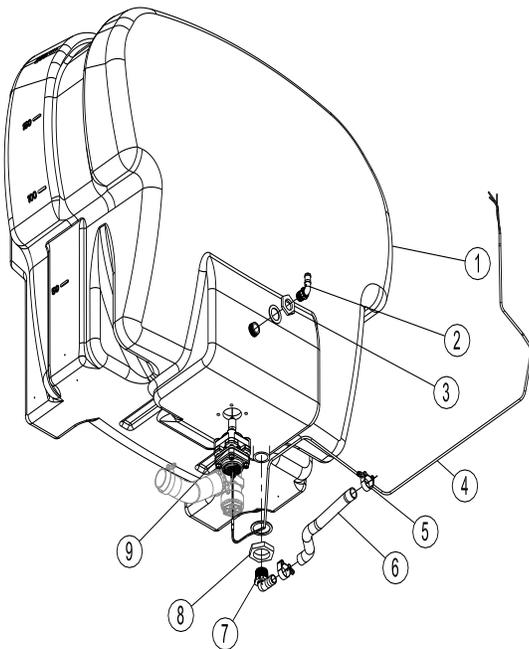


FIG. 06214

WATER TANK PLATFORM (FIG.06214)

| Ref.# | Part# | Description | Qty. |
|-------|---------|-----------------------------------|------|
| 1 | 793167 | Tank, 200 gallon | 1 |
| 2 | 50NBR12 | Elbow, 3/4" nylon HB | 1 |
| 3 | 5370 | Fitting, 3/4" bulkhead | 1 |
| 4 | 796309 | Wire harness, low water shutdown | 1 |
| 5 | 796619 | Clamp, t-bolt 1.34-1.46 | 2 |
| 6 | 798347 | Hose, 1" x 2.25' | 1 |
| 7 | 796842 | Elbow, 1-1/4" MNPT x 1" hose barb | 1 |
| 8 | 796841 | Fitting, 1-1/4" bulkhead | 1 |
| 9 | 796874 | Fitting, 2" MPT x 2" FPT | 1 |

Parts Explosion (Trailer Hose Reel) – REV. D.3

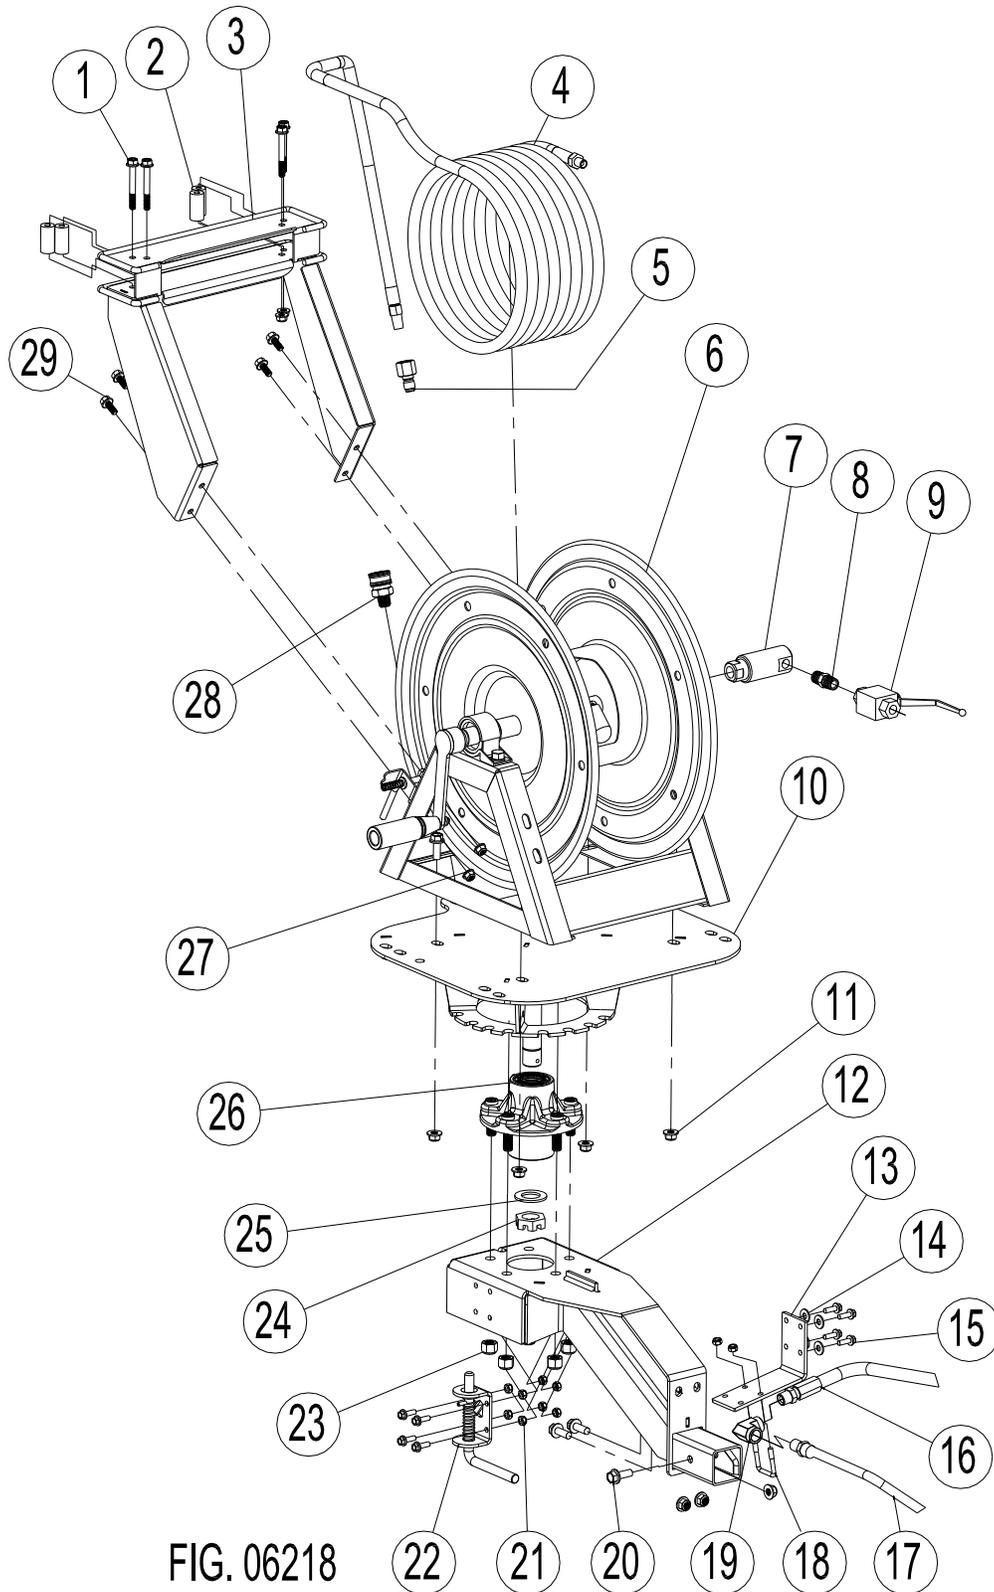


FIG. 06218

Parts Explosion (Trailer Hose Reel) – REV. D.3

| HIGH PRESSURE HOSE REEL (FIG.06218) | | | |
|--|--------------|---|-------------|
| Ref.# | Part# | Description | Qty. |
| 1 | 82623 | Bolt, 5/16-18 x 2-1/2" hex head flange | 4 |
| 2 | 796923 | Nylon bushing | 4 |
| 3 | 796390 | Hose guide | 1 |
| 4 | 797591 | Hose, 3/8" x 150' High Pressure | 1 |
| 5 | 777914 | Coupler, 3/8" | 1 |
| 5.1 | GP2701020 | O-ring (not shown) | 1 |
| 6 | 793814 | Hose reel A-frame | 1 |
| 7 | 796519 | Swivel Fitting, 1/2" FPT x 3/8" FPT | 1 |
| 8 | 2296 | Nipple, 3/8 steel hex | 1 |
| 9 | 796448 | Ball valve, high pressure | 1 |
| 10 | 798110 | Hose reel mount | 1 |
| 11 | 82631 | Nut, 3/8-16 hex flange nylon | 7 |
| 12 | 798111 | Hose reel mount receiver | 1 |
| 13 | 798260 | Hose reel mount elbow bracket | 1 |
| 14 | 82085 | Washer, 1/4" flat | 4 |
| 15 | 82009 | Bolt, 1/4-20 x 3/4" hex head serrated flange | 8 |
| 16 | 798264 | Hose, 3/8" x 31" | 1 |
| 17 | 796409 | Hose, 3/8" x 96" high pressure | 1 |
| 18 | 82145 | U-Bolt, 1/4" x 1.31" x 1.31" | 1 |
| 19 | 798262 | Elbow, 3/8" x 3/8" | 1 |
| 20 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 7 |
| 21 | 82222 | Nut, 1/4-20 nylon insert lock | 10 |
| 22 | 798107 | Latch, spring | 1 |
| 23 | 82685 | Nut, 1/2-20 Nyloc | 5 |
| 24 | 777124 | Nut, 1" slotted jam | 1 |
| 25 | 778844 | Washer, Axle stub wheel | 1 |
| 26 | 794906 | Hub assembly | 1 |
| 27 | 82630 | Nut, 5/16-18 nylon insert lock | 8 |
| 28 | 780455 | Coupler, 3/8" male NPT 4000 PSI | 1 |
| 29 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 7 |
| - | 777110 | Clip, hose – for routing high pressure hose | 3 |
| - | 779666 | Clamp, 1" loop – for routing high pressure hose | 1 |
| - | 82016 | Bolt, 5/16-18 x 1" HHSF GR5 | 1 |
| - | 82099 | Washer, 5/16 x 1-1/2" flat | 2 |

Parts Explosion (Trailer Hose Reel) – REV. D.3


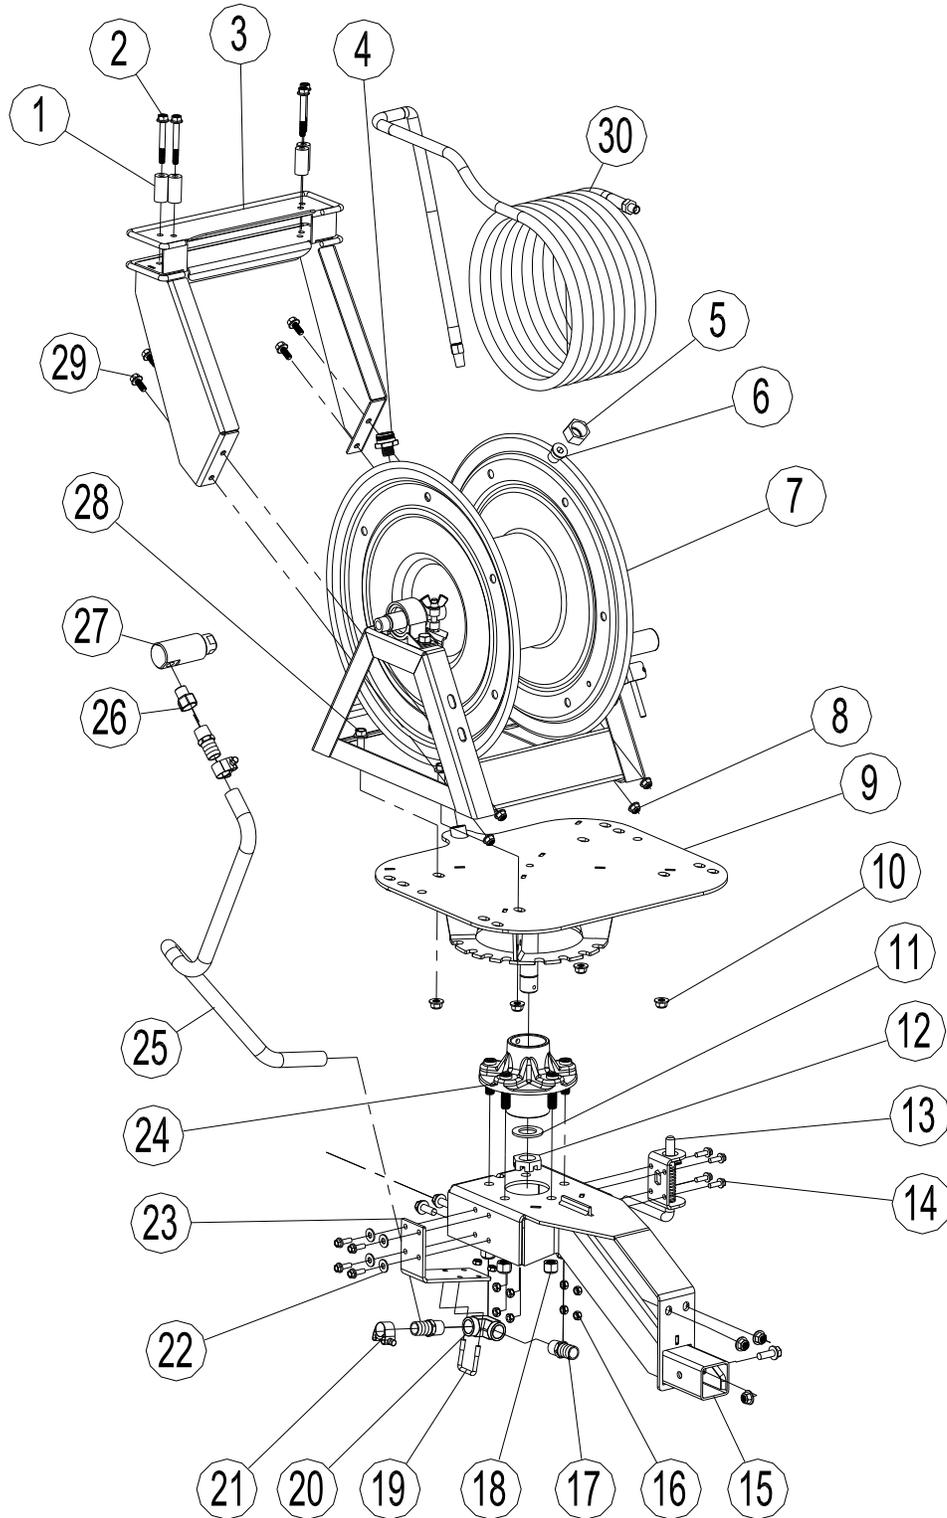


FIG. 06219

Parts Explosion (Trailer Hose Reel) – REV. D.3

| LOW PRESSURE HOSE REEL (FIG.06219) | | | |
|------------------------------------|--------|--|------|
| Ref.# | Part# | Description | Qty. |
| 1 | 796923 | Nylon bushing | 4 |
| 2 | 82623 | Bolt, 5/16-18 x 2-1/2" hex head flange | 4 |
| 3 | 796390 | Hose guide | 1 |
| 4 | 797059 | Fitting, 3/8" MPT x MGH | 1 |
| 5 | 4028 | Nut, female 3/4" | 1 |
| 6 | 779812 | Fitting, male 3/8" | 1 |
| 7 | 793814 | Hose reel A-frame | 1 |
| 8 | 82630 | Nut, 5/16-18 nylon insert lock | 6 |
| 9 | 798110 | Hose reel mount | 1 |
| 10 | 82631 | Nut, 3/8-16 hex flange nylon | 7 |
| 11 | 778844 | Washer, Axle stub wheel | 1 |
| 12 | 777124 | Nut, 1" slotted jam | 1 |
| 13 | 798107 | Latch, spring | 1 |
| 14 | 82009 | Bolt, 1/4-20 x 3/4" hex head serrated flange | 8 |
| 15 | 798111 | Hose reel mount receiver | 1 |
| 16 | 82222 | Nut, 1/4-20 nylon insert lock | 10 |
| 17 | 782706 | Fitting, 1/2" x 3/4" HB Steel | 3 |
| 18 | 82685 | Nut, 1/2-20 Nyloc | 5 |
| 19 | 82145 | U-Bolt, 1/4" x 1.31" x 1.31" | 1 |
| 20 | 777797 | Fitting, 1/2" x 1/2" Elbow | 1 |
| 21 | 796618 | Clamp, T-Bolt 1.06" x 1.14" OD | 2 |
| 22 | 82085 | Washer, 1/4" flat | 4 |
| 23 | 798260 | Hose reel mount elbow bracket | 1 |
| 24 | 794906 | Hub assembly | 1 |
| 25 | 798645 | Hose, 3/4" x 2.58' | 1 |
| 26 | 779816 | Adapter, 3/8" MPT x 1/2" FPT | 1 |
| 27 | 796519 | Swivel Fitting, 1/2" FPT x 3/8" FPT | 1 |
| 28 | 82624 | Bolt, 3/8-16 x 1" hex head flange, Gr. 5 | 7 |
| 29 | 82621 | Bolt, 5/16-18 x 3/4" hex head flange | 4 |
| 30 | 799017 | Garden Hose, 3/4" X 100' | 1 |


Parts Explosion (Torsion Axle) – REV. D.3

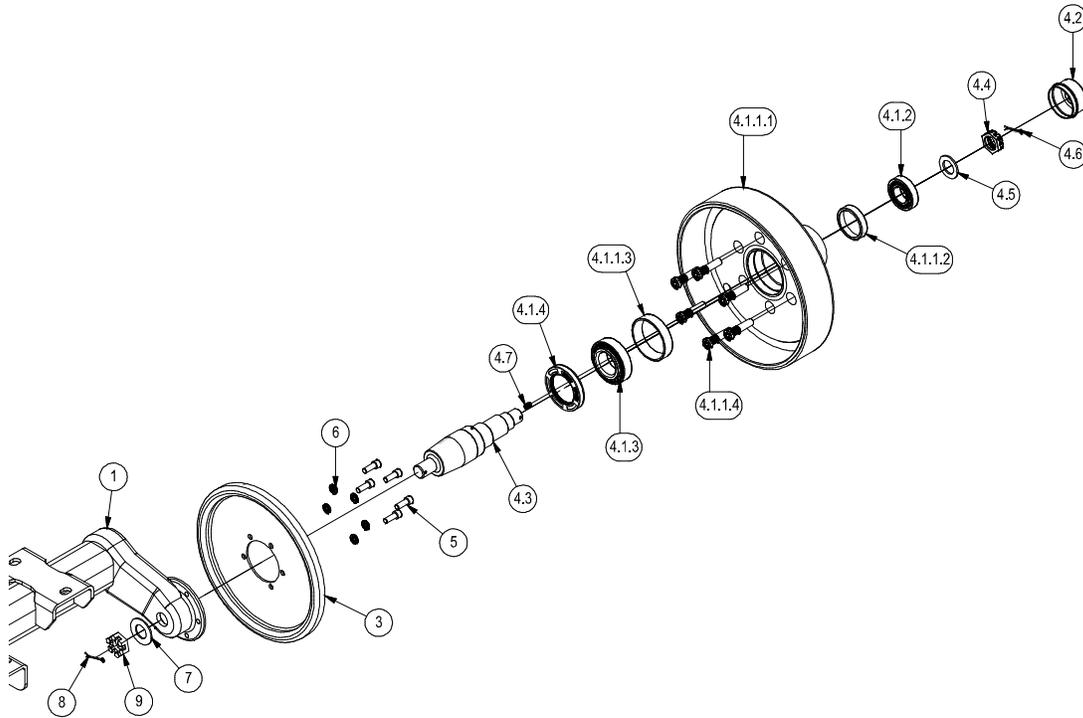

AXLE BREAKDOWN (PART# 794928)

| Ref.# | Part# | Description | Qty. |
|---------|--------|--|------|
| 1 | 798722 | 5200# 25° DN straight torsion axle, 75.02" HF | 1 |
| 2 | 798723 | Brake Electric, 12 x 2 7K Right Hand (not shown) | 1 |
| 3 | 798724 | Brake Electric, 12 x 2 7K Left Hand | 1 |
| 4 | 798725 | Torsion End Unit, Drum Hub 12 IN., 6-lug | 2 |
| 4.1 | 798726 | Drum Hub 12 IN., 6-lug, Bearings, Grease, Seal | 2 |
| 4.1.1 | 798727 | Drum Hub 12 IN., 6-lug, Studs, Cups | 2 |
| 4.1.1.1 | N/A | Drum Hub 12 IN., 6-lug | 2 |
| 4.1.1.2 | 798729 | Bearing cup, 15245 | 2 |
| 4.1.1.3 | 798707 | Bearing cup, 25520 | 2 |
| 4.1.1.4 | 798708 | Stud, 1/2-20 x 2.00 OAL w/ .39 x .617 Knurl | 12 |
| 4.1.2 | 798730 | Bearing cone, 15123 | 2 |
| 4.1.3 | 798731 | Bearing cone, 25580 | 2 |
| 4.1.4 | 798732 | Seal, triple lip 2.250 | 2 |
| 4.2 | 798733 | Dust Cap, 2.50 Lube with Grommet | 2 |
| 4.3 | 798734 | Spindle, 3500 lb. Torsion | 2 |
| 4.4 | 798714 | Castle nut, 1-14 UND 2B, 12 slot | 2 |
| 4.5 | 798715 | Washer flat, 1.0 black | 2 |
| 4.6 | 798716 | Cotter Pin, 5/32 x 2.00 Zinc | 2 |
| 4.7 | 798717 | Grease zerk, body only | 2 |
| 5 | 798718 | SHCS, 3/8-24 x 1.0 Zinc | 10 |
| 6 | 798735 | Washer split lock, 3/8" galvanized | 10 |
| 7 | 798720 | Washer Spring, 1.0 ID x 2.0 Dacromet | 2 |
| 8 | 798728 | Cotter Pin, 5/32 x 2.00 Stainless | 2 |
| 9 | 798721 | Castle nut, 1-14 2b, 6 slot | 2 |


Parts Explosion (Generator Head) – REV. D.3

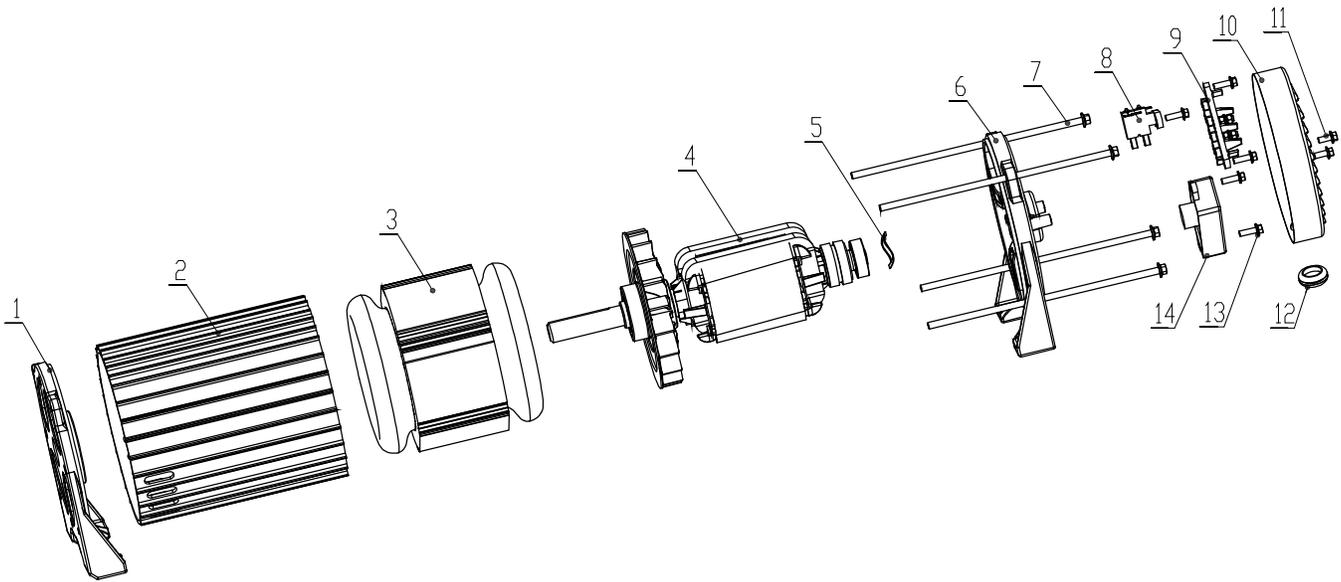

GENERATOR HEAD (PART #795080)

| <u>Ref.#</u> | <u>Part#</u> | <u>Description</u> | <u>Qty.</u> |
|--------------|--------------|----------------------|-------------|
| 1 | N/A | Front Cover | 1 |
| 2 | N/A | Brand Cover | 1 |
| 3 | N/A | Stator Assembly | 1 |
| 4 | N/A | Rotor Assembly | 1 |
| 5 | N/A | Washer | 2 |
| 6 | N/A | Rear Cover | 1 |
| 7 | N/A | Bolt, M6 x 8" HF | 4 |
| 8 | 796000 | Carbon Brush | 1 |
| 9 | 798210 | Terminal Block | 1 |
| 10 | 798211 | End Cover | 1 |
| 11 | 82681 | Bolt, M5-.05 x 50 HF | 2 |
| 12 | 798212 | Rubber Boot | 1 |
| 13 | N/A | Bolt, M8 x 5/8" HF | 5 |
| 14 | 795997 | AVR | 1 |

Parts Explosion (Pump) – REV. D.3

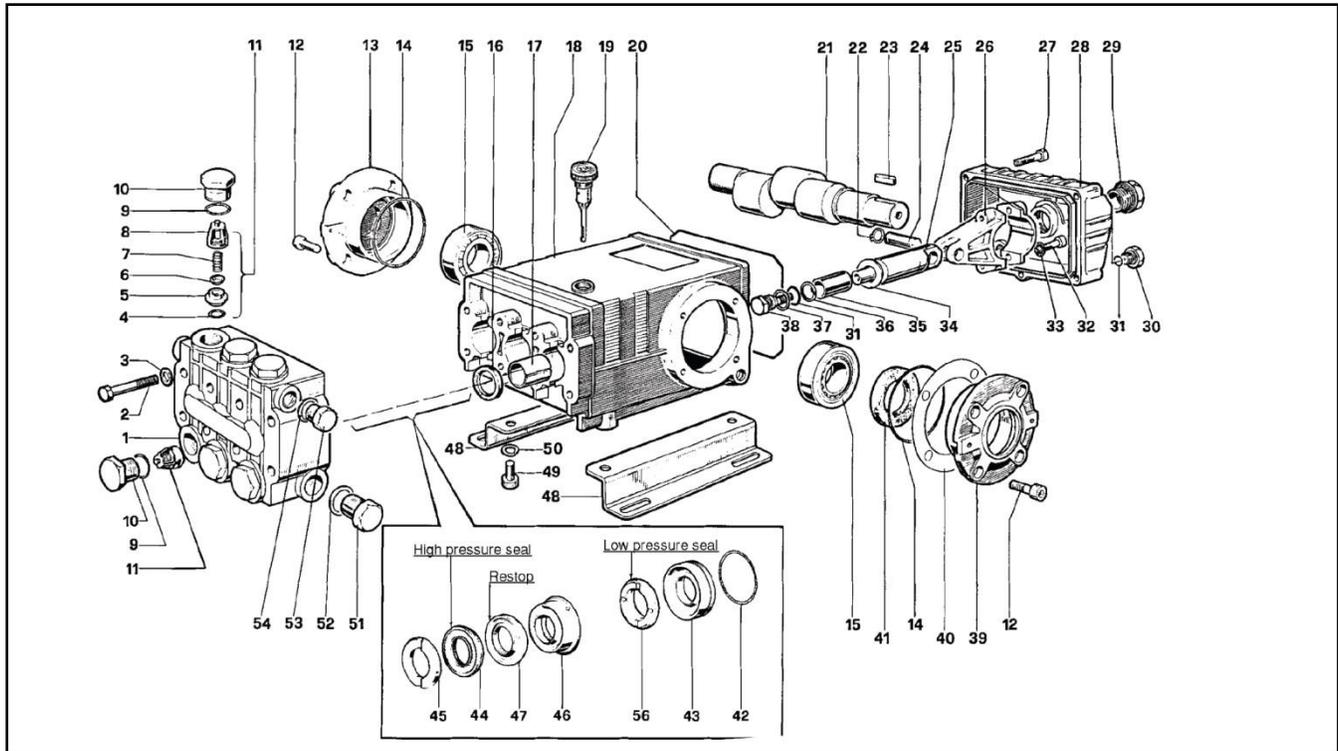

| GENERAL PUMP 4 @3000 BELT DRIVE LEFT CRANK PART # 794388 | | | | |
|--|------------|-----------------------|---------|------|
| Ref.# | Part# | Description | Kit No. | Qty. |
| 1 | N/A | Manifold | | 1 |
| 2 | GP99320600 | Screw, M8 x 70 | | 8 |
| 3 | GP96702000 | Washer, M8.4 | | 8 |
| 4 | GP701115 | O-ring, .674 x .10 | 1 | 8 |
| 5 | N/A | Seat, Valve | 1 | 6 |
| 6 | GP36711501 | Plate, Valve | 1 | 6 |
| 7 | GP94737600 | Spring | 1 | 6 |
| 8 | GP36200251 | Guide, Valve | 1 | 6 |
| 9 | GP701002 | O-ring, .797x.103 | 4,5 | 6 |
| 10 | GP98222800 | Cap | 4 | 6 |
| 11 | GP100381 | Valve Assembly | 1 | 6 |
| 12 | GP99303900 | Screw, M8 x 16 | | 8 |
| 13 | GP47150122 | Cover, Crankcase Side | | 1 |
| 14 | GP701147 | O-ring, 2.675x.103 | | 2 |
| 15 | GP640047 | Bearing, Roller | | 2 |
| 16 | GP90162500 | Seal, Oil | 2 | 3 |
| 17 | GP90912600 | Bushing | | 3 |
| 18 | N/A | Crankcase | | 1 |
| 19 | GP98210600 | Oil Dip Stick | | 1 |
| 20 | GP90392200 | O-Ring, Cover | | 1 |
| 21 | GP47021835 | Crankshaft, TSS1511 | | 1 |
| 22 | GP90055700 | Ring, Snap | | 6 |
| 23 | GP640048 | Key | | 1 |
| 24 | GP97738000 | Pin, Wrist | | 3 |

Parts Explosion (Pump) – REV. D.3

| | | | | |
|----|------------|-----------------------|----------|---|
| 25 | GP47050554 | Guide, Plunger | | 3 |
| 26 | GP47030001 | Connecting Rod | | 3 |
| 27 | GP99191200 | Screw, M6 x 30 | | 5 |
| 28 | GP47060122 | Cover, Crankcase | | 1 |
| 29 | GP97596800 | Oil Indicator | | 1 |
| 30 | GP98204100 | Cap | | 1 |
| 31 | GP701013 | O-Ring, .426 x .070 | 6 | 4 |
| 32 | GP99309900 | Screw, M8 x 35 | | 6 |
| 33 | GP96701400 | Washer, M8.4 | | 6 |
| 34 | GP96728600 | Washer, M14 | 6 | 3 |
| 35 | GP47040409 | Plunger, 20mm | | 3 |
| 36 | GP660067 | Ring, Back-up | 6 | 3 |
| 37 | GP96728000 | Washer | 6 | 3 |
| 38 | GP47219566 | Screw, Plunger | 6 | 3 |
| 39 | GP47160122 | Cover, Crankcase | | 3 |
| 40 | GP97567800 | Shim | | 2 |
| 41 | GP90164800 | Seal, Oil | 3 | 1 |
| 42 | GP90361600 | O-Ring, 1.364 x .070 | 10,28 | 3 |
| 43 | GP47080570 | Retainer, Packing | 10,28 | 3 |
| 44 | GP90270500 | Packing | 28, 69 | 3 |
| 45 | GP47100051 | Ring, Head, M20 | 7,28 | 3 |
| 46 | GP47216970 | Intermed. Ring | 28,71 | 3 |
| 47 | GP90270400 | Restop Ring | 28,69,71 | 3 |
| 48 | GP47200074 | Pump Feet | | 2 |
| 49 | GP99364400 | Screw, M10 x 18 | | 4 |
| 50 | GP96710600 | Washer, M10.2 | | 4 |
| 51 | GP98217600 | Cap | | 1 |
| 52 | GP96751400 | Washer, M21.5 | | 1 |
| 53 | GP98210000 | Cap | | 1 |
| 54 | GP96738000 | Washer, M17.5 | | 1 |
| 56 | GP90271000 | Seal, Low Press, 20mm | 28,39 | 3 |


REPAIR KITS

| Kit No. | GPK1 | GPK2 | GPK3 | GPK4F | GPK6 | GPK7 | GPK10 | GPK28 | GPK69 | GPK71 |
|--------------------------------------|-------------------|------|------|-------|-----------------------|------|-------|----------------------------|-------------|-------|
| Item #s Included in Kit | 4,5,6,7 8 (11) | 16 | 41 | 9,10 | 31,34, 36,37 38 | 45 | 42,43 | 42,43 44,45 46,47,56 | 44,47 56 | 46,47 |
| Number of Assemblies in Kit | 6 | 3 | 2 | 6 | 3 | 6 | 3 | 1 | 3 | 3 |
| Number of Cylinders Kit will Service | 3 | 3 | - | 3 | 3 | 3 | 3 | 1 | 3 | 3 |

TORQUE SPECIFICATIONS

| POS. | Ft/lb (Decrease by 20% if threads are lubricated) | N-M |
|------|---|-----|
| 2 | 22.1 | 30 |
| 10 | 95.9 | 130 |
| 12 | 14.7 | 20 |
| 27 | 7.3 | 10 |
| 29 | 8.8 | 12 |
| 30 | 14.7 | 20 |
| 32 | 14.7 | 20 |
| 38 | 14.7 | 20 |
| 49 | 29.4 | 40 |
| 51 | 29.4 | 40 |


Branding Decal Locations – REV. D.3

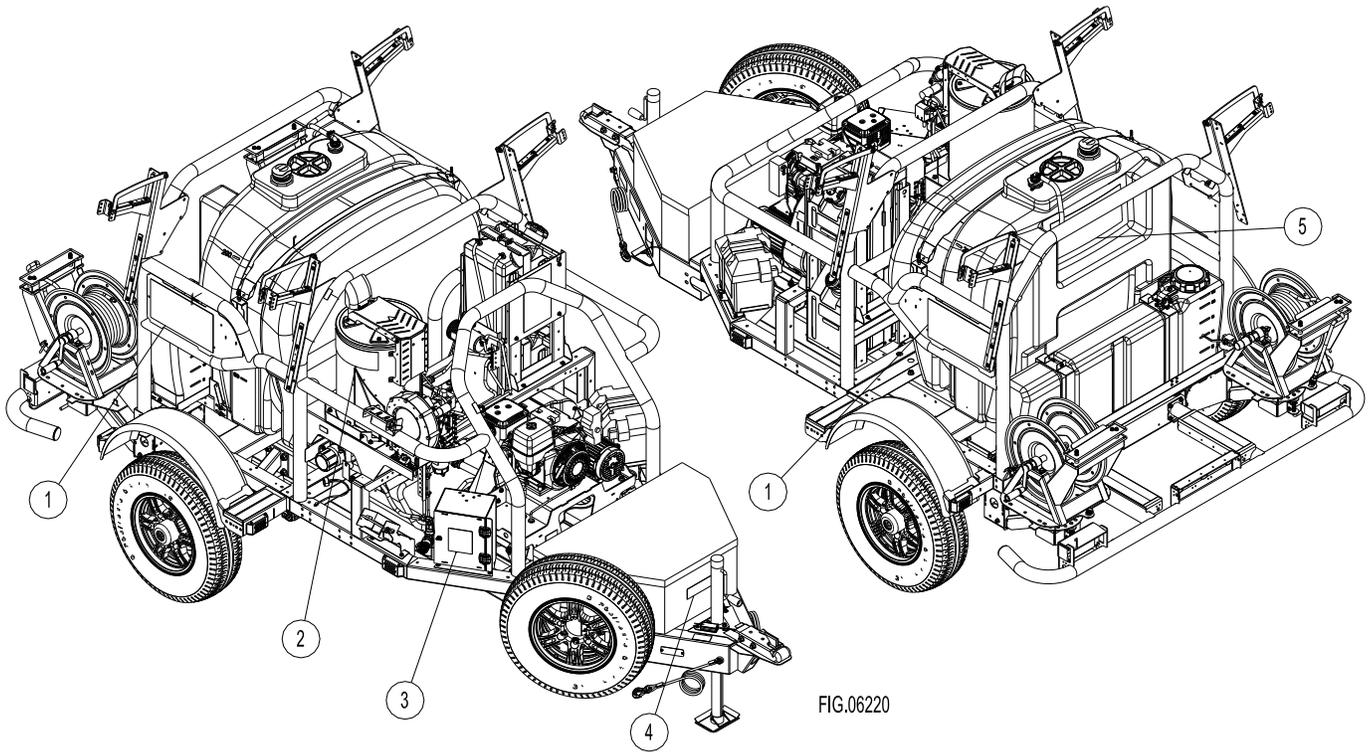

TRAILER DECAL LOCATION (FIG.06220)

| <u>Ref.#</u> | <u>Part #</u> | <u>Description</u> | <u>Qty.</u> |
|--------------|---------------|-----------------------------|-------------|
| 1 | 797452 | Decal, 200 Gallon Billboard | 2 |
| 2 | 798008 | Decal, Branding | 1 |
| 3 | 797447 | Decal, Control Box | 1 |
| 4 | 797619 | Decal, Tool Box | 1 |
| 5 | 798005 | Decal, Water Tank Back | 1 |


Schematic Drawing

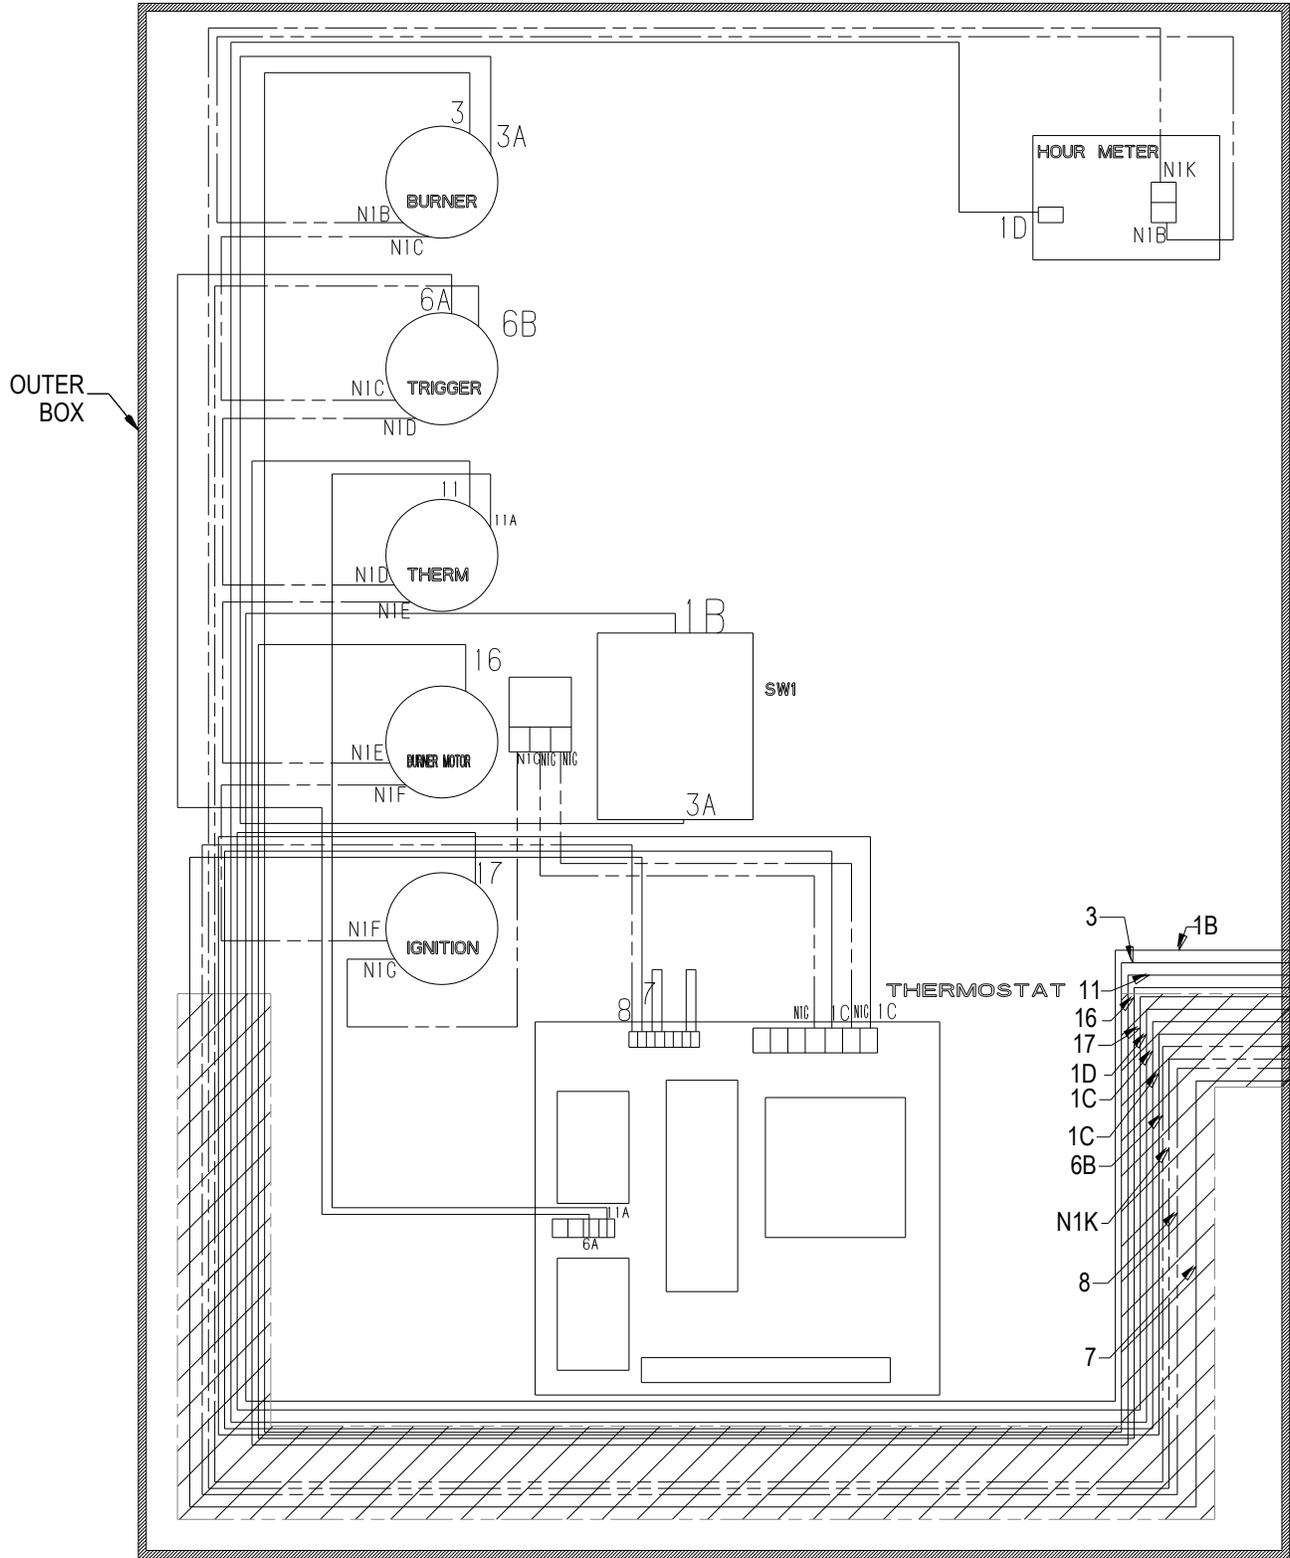

NOTES: THIS LINE REPRESENTS WHITE CABLE.

Fig.06253

Schematic Drawing

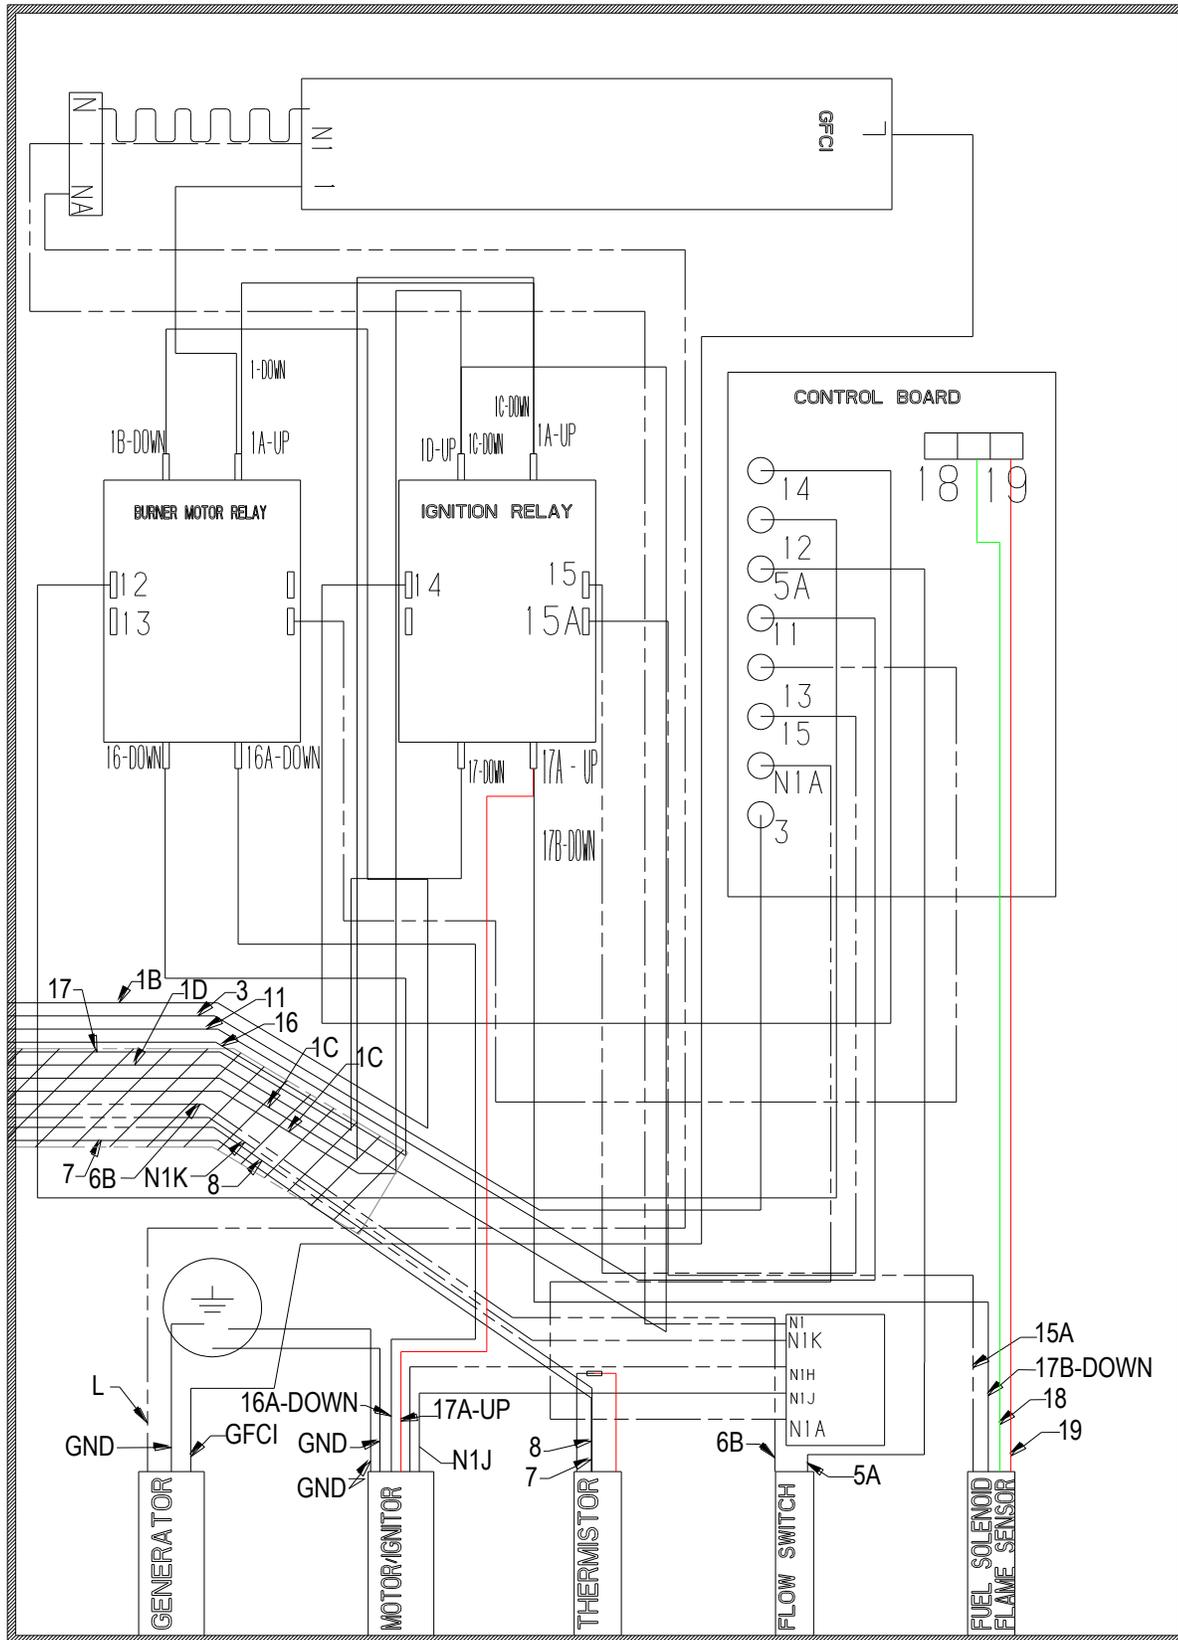

Schematic Drawing


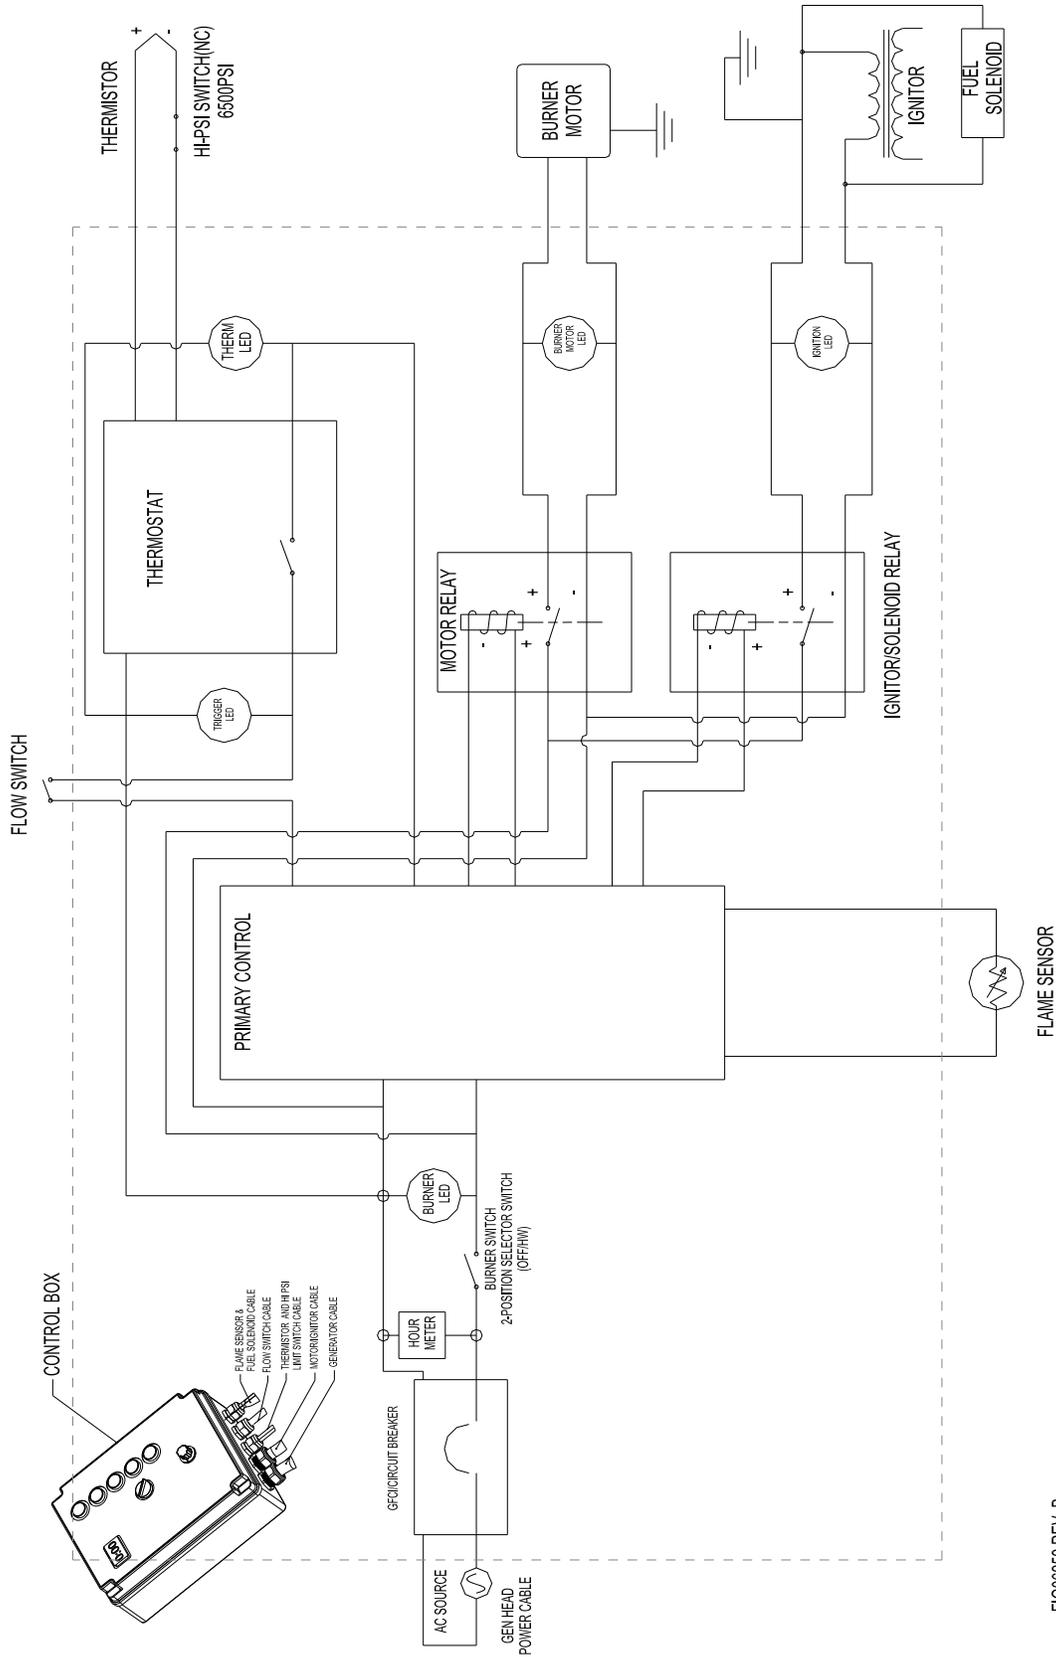


FIG06252 REV. B

Schematic Drawing

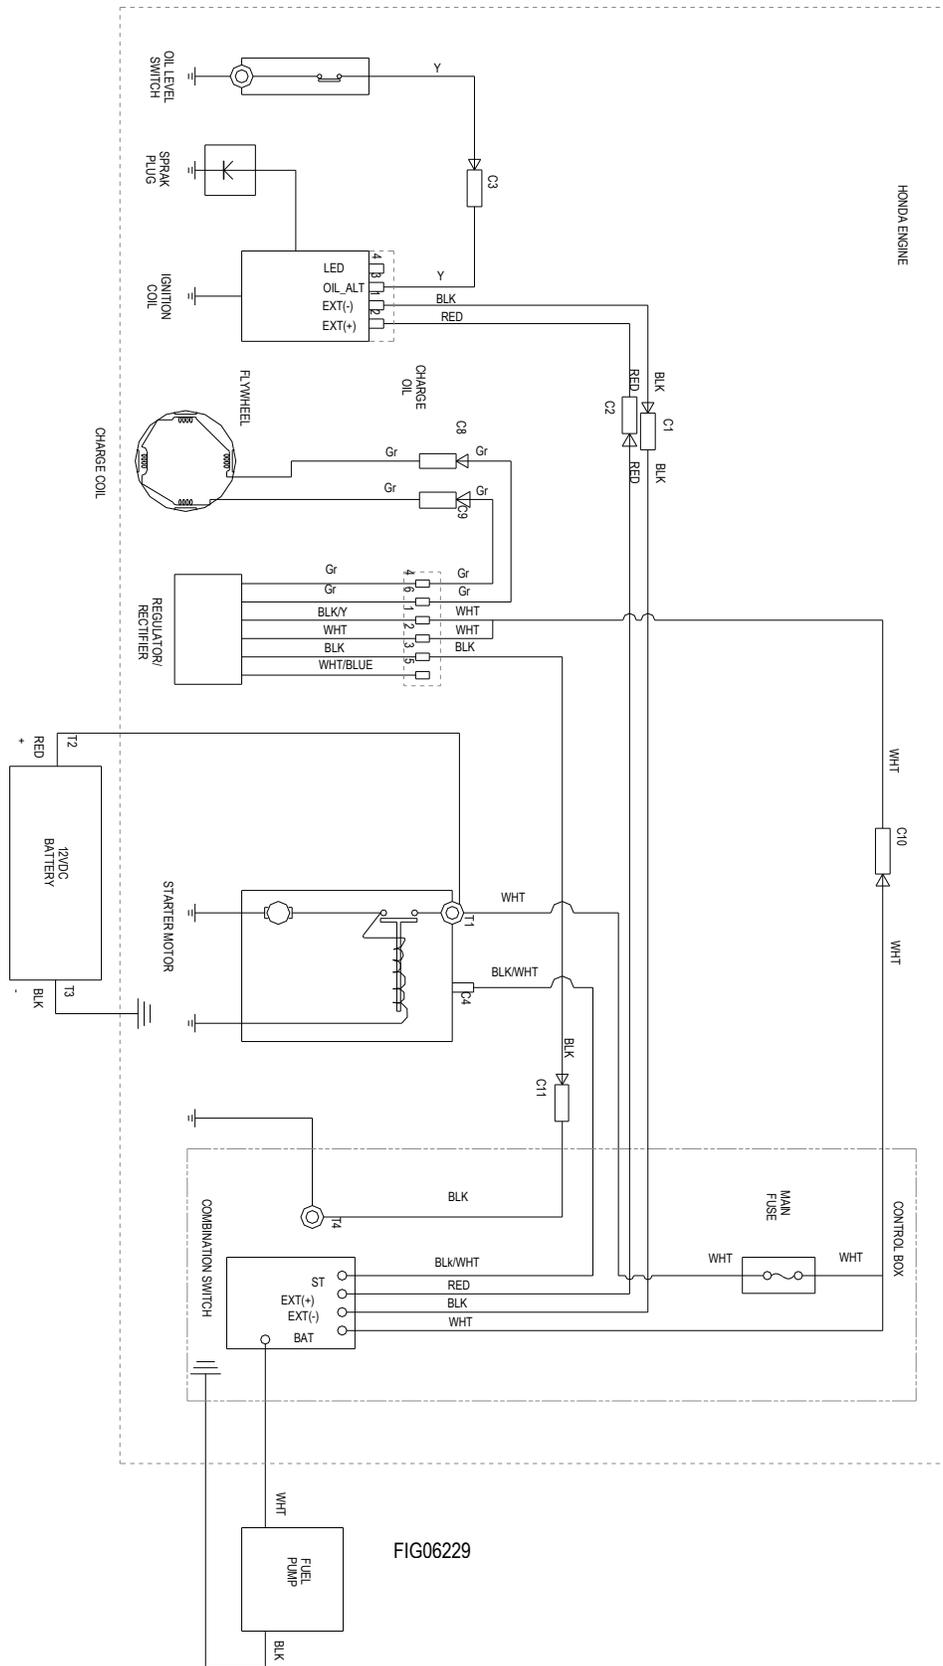

Summary of Important Safety Information

This section provides a summary of the various safety procedures and measures that have been presented throughout the manual. Keep this summary handy and refer to it to refresh your memory about how to safely use your pressure washer.

DANGER

Carefully read and follow all instructions and safety information for using this pressure washer. Improper use or maintenance of the pressure washer can result in **serious injury or death** to the operator or bystanders from:

- **Carbon monoxide poisoning**
- **Fire/explosion**
- **Chemical exposure**
- **Skin/eye injury from high pressure spray**
- **Burns**
- **Slips/falls**
- **Electric shock**
- **Flying objects/debris**

GENERAL

- **Read all instructions.** Read and understand this owner's manual and the engine Owner's Manual completely before attempting to set-up and use the pressure washer. Serious injury or death can result if safety and other instructions are not followed.
- **Instruct all operators.** The pressure washer's owner must instruct all operators and potential renters in safe pressure washer set-up and operation. Do not allow anyone to operate the pressure washer who has not read the Owner's Manual and been instructed on its safe use. Owner's Manuals are available from North Star at 1-800-969-7073.
- **Adult control only.** Only trained adults should set up and operate the pressure washer. Do not let children operate. Pressure washers can generate forces greater than children can control and require judgment beyond what can be expected of children.
- **Under the influence.** Never operate, or let anyone else operate, the pressure washer while fatigued or under the influence of alcohol, drugs, or medication.
- **Understand intended use.** Carefully read about and understand the intended use of this pressure washer. Do not use for other purposes, as unforeseen hazards or equipment damage may result.

PROHIBITION AGAINST MODIFICATIONS

Never modify or alter the pressure washer in any way, or deactivate any safety device. Modifications can create serious safety hazards and will also void the warranty.

- **Fuel/exhaust system.** Never add to or modify the exhaust system, fuel tank, or fuel lines. Carbon monoxide poisoning, fuel leaks, fire or explosion could result.
- **Unloader valve.** Do not attempt to alter the unloader valve's maximum pressure. Excess pressure could cause serious injury from escaping high-pressure fluids and/or pump damage. Any alteration other than turning the adjustment knob will void your warranty.
- **Guards.** Do not operate pressure washer unless all guards and cover shields are in place.

SAFETY – INSTALLATION & SET-UP

BATTERY SAFETY

Batteries are hazardous because they contain caustic acid, can emit explosive gases, and can cause electric shock. *Caution must be exercised when making connections to a battery to avoid shock and contact with the acid, and to prevent any sparking that could lead to an explosion.* Follow these and other safety rules carefully when connecting battery to pressure washer:

- **Eye/skin protection.** Always wear eye protection and protective clothing when connecting or disconnecting battery.
- **Sparks/Smoking.** Never smoke or work near sparks or other sources of ignition.
- **Electric shock.** Never touch both battery terminals at the same time with your hand or any non-insulated tools.
- **Connection/disconnection sequence.** ALWAYS connect and disconnect cables to the correct battery terminals in the proper sequence:
 - 1) When CONNECTING the battery, connect the RED cable to the POSITIVE terminal FIRST.
 - 2) When DISCONNECTING the battery, disconnect the BLACK cable from the NEGATIVE terminal FIRST.
- **Acid/skin contact.** If battery acid contacts skin or clothing, flush immediately with water and neutralize with baking soda.

INSTALLATION / INITIAL SET-UP

- **Level, heat-resistant surface.** Situate pressure washer on a firm, level, and heat-resistant surface with good drainage. Ensure it sits level and will not slide or shift during operation. Block wheels to prevent movement.

Summary of Important Safety Information

- **Prevent carbon monoxide poisoning – Use outside only!** Exhaust fumes from both the engine and the burner contain carbon monoxide (CO), a poisonous gas you cannot see, smell, or taste. The CO generated by the pressure washer can rapidly accumulate, even in areas that appear to be well-ventilated, resulting in dangerous and fatal concentrations within minutes. To prevent dangerous CO build-up:
 - ONLY use pressure washer outdoors and at least 20 feet from the home, away from windows, vents and air intakes, to allow proper ventilation. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY.
 - NEVER run pressure washer in an enclosed or partially enclosed location such as a building, garage, shed, or vehicle. Running a fan or opening windows will not provide adequate ventilation to prevent dangerous CO build-up.
- **Adequate ventilation.** The pressure washer needs adequate, unobstructed flow of air to allow for proper combustion and cooling. Situate so there is adequate clearance around pressure washer to allow for airflow – at least 7' from any non-combustible wall or obstruction. Never place any objects against or on top of pressure washer.
- **CO alarms.** Ensure that working, battery-operated or battery back-up carbon monoxide alarms are used in any dwelling/structure that is in close proximity to the running pressure washer.
- **Hot exhaust - fires.** Exhausts from engine and burner can be extremely hot and cause fire. Position sprayer so engine and burner exhausts are at least 7' away from combustible objects during operation.
- **Spark arrestor usage.** Equip engine with a spark arrestor if pressure washer will be used near any ignitable forest, brush, or grassy land. See the Specifications section of this manual to determine if your pressure washer is already equipped. In such conditions, make sure you comply with applicable local, state and federal codes.

FUEL SAFETY

Gasoline is highly flammable and explosive; and burner fuels are combustible at warm temperatures. You can be burned or seriously injured when handling fuel. Using extreme care when handling fuel, including these preventative measures:

- **Fuel outdoors.** Fill fuel tank outdoors – never indoors. Fuel vapors can ignite if they collect inside an enclosure. Explosion can result.
- **Use approved container.** Never pump fuel directly into fuel tank at gas station. Static charge can build and ignite fuel. Use an UL approved fuel container to transfer fuel to the engine.
- **Running / hot engine.** A hot engine or burner is hot enough to ignite fuel. Never add fuel or remove fuel cap if engine or burner are running or still hot. Allow engine to cool at least two minutes before adding fuel.
- **Heat / flames / sparks.** Stay away from sources of heat, flame, or sparks while adding fuel.
- **Don't overfill.** DO NOT overfill the fuel tank. Allow at least 1/2" of empty space below the fill neck to allow for fuel expansion.
- **Replace cap.** Replace fuel cap securely before starting engine.
- **Spills.** Clean up fuel spills immediately. Move pressure washer away from spilled fuel on the ground. Wipe fuel off engine and wait 5 minutes for excess fuel to evaporate before starting engine. Fuel soaked rags should be disposed of properly.
- **On skin / clothes.** If fuel is spilled on your skin or clothes, change clothes and wash skin immediately.
- **Inspect fuel system.** Check fuel tanks and fuel system on a regular basis. Look for signs of leaks, deterioration, chafed or spongy fuel hose, loose or missing fuel hose clamps, damaged fuel tank, or a defective fuel shut-off valve. Do not start pressure washer until needed repairs have been completed.
- **Fuel storage.** Store fuel in a cool, dry place in an UL-approved, tightly sealed container.

SAFETY – OPERATION

PRE-START

- **Review safety rules.** Before each use of this pressure washer, review the "Rules for Safe Operation." Failure to follow these rules may result in serious injury or death.
- **Know how to stop.** Be thoroughly familiar with proper use of the equipment and all controls and connections. Know how to stop the pressure washer and relieve system pressure quickly if needed.
- **Danger: High-pressure fluid injection hazard.** High-pressure fluid spray or discharge from leaks (even pin-sized) or ruptured components can pierce the skin and inject fluid into the body. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene and possibly amputation.
- **Check/maintain machine before each use.** Check hoses & fittings for damage and leaks before use. Ensure all components are properly connected. Follow all maintenance instructions specified in pressure washer and engine manuals.
 - Never operate machine with damaged or missing hoses/parts. Never attempt to repair a high-pressure hose or component. Always replace it with a part that is rated at or above the pressure rating of this machine.
 - Never run the machine without sufficient lubrication or sufficient water to cool the pump.

Summary of Important Safety Information

- Never operate unless all safety guards are in place.
- **Position safely.** Place sprayer on firm, level ground to prevent accidental falls and equipment tip-over.
- **Not in presence of combustibles.** Do not use the pressure washer in the presence of flammable vapors, dust, gases, or other potentially combustible materials. Operate only where open flame or torch is permitted
- **Use backflow preventer.** The use of a back flow preventer on the water supply hose is recommended and may be required by local code.
- **Clear work area.** Clear work area of all bystanders. Keep children and pets away.
- **Wear protective gear.** High-pressure spray can cause eye/skin injury, hot water can burn, and flying objects/debris can cause injury. Serious injection injury can result if high-pressure spray penetrates the skin. Operators should wear waterproof, thermally insulated gloves, safety glasses with side and top protection, face protection, and protective clothing when operating the machine. If spraying pressure washer specific cleaning chemicals, wear a respirator or mask to avoid inhalation of vapors if directed on the chemical label.
- **Wear non-slip footwear.** Use of pressure washer can create puddles and slippery surfaces. Wear footwear capable of maintaining a good grip on wet surfaces.
- **Check sprayer nozzle.** Sprayer nozzle can become a projectile and cause serious personal injury or property damage if not properly connected to the spray gun. Check to ensure the nozzle has been properly attached to the spray gun before using the pressure washer.

DURING USE

- **Safety latch locked before starting engine.** Always engage the safety latch on the spray gun trigger before starting the engine.
- **Incoming water supply on.** Do not run the pump without the water supply connected and turned on. Operating the pressure washer without an incoming flow of water will damage the pump.
- **Wait before re-lighting burner.** NEVER attempt to immediately run or re-light the burner if it doesn't ignite the first time. Unburned oil or gas may have accumulated, causing potential explosion or fire hazard.
- **Use two hands.** Pressure washer spray gun kicks back when triggered. Firmly grasp with two hands.
- **Stay alert.** Watch what you are doing at all times.
- **Prevent slips / loss of balance.** High-pressure spray could cause you to lose balance from kickback forces, and wet surfaces can be slippery.
 - Keep good footing and balance at all times.
 - Do not overreach.
 - Do not stand on unstable support when spraying.
 - Use extreme caution when spraying from a ladder or scaffolding, ensure it is firmly anchored from sway or tip-over. Use extreme caution to avoid falling as spray gun kick can propel you off the ladder or scaffolding.
 - Be aware of puddles and slippery surfaces. Ensure there is adequate drainage to prevent pooling of water.
- **Keep spray away from people.** Never direct discharge stream at or near any person. Do not allow any part of the body to come in contact with the fluid stream. High-pressure spray will cause serious skin, eye, or falling injuries, and hot water can burn. Injection injury will occur if high-pressure spray pierces the skin, injecting liquid under the skin. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene and possibly amputation.
- **Prevent surface damage & flying debris.** – Surfaces being sprayed must be strong enough to withstand high-pressure spray, or damage may result. In addition, high-pressure spray will dislodge unsecured objects as well as surface chips and debris, resulting in hazardous flying objects that can cause personal injury or property damage. Do not spray brittle surfaces or breakable, fragile, or unsecured objects such as:
 - stucco or laminar flagstone
 - some painted surfaces
 - windows or glass doors (because they may break)
 - light fixtures, flowerbeds, mailboxes
 - unsecured, lightweight objects
- **Do not lock spray gun trigger in ON position.** To reduce risk of injury, do not attempt to secure the spray gun open by blocking or tying the spray gun in the open position.
- **Keep spray away from electrical wiring.** Spray contact with electrical wiring will likely result in severe electrical shock or electrocution.
- **Use only approved cleaning chemicals.** Only chemicals specifically designed for use in pressure washers may be used. Never spray acids, corrosives, or abrasive or flammable liquids. Breathing hazards, surface burns/corrosion, or fire/explosion could result.
- **Follow cleaning chemical manufacturer's instructions.** Follow the chemical manufacturer's label instructions when handling or spraying chemicals. Understand all safety hazards and first aid for all chemicals being used. Wear protective gear as directed. Always wear protective gloves when handling and cleaning with chemicals. When cleaning filters, check whether dangerous chemicals have been used

Summary of Important Safety Information

with the filter and take any precautions that may have been recommended by the supplier of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.

- **Do not exceed pressure and or temperature limits.** Do NOT operate this pump with components (such as hose, connections, and spray gun) rated for lower pressure and or temperature limits than the machine's maximum rated pressure and temperature, or component could rupture and cause serious personal injury from escaping high pressure fluids. Do not set the pressure safety device above the rated pressure. **If the high-pressure safety device ever discharges water, turn the engine off and do not use the machine. The device will no longer function properly. See a dealer or call Product Support at 1-800-969-7073.**
- **Never pull by hose.** Do not move this machine by pulling on the hose. Hose or connections could fail and result in catastrophic high-pressure release of fluid as well as hose whipping.
- **Avoid sharp objects.** Keep hose away from sharp objects. Bursting hoses may cause injury.
- **No load bearing.** Do not use the pump to support other items of equipment that impose unacceptable loads on the pump. Do not attempt to use this machine as a prop.
- **Hot exhaust/parts.** Stay clear of engine and burner exhausts. Never touch hot engine muffler, burner/heating coil, or other hot surfaces. All are very hot and will burn you.
- **Hot spray gun metal when using burner.** Never touch the metal screw or any metal parts of the spray gun when the heater is being used – the metal gets very hot and will burn you.
- **Smoking/sparks.** Never smoke near the running engine, and never operate near sources of sparks or flames, as flammable fuel vapors are in the vicinity of the pressure washer.
- **Lock trigger safety latch when not spraying.** Spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger release. Rotate safety latch to the locked position when not spraying.
- **Relieve water pressure.** Always stop the product and relieve system pressure before leaving the sprayer unattended, or when disconnecting hoses, removing nozzles, or servicing the pump.
- **Refueling.** Never add fuel to the engine or fuel to the burner unless unit is off and has cooled.
- **Do not direct spray at this machine.** Do not attempt to clean this machine with its own spray. Engine damage will result. Cleaning should be done with a damp sponge with the engine OFF.
- **Seek medical aid for suspected carbon monoxide poisoning.** The running engine gives off carbon monoxide, a poisonous gas that can kill you. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.
- **Seek medical aid for suspected injection injury.** If injured by high-pressure fluid, no matter how small the wound is, see a doctor at once. A typical injection injury may be a small puncture wound that does not look serious. However, severe infection or reaction can result if proper medical treatment is not administered immediately by a doctor who is familiar with injection injuries.
- **Other exhaust dangers.** This product contains or emits chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Avoid inhalation of exhaust.

AFTER USE

- **Cool engine before storing.** Let engine cool for at least five minutes before storing. A hot engine is a fire hazard.
- **Prevent accidental starting.** When pressure washer is not in use, remove spark plug or spark plug wire in order to ensure that pressure washer cannot be started in a storage location or by untrained persons.
- **Storage location.** Store the pressure washer in a dry location away from sources of heat, open flames, sparks or pilot lights – such as water heaters, space heaters, furnaces, clothes dryers, or other gas appliances – EVEN IF the pressure washer's gas tank is empty, residual vapors or fuel could ignite.
- **Periodic maintenance.** Perform periodic maintenance as directed in this manual to keep the pressure washer in safe working condition.

Safety - Inspection/Maintenance

Inspect and maintain your pressure washer on a regular basis and repair as needed to keep it in safe working condition:

- **Turn off / relieve pressure first.** Turn off pressure washer and relieve system pressure before inspection or maintenance. Remove spark plug or spark plug wire before working on the engine or pressure washer to prevent accidental starting.
- **Fuel valve off.** Turn fuel shut-off valve to OFF position before transporting or servicing the pressure washer.
- **Follow maintenance schedule.** Follow all maintenance instructions in this pressure washer manual and the engine manual.
- **Replace guards / shields.** Make sure all guards and shields are replaced after servicing the pressure washer.
- **Replacement parts.** If a part needs replacement, only use factory approved repair parts. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the pressure washer and will void the warranty.

Limited Warranty

Dear Valued Customer:

The NorthStar ProSHOT Product you just purchased is built with the finest material and craftsmanship. Use this product properly and enjoy the benefits from its high performance. By purchasing a NorthStar ProSHOT product, you show a desire for quality and durability. Like all mechanical equipment this unit requires a due amount of care. Treat this unit like the high quality piece of machinery it is. Neglect and improper handling may impair its performance. Please thoroughly read the instructions and understand the operation before using your product. Always contact NorthStar ProSHOT Product Support at 1-800-969-7073 prior to having any service or warranty work performed, as some services performed by parties other than NorthStar ProSHOT approved service centers may void this warranty. This warranty is in lieu of any other warranty expressed or implied and NorthStar ProSHOT assumes no other responsibility or liability outside that expressed within this warranty.

Limited Warranty

NorthStar ProSHOT shall warranty any piece of equipment manufactured, or parts of equipment manufactured, to be free from defects in material or workmanship for a period of:

| Item | Commercial/Consumer Warranty | Details |
|------------------------------|---|---|
| Structural Steel Components | 8 years from date of purchase | NorthStar ProSHOT shall warrant structural steel components from failure for a period of 8 years from the date of purchase by user. Structural steel parts include but are not limited to, Roll cage, chassis, Pump/engine/generator mount, hose reel mount, fenders, bumper, tongue, tank platform, control box mount, battery mount, and ladder racks. |
| Heat Exchanger Coil Weldment | 7 years from date of purchase | NorthStar ProSHOT shall warrant the Coil from defects in material or workmanship for a period of 7 years from the date of purchase by user. Warranty does not cover damage from freezing, or obstruction due to buildup of scale or soot. |
| General Pump | 5 years from date of purchase, Life time on pump manifold | This warranty excludes all wear parts. For more details See General Pumps terms and Conditions |
| Engine | 3 years from date of purchase | The engine warranty is covered under the terms and conditions as outlined by the engine manufactures warranty and is the sole responsibility of the engine manufacture. Normal engine maintenance such as spark plugs, air filters, adjustments, fuel system cleaning and obstruction due to build up is not covered by this NorthStar ProSHOT warranty. |
| NorthStar ProSHOT | 2 years from date of purchase | The Balance of the machine less the other specific warranties mentioned. |
| Chemical injector & Unloader | 1 year from date of purchase | NorthStar ProSHOT shall warrant the Chemical injector and Unloader valve from defects in material or workmanship for a period of 1 year from the date of purchase by user. |
| Normal wear items | 90 days from date of purchase | In addition to the normal warranty, NorthStar ProSHOT shall warrant any normal wear item from defects in material or workmanship for a period of 90 days from the date of purchase by user. Normal wear items include, but are not limited to, nozzles, quick connect fittings, valves, high and low pressure water seals/packing, high and low pressure hoses, O-rings, filter elements, Electrodes, Gun, Lance, Tires, and Brakes |

Limited Warranty

“Consumer use” means personal residential household use by a consumer. “Commercial use” means all other uses, including use for commercial, income producing or rental purposes or when purchased by a business.

This warranty applies to the original purchaser of the equipment (verification of purchase, in the form of a receipt, is the responsibility of the buyer), is non-transferable, and covers parts and labor. Parts will be replaced or repaired at no charge, except when the equipment has failed due to lack of proper maintenance. If a part is no longer available, the part may be replaced with a similar part of equal function. Any misuse, abuse, alteration or improper installation or operations will void warranty. Determining whether a part is to be replaced or repaired is the sole decision of NorthStar ProSHOT. NorthStar ProSHOT will not provide for replacement of complete products due to defective parts. Any costs incurred due to replacement or repair of items outside of a NorthStar ProSHOT approved facility is the responsibility of the buyer and not covered under warranty. Transportation costs to and from service center is the responsibility of the customer.

This warranty specifically excludes the following; failure of parts due to damage caused by accident, fire, flood, windstorm, acts of God, applications not approved by NorthStar ProSHOT in writing, corrosion caused by chemicals, use of replacement parts which do not conform to manufacturer’s specifications, damage related to the use of biodiesel fuel, damage to accessory parts such as starting batteries, damage related to rodent and/or insect infestation, Damage caused by freezing and damage caused by vandalism. Additional exclusions: loss of running time, inconvenience, loss of income, or loss of use, including any implied warranty of merchantability of fitness for a specific use. Also, Outdoor Power Equipment needs periodic parts and service to perform well, and this warranty does not cover instances when normal use has exhausted the life of a component or the engine.

This warranty does not cover any personal injury or damage to surrounding property caused by failure of any part. Repair or replacement of parts does not extend the warranty period.

Normal burner maintenance such as cleaning and adjusting electrodes, descaling the coil, desooting the coil, air adjustments, fuel system cleaning and obstruction due to build up is not covered by this NorthStar ProSHOT warranty.

The engine warranty is covered under the terms and conditions as outlined by the engine manufactures warranty contained herein and is the sole responsibility of the engine manufacture. Normal engine maintenance such as spark plugs, air filters, adjustments, fuel system cleaning and obstruction due to build up is not covered by this NorthStar ProSHOT warranty.

Please fill in the following information and have it on hand when you call in on a warranty claim.

Customer Number: _____

Date of Purchase: _____

NorthStar ProSHOT Serial Number: _____

Item Number: _____

⚠️ WARNING: This product can expose you to chemicals including gasoline engine exhaust, which is known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.



Manufactured by
Northern Tool + Equipment Co., Inc.
Burnsville, MN 55306
NorthernTool.com