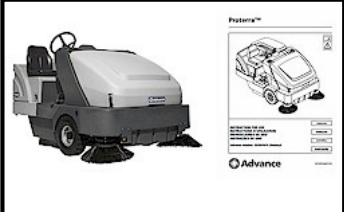

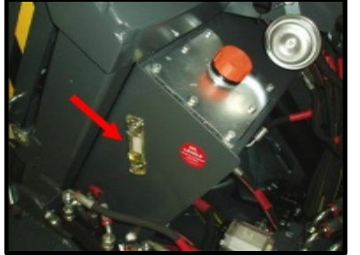

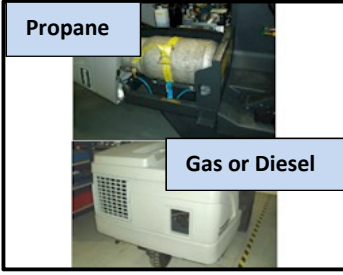
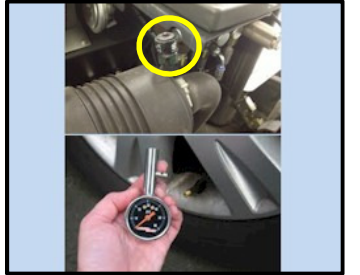












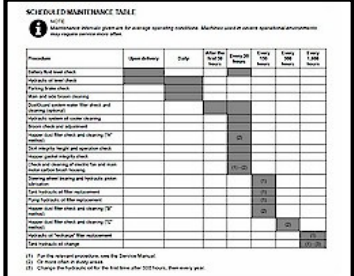




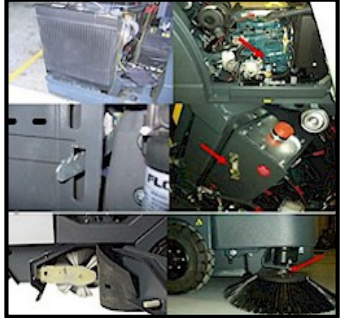
Proterra How To Prepare for Sweeping

1	 <p>Before operating any machine, read the owner's manual carefully and take time to learn the control panel functions.</p>	2	 <p>Check the machine for damage and oil leaks.</p>	3	 <p>Check the hydraulic system oil.</p>
4	 <p>Check battery level indicator to make sure the batteries are fully charged (<i>battery models only</i>).</p>	5	 <p>Check the fuel level: LP models – lift the engine cover and replace the Propane tank (<i>secure the tank with the strap</i>). Gas and Diesel models - carefully add fuel through the fill port.</p>	6	 <p>Check the engine air filter service indicator – engine models (<i>reset the indicator after cleaning or replacing the air filter – engine models</i>).</p> <p>Check the tire pressure (85 psi for all tires).</p>
7	 <p>Familiarize yourself with the operator's interface.</p>	8	 <p>Inspect controls, parking brake and install main broom. Fill dust guard system with clean water (<i>optional for machines with this feature</i>).</p>	9	 <p>Plan cleaning route. Re-inspect the parking brake then prepare for sweeping.</p>

Proterra How To Machine Operation

<p>1</p>	 <p>Adjust seat to desired position. Start the machine</p>	<p>2</p>  <p>Set the throttle (<i>engine models only</i>). Parking brake should be off</p>	<p>3</p>  <p>Engage foot pedal then transport to designated work area (<i>drive safely</i>).</p> 
<p>4</p>	 <p>Lower hopper then lower and turn on main broom.</p>	<p>5</p>  <p>Turn on vacuum fan and dust control system. Turn on DustGuard System (<i>if applicable</i>).</p>	<p>6</p>  <p>Lower and turn on side brooms.</p>
<p>7</p>	 <p>Occasionally monitor the path to make sure machine is picking up debris.</p>	<p>8</p>  <p>Empty hopper</p>	<p>9</p>  <p>Prepare machine for storage and daily maintenance.</p>

Proterra How To Daily Maintenance

1	 <p>Be sure to follow daily and occasional maintenance instructions for the machine you currently have in your possession!</p>	2	 <p>Check parking brake and hydraulic oil. Clean main and side broom. <i>(For Battery Models)</i></p>	3	 <p>Check engine coolant, engine oil, hydraulic oil level, parking brake and clean main and side brooms. <i>(gas, LPG and diesel models)</i></p>
----------	---	----------	---	----------	---

Occasional Maintenance

1	<div style="background-color: #d9e1f2; padding: 5px; text-align: center;">After 1st 50 Hours</div> <p>Diesel/LPG/Diesel Models</p> <ul style="list-style-type: none"> • Change engine oil and filter • Engine coolant circuit and cooling fan belt check • Battery check • Dust control system water filter check and cleaning (optional) <p>Battery Models</p> <ul style="list-style-type: none"> • Dust control system water filter check and cleaning (optional) 	2	<div style="background-color: #d9e1f2; padding: 5px; text-align: center;">Every 30 Hours Gasoline/LPG/Diesel Models</div> <p>Diesel/LPG/Diesel Models</p> <ul style="list-style-type: none"> • Engine cooling fan belt check • Dust control system water filter check and cleaning (optional) • Engine air filter cleaning • Engine radiator and hydraulic system oil radiator cleaning • Broom check and adjustment • Hopper dust filter check and cleaning ("A" method) • Skirt integrity, height and operation check • Hopper gasket integrity check 	3	<div style="background-color: #d9e1f2; padding: 5px; text-align: center;">Every 30 Hours Battery Models</div> <p>Battery Models</p> <ul style="list-style-type: none"> • Battery fluid level check • Dust control system water filter check and cleaning (optional) • Hydraulic system oil cooler cleaning • Broom check and adjustment • Hopper dust filter check and cleaning ("A" method) • Skirt integrity, height and operation check • Hopper gasket integrity check
4	<div style="background-color: #d9e1f2; padding: 5px; text-align: center;">Every 150 Hours Gasoline/LPG/Diesel & Battery Models (if apply)</div> <ul style="list-style-type: none"> • Lubricate steering wheel bearing and hydraulic Hopper dust filter check and cleaning ("B" method) • Tank and Pump hydraulic oil filter replacement • Dust control system water filter check and cleaning (optional) 	5	<div style="background-color: #d9e1f2; padding: 5px; text-align: center;">Every 300 Hours</div> <p>Diesel/LPG/Diesel Models</p> <ul style="list-style-type: none"> • Fuel filter replacement • Fuel fitting and screw tightening • Hopper dust filter check and cleaning ("C" method) <p>Battery Models</p> <ul style="list-style-type: none"> • Hopper dust filter check and cleaning ("C" method) 	6	<div style="background-color: #d9e1f2; padding: 5px; text-align: center;">Every 1000 Hours Gasoline/LPG/Diesel & Battery Models</div> <ul style="list-style-type: none"> • Hydraulic oil "recharge" filter replacement • Tank hydraulic oil change