

Use and maintenance

- SW5500™

ATTENTION! Do not use the machine before you have read and understood the Instructions for use manual



1. Check the fuel tank level, LPG bottle, and battery level.



2. For the battery model, check to make sure the battery compartment is clean.



3. Check that the main broom can freely rotate and is free of debris.




4. If necessary, remove the main broom and clean it.




5. Check the height and wear condition of the side brush(es). If necessary, adjust the height by rotating the adjustment knob(s).



6. Before sweeping check for any dust leak and, if necessary, operate the filter shaker to clean the main filter from dust.

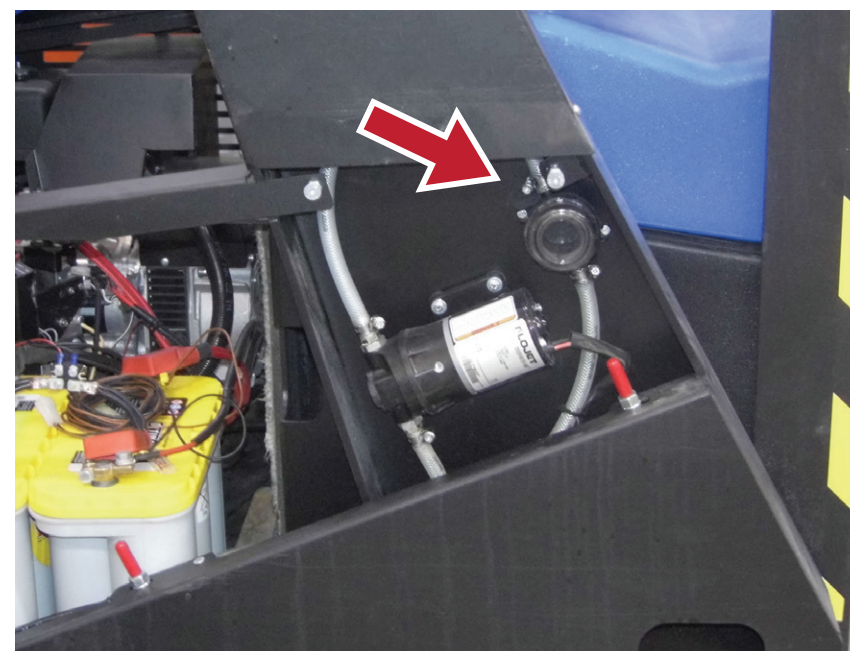

7. If the machine is equipped with DustGuard™, remove the right plastic cover and check the water filter.

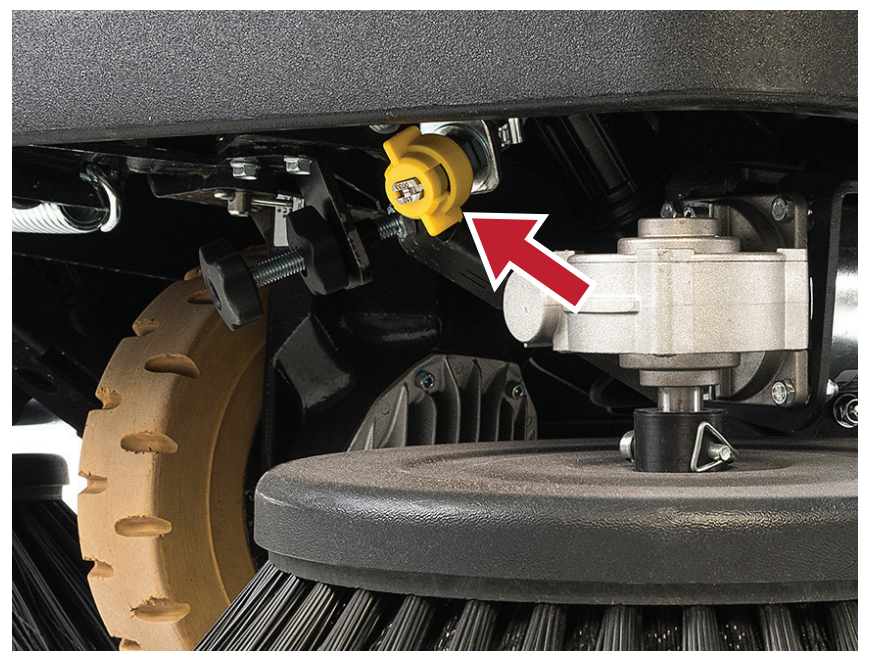

8. If DustGuard™ does not work properly, remove the nozzle filter and clean it.



9. Check that the side skirts are at the proper height and in good condition before sweeping.



If the machine has been used until it flashes the battery level indicator on the display, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended. PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS.