Ultra Speed 20 Battery Burnishers How To

Prepare for use

1

Unplug battery charger.



Wrap cord accordingly.

2



Check/inspect bag. Replace bag if needed.

3



Remove the skirt.

4



Inspect pad for wear.

5



Turn pad retainer counter clockwise to remove the pad.

6



Install new pad/center on outside diameter of the pad driver.

7



Tighten pad retainer in clockwise direction.

8



Prep area to remove debris.

 
9



Turn the key switch to turn the machine on. Check battery power.

Do

10



11



Turn on pad power switch. Press palm buttons to drive machine and lower pad to the floor (traverse models)

12



Press the speed control button to adjust traverse speed.



Press the reverse button while pressing palm buttons to move the machine in reverse



Ultra Speed 20 Battery Burnishers How To

Store the Machine

1



Wipe machine exterior after each use.

2



Plug machine in appropriate outlet to charge batteries.

3



Remove the cover to expose batteries for ventilation.

Ultra Speed 20 Battery Burnishers How To

Maintenance

1



Charge batteries daily.



Check each battery cell's water level, add water if needed.

2

5



Check/Replace Dust Bags.

3



Check/Replace Skirt

Δ



Clean Pad. Replace as needed.

Monthly Maintenance

Lubrication and Check/Service Pad Motor Brushes

6

Yearly Maintenance

Service Drive Motor Brushes

