

Use and maintenance

Operating guidelines AS710R/AS850R



Disconnect battery charger and store the cable in the storage compartment located under the seat.



Fill the solution tank with fresh water and add low foam detergent according to needs.



Solution level indicator is on the side of the tank showing current level.



Install the squeegee and fix it by using the two knobs.



Adjust squeegee angle and blade pressure for optimal water pick-up by turning the adjustment knob on the support.



Insert the operator key and start the machine.



Adjust the maximum speed with the speed adjustment dial.



Adjust water level by pressing + or - button.




Use the Switch to change direction, F= forward and R= reverse.



Lower brush with the foot pedal.



Lower the squeegee with the handle.

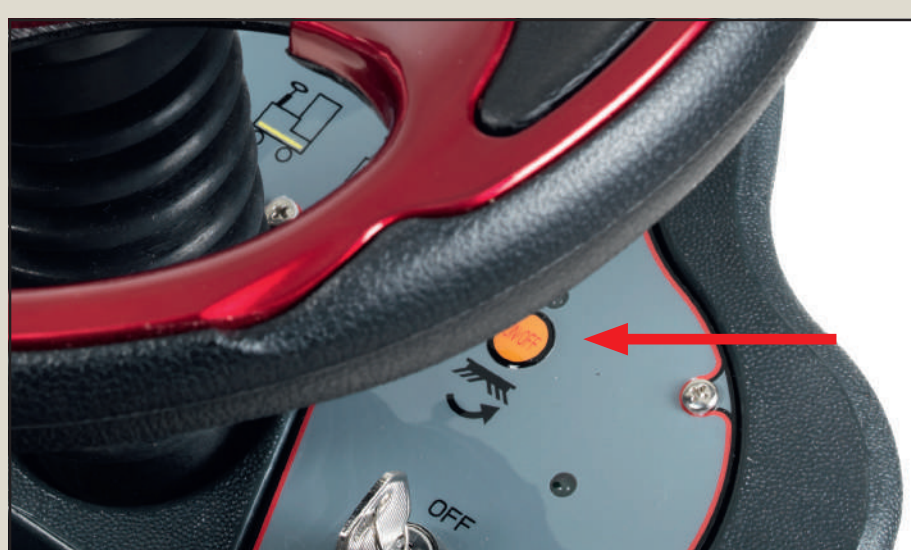

Switch brush motor button on.



Push the drive pedal to start cleaning.

Maintenance


Operating guidelines AS710R/AS850R




Turn OFF the machine using the key.




Empty and clean the recovery tank and float system.

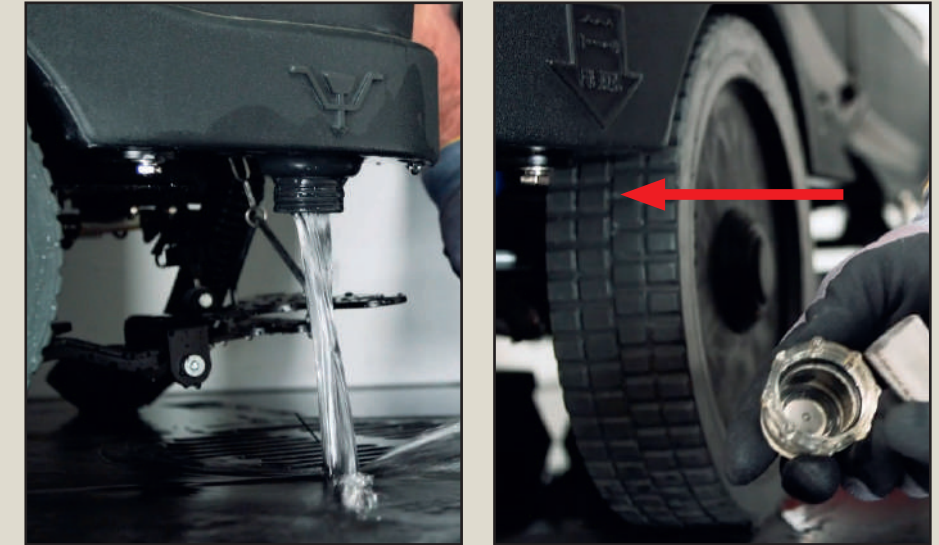

Empty solution tank.
Check and clean filter (weekly).

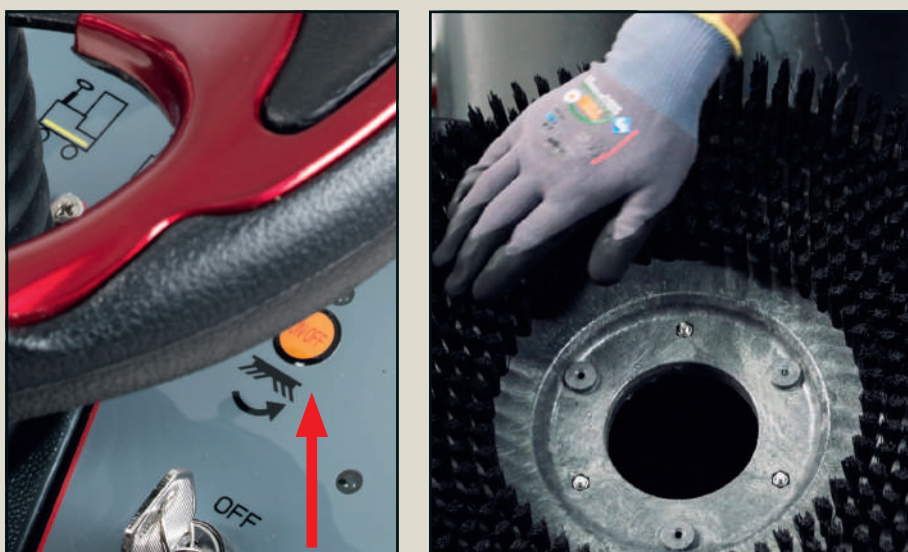

Press the brush click off button and inspect the brush or pad.

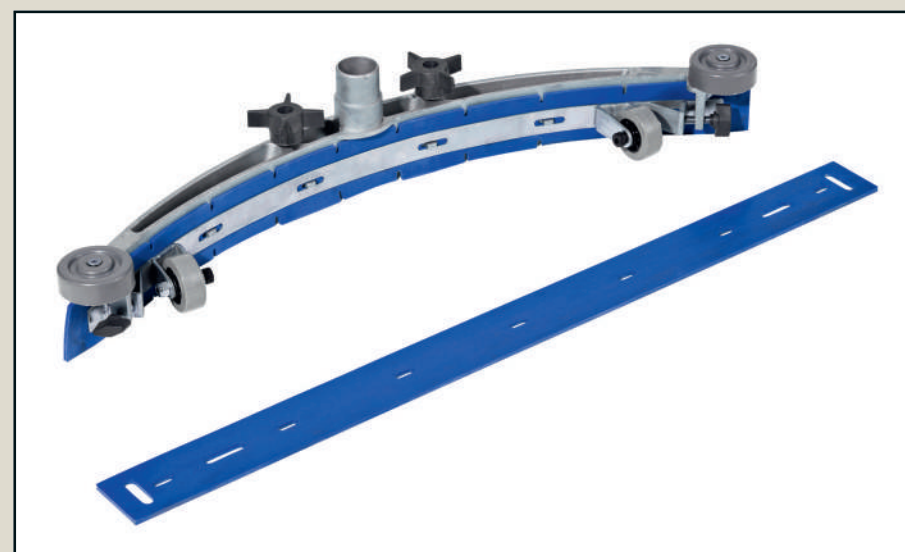


Take the squeegee off, check and clean the blades.



Hang the squeegee on the machine to dry.



Park the machine leaving the recovery tank cover open.

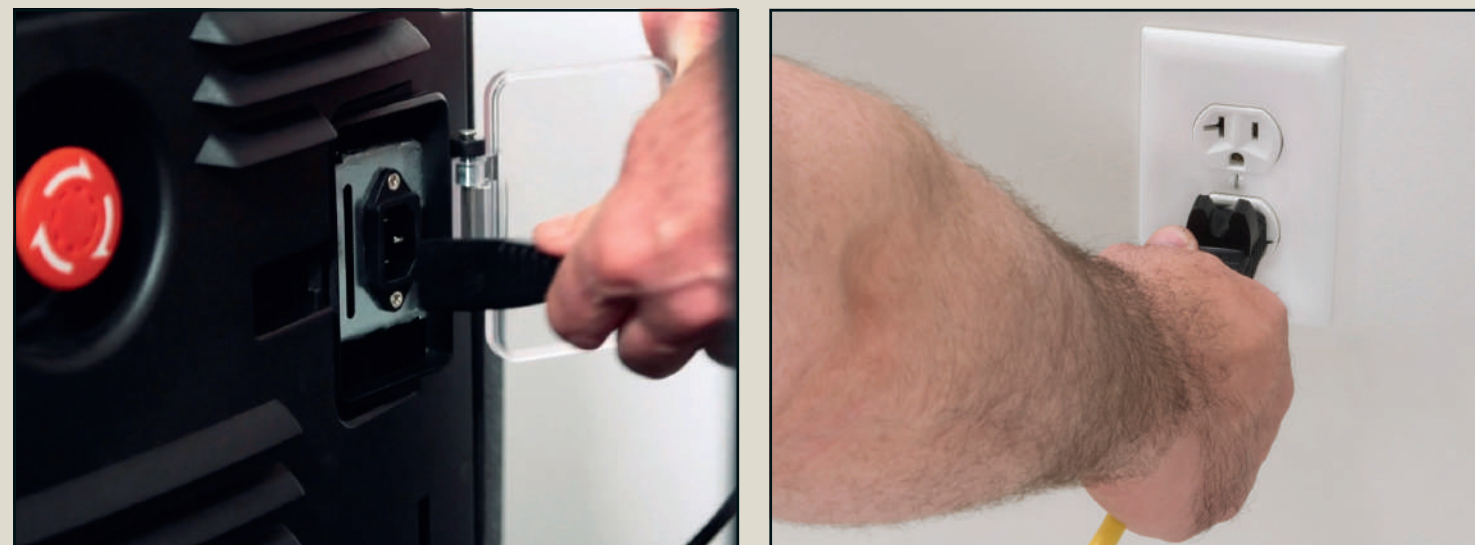

Connect the battery charger cable to the machine and the wall socket.

Nilfisk, Inc.
9435 Winnetka Avenue North
Brooklyn Park, MN 55445
www.nilfisk.us
Phone 800-850-5559
Fax 800-989-6566

Nilfisk Canada Co.
240 Superior Boulevard
Mississauga, Ontario, Canada L5T 2L2
www.nilfisk.ca
Phone 800-668-8400
Fax 800-263-5111

© 2019 Nilfisk, Inc.