
AVAILABLE REPAIR KITS

Rotary Head Kit - Major: P/N 2100202 Includes items 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15 and 17

Rotary Head Kit - Minor: P/N 2100203 Includes items 9, 10, 15 and 17

(12)

Complete Rotary Head Kit: P/N 2103000 Includes all items

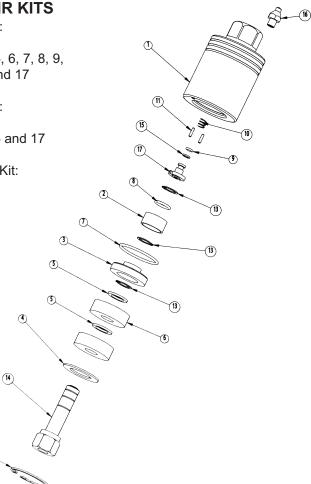

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	2510017	Housing, Swivel	1
2	2520030	Retainer, Bearing	1
3	2520028	Retainer, Bearing	1
4	2520031	Washer, Bearing Retainer	1
5	2520027	Spacer, Bearing	2
6	2640004	Bearing, 15 x 42	2
7	2701012	O-ring	1
8	2701011	O-ring	1
9	2701010	O-ring	1
10	2720007	Spring, Compression	1
11	2530008	Pin	2
12	2200037	Snap Ring	1
13	2520029	Snap Ring	3
14	2200038	Stem, Swivel	1
15	2710000	Back-up Ring	1
16	2640012	Zerk, Grease	1
17	2530007	Stem, Small	1





Ref 300843 Rev. B 09-12



GENERAL PUMP

WARNING: Read Before Operating Machine Always wear protective eyewear Keep clear of rotating nozzles Never lock trigger gun open with any device Drain water in cold weather to avoid freezing Tampering with any part of this machine will void all warranties

Operating Instructions

- 1. Connect to Pressure Washer.
- 2. Turn water on and open valve. Open trigger gun for flow of water through nozzles. Nozzles must have flowing spray. If not, remove tips and clean; reassemble, making sure that groove of nozzle is parallel to spray bar. Use thread sealant when installing nozzles.
- 3. Start Pressure Washer. The Hammerhead is ready for operation.
- 4. Walk slowly behind the Hammerhead cleaning as you go. If striping occurs, slow down your pace.
- 5. Periodically check weep hole on bottom of swivel. Water will seep slowly; if water shoots out, stop and replace seals. Swivel assembly can be rebuilt.
- 6. For maximum effectiveness keep spray tips clean. If the machine vibrates, stop and clean spray tips.
- 7. Grease the swivel with one or two grease gun pumps every 200 hours (or once about every 30 days of use).

DO NOT ALLOW MACHINE TO REMAIN STATIONARY ON SOFT SURFACES SUCH AS WOOD.

Caution: Striking any raised obstacle during operation will damage machine. If contact does occur and results in vibration when operating machine, STOP and replace spray bar. Continued operation could result in serious injury or damage to machine.

> Operating Pressures: 1,000 to 4,000 PSI Max Flow: 8.0 GPM Dimensions: 70" x 21" x 21" Weight: 21 lbs.

General Pump

Ref 300843 Rev. B 09-12 1

2

3

4

5

6

7


8

9

10

11

1174 Northland Drive • Mendota Heights, MN 55120 Phone: 651.686.2199 • Fax: 800.535.1745 www.generalpump.com · sales@gpcompanies.com

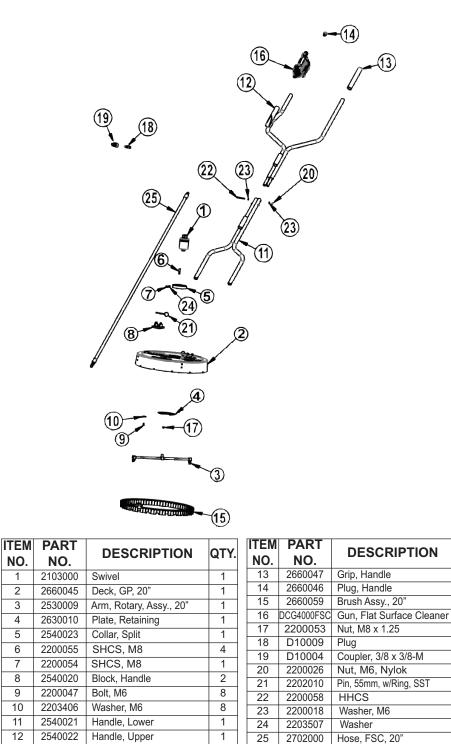

QTY.

1

1

1

1

4

1

1

2

2

2

4

1

1