Hose Reel


300 FT/250FT with Small Reel

Operating instructions (ENG)

MODEL:

8.637-396.0 (300)

8.637-930.0 (250)

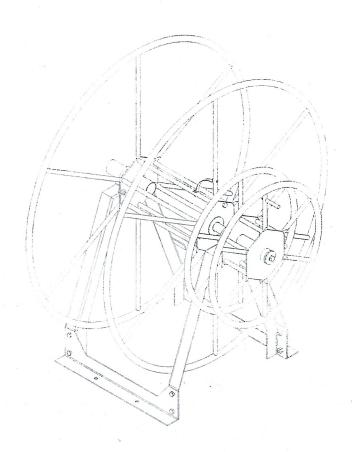

Read these instructions before installation and use

Product Information Log

	1
Model:	
Date of Purchase:	
Dealer:	
Address:	
Phone Number:	
Sales Representative:	

Overview


The Hose Reel is used for hose storage.


Product Information Log
Table of Contents3
Technical Specifications & Assembly.4Technical Specifications.4Frame Assembly.5Large Hose Reel Assembly.6Small Hose Reel Assembly.6Complete Hose Reel Assembly.7Hose Reel Assembly without Small Reel.7Assembly - 300'.8Assembly - 250'.9
Operation

Technical Specifications & Assembly

Technical Specifications

ITEM	SPECIFICATION
Weight	69 lbs (31 kg)
Depth	43.5 In. (1105 mm)
Width	34.0 In. (864) mm 300' Reel - 31.0 In. (777) mm 250' Reel
Height	46.86 ln. (190 mm)
Construction	Steel

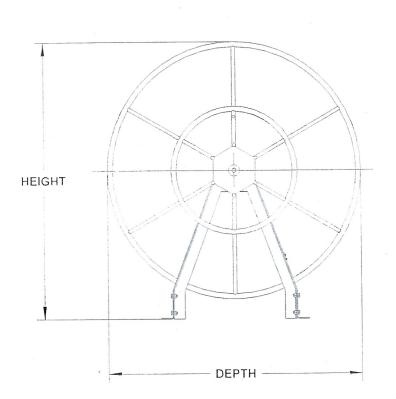


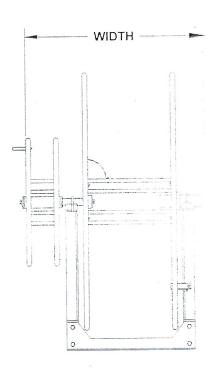

Frame Assembly

1. Assemble frame as shown.

NOTE: Secure all fasteners with medium strength thread locker adhesive.

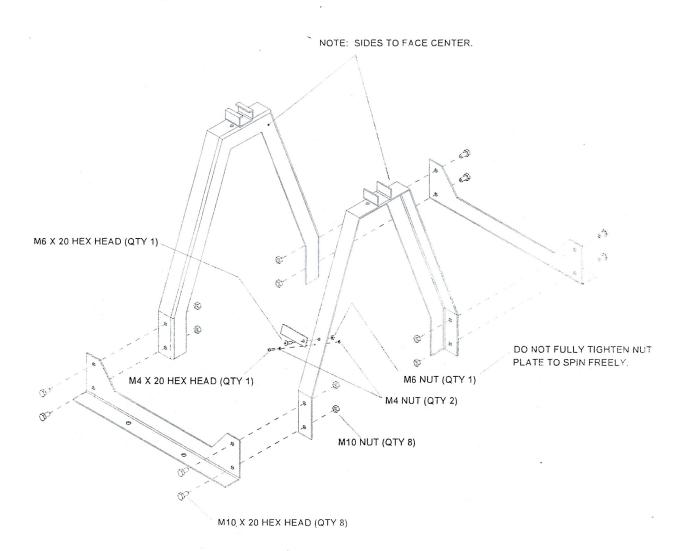



Large Hose Reel Assembly

2. Assmble large reel as shown.

NOTE: Secure all fasteners with medium strength thread locker adhesive.

M10 X 20 HEX HEAD (QTY 1)




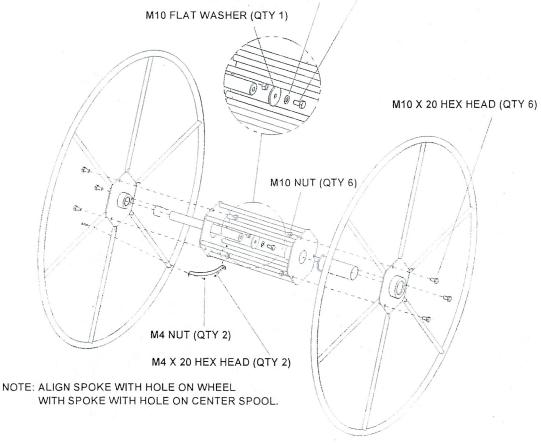

Small Hose Reel Assembly

3. Assemble small hose reel as shown.

NOTE: Secure all fasteners with medium strength thread locker adhesive.

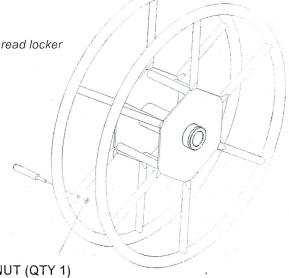


M6 NUT (QTY 1)

86374140 Hose Reel

Complete Hose Reel Assembly


4. Finsh assemble as shown.

NOTE: Secure all fasteners with medium strength thread locker adhesive.

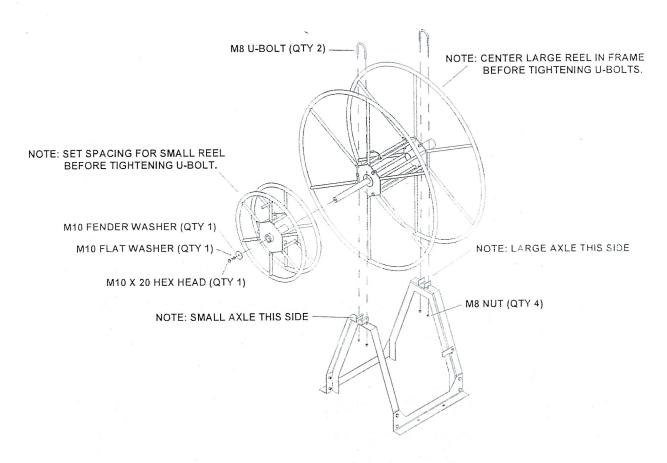

Hose Reel Assembly without Small Reel.

- 1. Position small axle as shown.
- 2. Tighten u-bolt to hold in position.

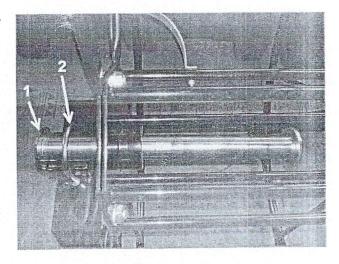


NWARNING


Inspect location before drilling any holes. Do not drill through anything except the floor. Ensure you do not damage any hoses, wires, cables or any vital vehicle components before you drill.

NOTE: Mounting hardware not supplied

- 1. Using the dimesnions below,mark hole locations and drill through the van floor
- 2. Mount securely as shown in the mounting detail.

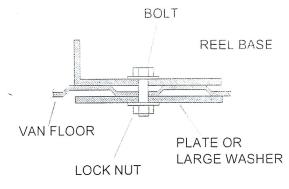

MOUNTING DETAIL

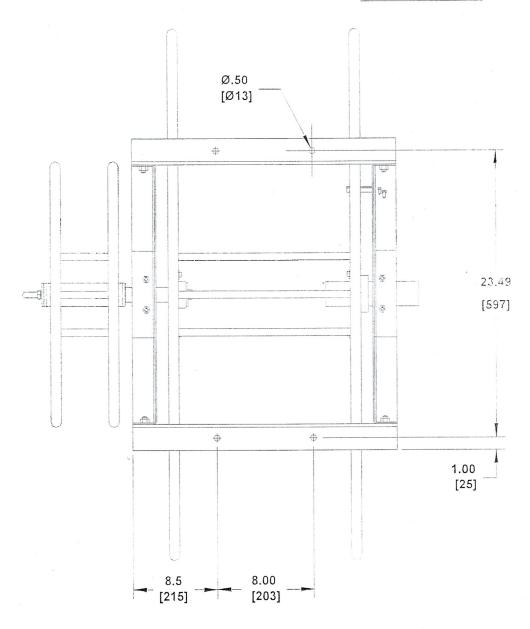



AWARNING

Inspect location before drilling any holes. Do not drill through anything except the floor. Ensure you do not damage any hoses, wires, cables or any vital vehicle components before you drill.

NOTE: Mounting hardware not supplied

- 1. Using the dimesnions below, mark hole locations and drill through the van floor
- 2. Mount securely as shown in the mounting detail.

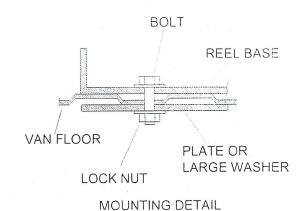


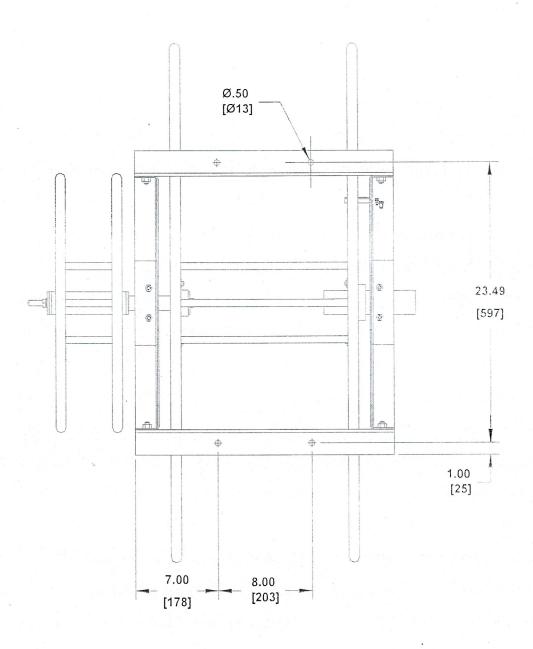

Operation

Connecting Hose to Reel


- 1. Place hose through hose clip.
- 2. Wrap hose around hose reel, keeping tension on the hose, place all wraps snugly against previous wrap.

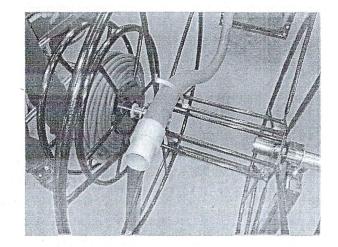

Connect Hose Reel (Live Hose Reel)

- 1. Connect the hose to the large tube, opposite the hose clip.
- 2. Rotate the reel so that the hose is stored on top of the reel as you rotate it away from yourself.

NOTE: The hose is wrapped and secured against the side of the reel.

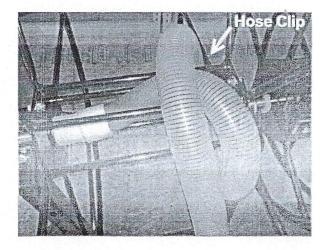

3. Continue to wind hose, keeping tension on the hose. Keep hose as small as possible, allowing the hose to gather from right to left.

