



**DRI-EAZ PRODUCTS, INC.**  
 15180 Josh Wilson Road, Burlington, WA USA 98233  
 Phone: (800) 932-3030 Fax: (360) 757-7950  
 www.dri-eaz.com

# Instructions – Dri-Eaz Rescue Mat System

## READ AND SAVE THESE INSTRUCTIONS

### Use and Operation

The Dri-Eaz Rescue Mat System is used along with a high pressure blower like the DriForce® to vacuum water vapor out of damaged hardwood floors. Ideal for spot drying, the Rescue Mat System is durable and easy to use.

### USES FOR THE RESCUE MAT SYSTEM

#### Spot Drying Hardwood Floors

The Rescue Mat System is applied directly to the damaged area and works fast to restore hardwoods to a dry standard. The system creates a vacuum seal that speeds up the drying process by moving air from the sub-floor to the surface.

### INSTRUCTIONS FOR

#### COMPLETE HARDWOOD DRYING

1. Remove standing water from the floor using the Rescue Mat System and a truck mount or other portable extraction device.
  - Lay the mats on top of the floor, on the affected area. The mats are self-sealing, so there's no need to tape them down.
  - Use the truck mount's extraction hose to pull standing water from the floor. If using multiple mats, connect them to each other using the hoses included with the Rescue Mat System.

**CAUTION:** Ensure that standing water has been extracted thoroughly before proceeding. Do not run liquid water through the DriForce®.

2. Remove the truck mount extraction hose and connect the mats to a high pressure blower like the Dri-Eaz DriForce®.
3. Turn on the blower.
4. For optimum results, install the Dri-Eaz AirWolf/WolfPack System along a nearby wall or cabinet base.


**CAUTION**  
 Trip hazard. The edges of the mats are raised. Place Rescue Mat System out of traffic area or re-route foot traffic to avoid tripping.

### Preventive Maintenance

#### AFTER EACH USE

Routine cleaning of the Rescue Mat System can help prevent cross contamination between jobs. Clean mats by wiping gently with a soft, damp cloth or chamois. Use pure soap or detergent and lukewarm water. Contact Dri-Eaz for any further maintenance questions.

SPECIFICATIONS	
Model	F286 & F287
HxW large	46" x 30" mat
HxW small	23" x 30" mat
Hose with cuffs	7 linear feet
Weight of small mat	2.5 lbs
Weight of large mat	5.0 lbs
Material	PVC plastic
Gasket seal	1/2"
Stackable for storage	Yes
<b>Complete Rescue Mat System (F286)</b> includes: 4 each – 46" x 30" mat, 2 each – 23" x 30" mat, 3 each – 7' hose with cuffs, 2 each – connector sleeves, 6 each – hose cuffs, 5 each – T-connectors, 1 each – gasket roll	
<b>Additional Rescue Mat Panels (F287)</b> includes: 4 each – 46" x 30" mat, 2 each – 23" x 30" mat	

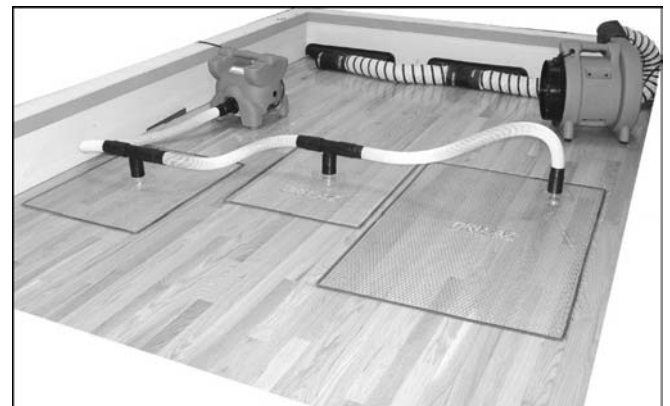

**Pictured:** Rescue Mat System (in foreground) attached to DriForce® blower, with AirWolf/WolfPack along the wall (in background).

**Note:** AirWolf/WolfPack and DriForce® sold separately.

### Troubleshooting

For any problems not listed below call the Dri-Eaz Service Department at 1-888-867-3235.

Problem	Cause	Solution
Mats won't seal	Gasket seal has been damaged	Check gasket seal for any damaged areas; repair with gasket seal tape included with system.