


9/14/2025

Husqvarna Blastrac 2-48DS




248DS
HOUSING

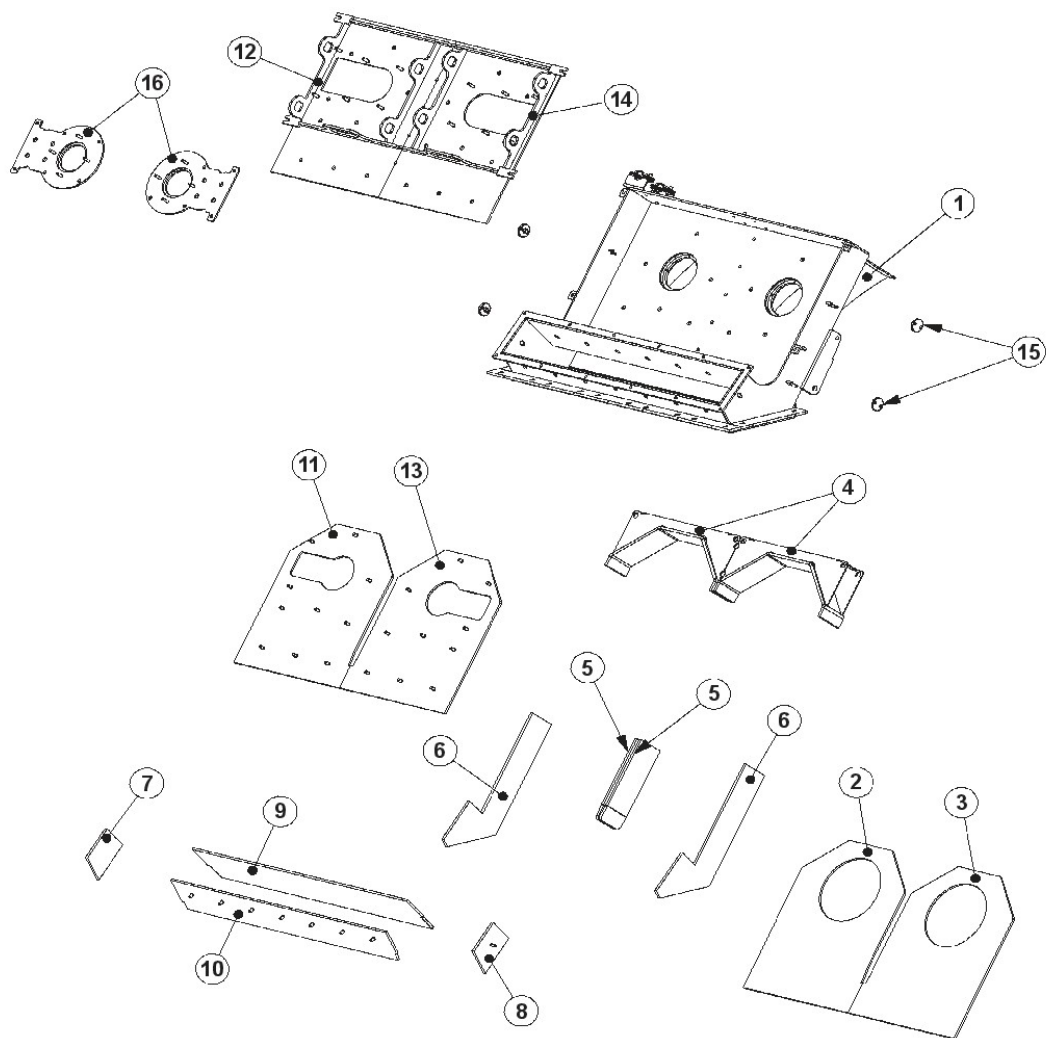


Reference	Article Number	Article Name	Quantity	Comment
1	535109602	HOUSING	1	Blast housing
2	533278801	LINER	1	Rear LH
3	533276701	LINER	1	Rear RH
4	533232501	LINER	2	Top
5	533227301	LINER	2	Inner
6	533223401	LINER	2	Sides
7	533379101	LINER	1	Rebound LH
8	533355701	LINER	1	Rebound RH
9	533294701	LINER	1	Rebound top
10	533329801	LINER	1	Rebound bottom
11	533295801	LINER	1	Front LH
12	533539602	COVER	1	LH
13	533356601	LINER	1	Front RH
14	533739202	COVER	1	RH
15	534669002	FIXING PLATE	4	
16	533589302	MOUNTING PLATE	2	

248DS
SEPARATOR

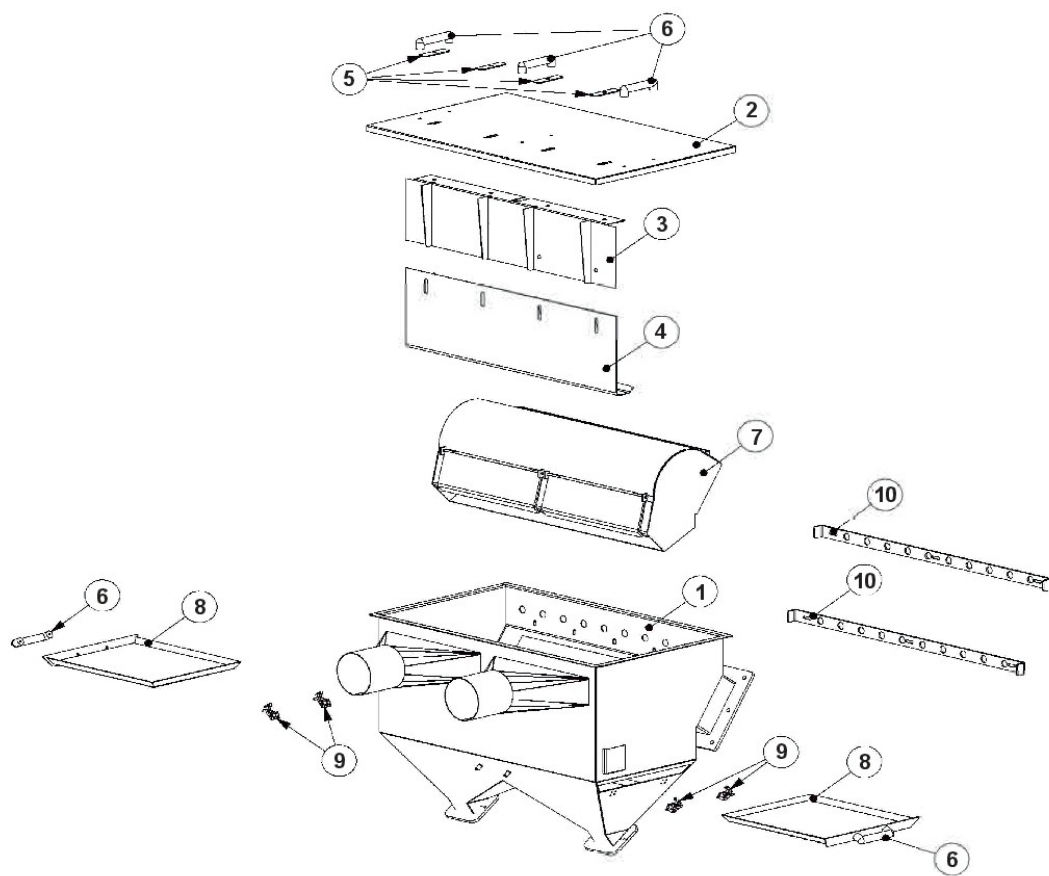

Reference	Article Number	Article Name	Quantity	Comment
1	533117802	SEPARATOR	1	
2	533322502	LID	1	
3	533420302	ADJUSTER	1	Horizontal
4	533375802	ADJUSTER	1	Vertical
5	533252702	FIXING PLATE	4	
6	533170201	HANDLE	5	
7	533152102	DEFLECTOR	1	
8	533256102	TRAY	2	
9	534391301	CLAMP	4	
10	533338402	ADJUSTER	2	Airflow


248DS
DRIVE

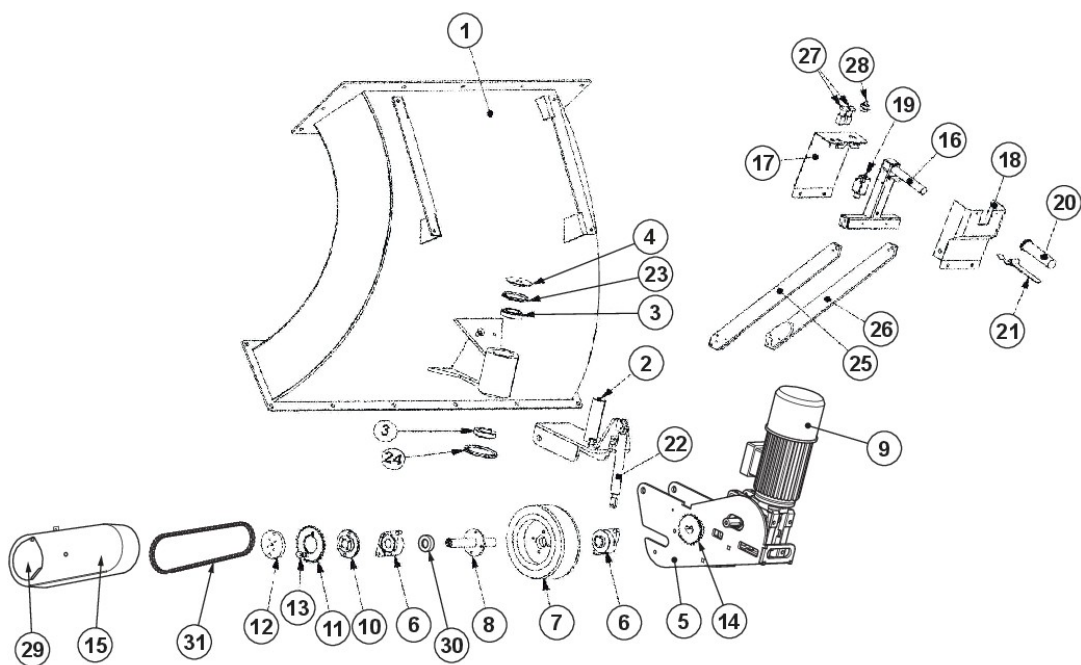


Reference	Article Number	Article Name	Quantity	Comment
-----------	----------------	--------------	----------	---------

1	535232902	FRAME	1	Rebound
2	535251902	SWIVEL BRACKET	1	
3	534313001	ROLLER BEARING	2	Tapered
4	534314501	BEARING COVER	1	
5	546286001	WHEEL BRACKET	1	
6	531474201	BEARING	2	
7	534907101	WHEEL	1	
8	534528801	DRIVE SHAFT	1	
9	546285901	DRIVE MOTOR	1	
10	534642001	HUB	1	
11	534640601	SPROCKET	1	Wheel
12	546615201	RETAINER	1	Wheel sprocket
13	533256401	PIN	1	
14	534529901	SPROCKET	1	Motor
15	535148202	CHAIN GUARD	1	
16	535247702	HANDLE	1	
17	535152602	PLATE	1	Control box top plate
18	535152302	BOX	1	Control box
19	534668101	SWITCH	1	Limit switch
20	534612901	HANDLE GRIP	1	
21	535251702	LEVER	1	
22	533622701	GAS SPRING	1	
23	534929601	V-RING	1	Upper
24	534929701	V-RING	1	Lower


25	535242202	FRAME	1	Handle LH
26	535242302	FRAME	1	Handle RH
27	533850701	PUSH BUTTON	2	
28	533734601	POTENTIOMETER	1	
29	534387302	COVER	1	Chain guard
30	533318901	BUSH	1	
31	533930301	LINK	1	Chain link ISO 1/2"
31	534024703	CHAIN	1	1/2" ISO 1m (use 0.93m)

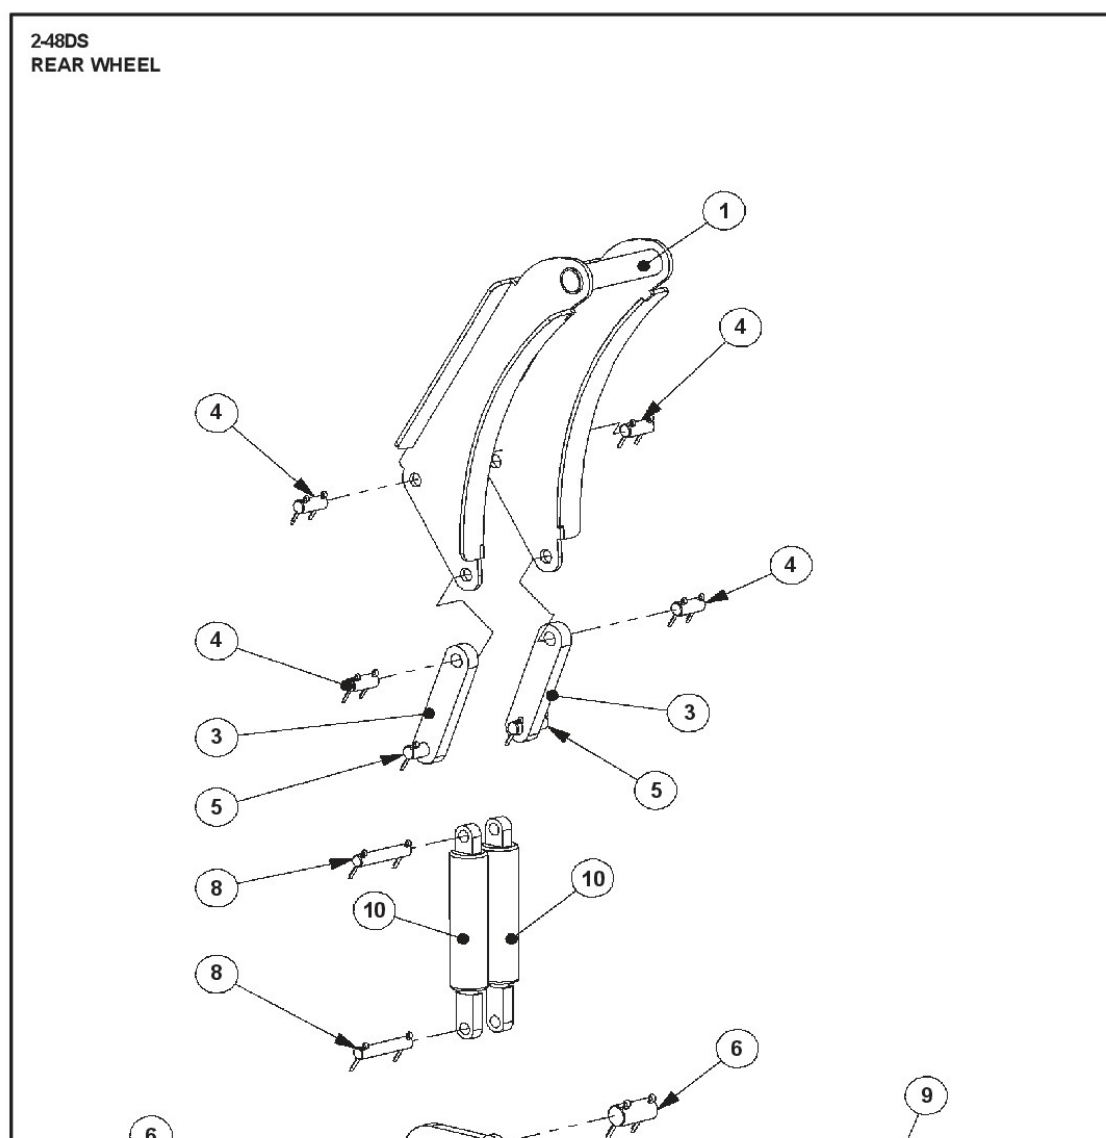

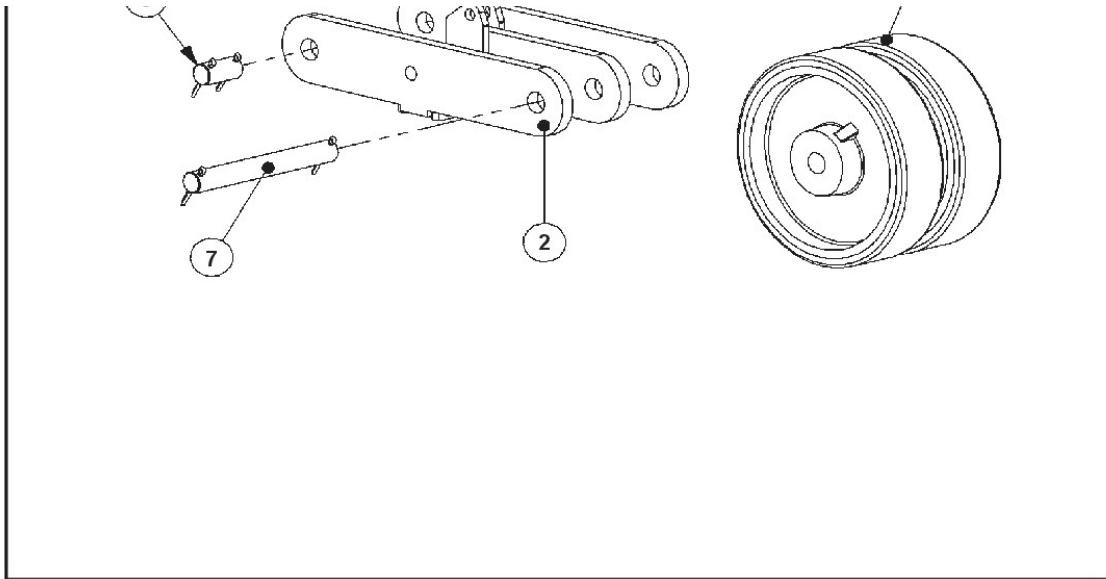

Reference	Article Number	Article Name	Quantity	Comment
1	534385002	BRACKET	2	
2	535231802	WHEEL BRACKET	2	
3	535202102	LEVER	4	
4	534364101	PIN	8	Lever - Bracket and Bracket - Blast housing
5	534664101	PIN	4	Lever - wheel bracket
6	534636201	PIN	4	Wheel bracket - Blast housing
7	534942001	PIN	2	Wheel
8	534424901	PIN	4	Gas spring
9	533336501	WHEEL	4	
10	534775101	GAS SPRING	4	


2-48DS
BLAST WHEEL

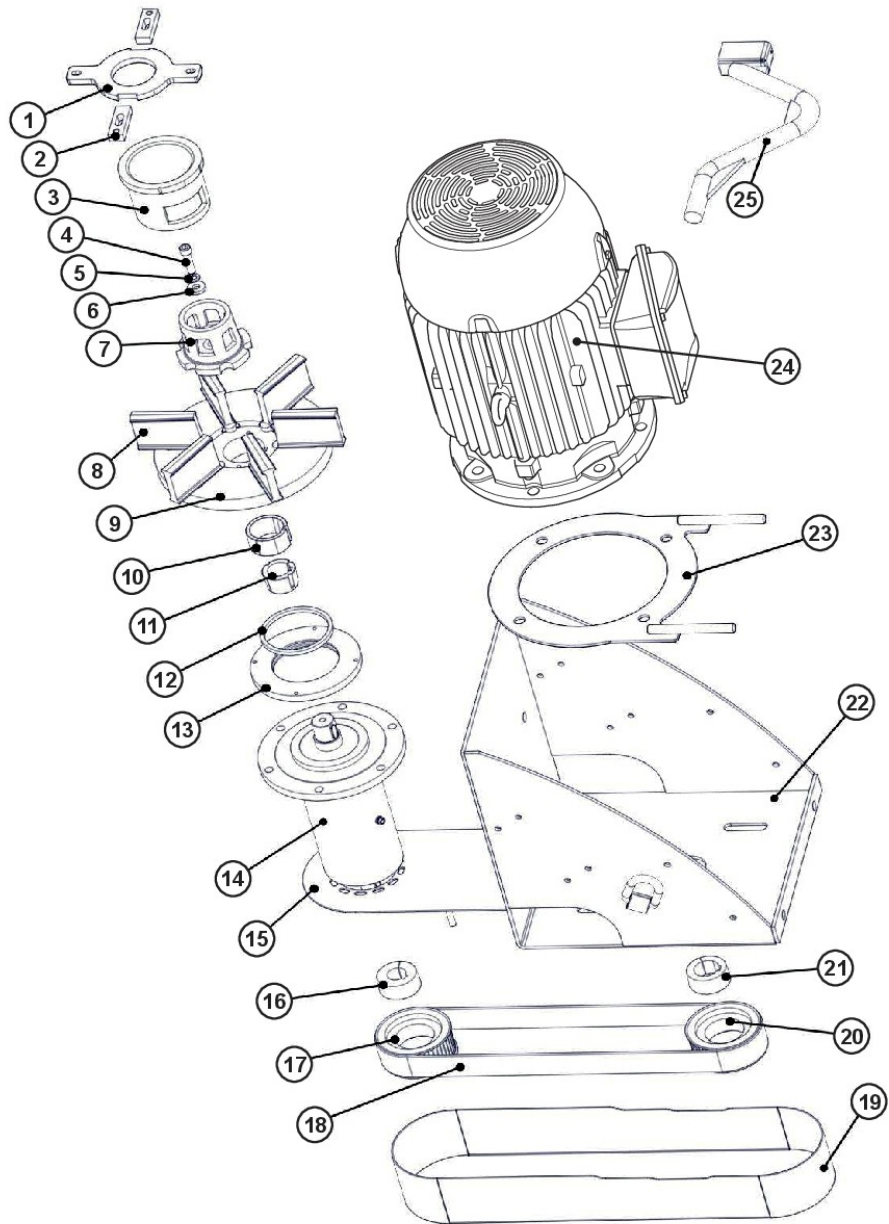

Reference	Article Number	Article Name	Quantity	Comment
-----------	----------------	--------------	----------	---------

1	533367902	PLATE	2	Cage clamp
2	546698901	CLAMP	4	Cage clamp
3	533147101	CONTROL CAGE	2	Control cage
4	534624901	SCREW	2	M12x50 Hexagon socket
5	533288701	WASHER	2	M12 Spring lock washer
6	533836901	WASHER	2	M12 Heavy washer
7	533264301	IMPELLER	2	
8	533440901	BLADE SET	2	set of 6
9	534340401	WHEEL	2	Blast wheel
10	533017101	ADAPTER	2	Taper lock
11	533259701	BUSHING	2	Taper lock
12	533211201	SEAL	2	
13	533299901	SEALING RING	2	
14	533665802	BEARING UNIT	2	
15	535104602	BACKPLATE	2	Belt guard
16	534892201	BUSH	2	Taper lock
17	533287601	PULLEY	2	50Hz
17	533222501	PULLEY	2	60Hz
18	533430001	DRIVE BELT	2	
19	534321802	BELT GUARD	2	
20	533287501	PULLEY	2	
21	533089001	BUSHING	2	Taper lock
22	535212902	BRACKET	2	
23	533334902	SPACER PLATE	2	


24	546144601	MOTOR	2	Blast motor
25	535108902	TOOL	1	Blade removal

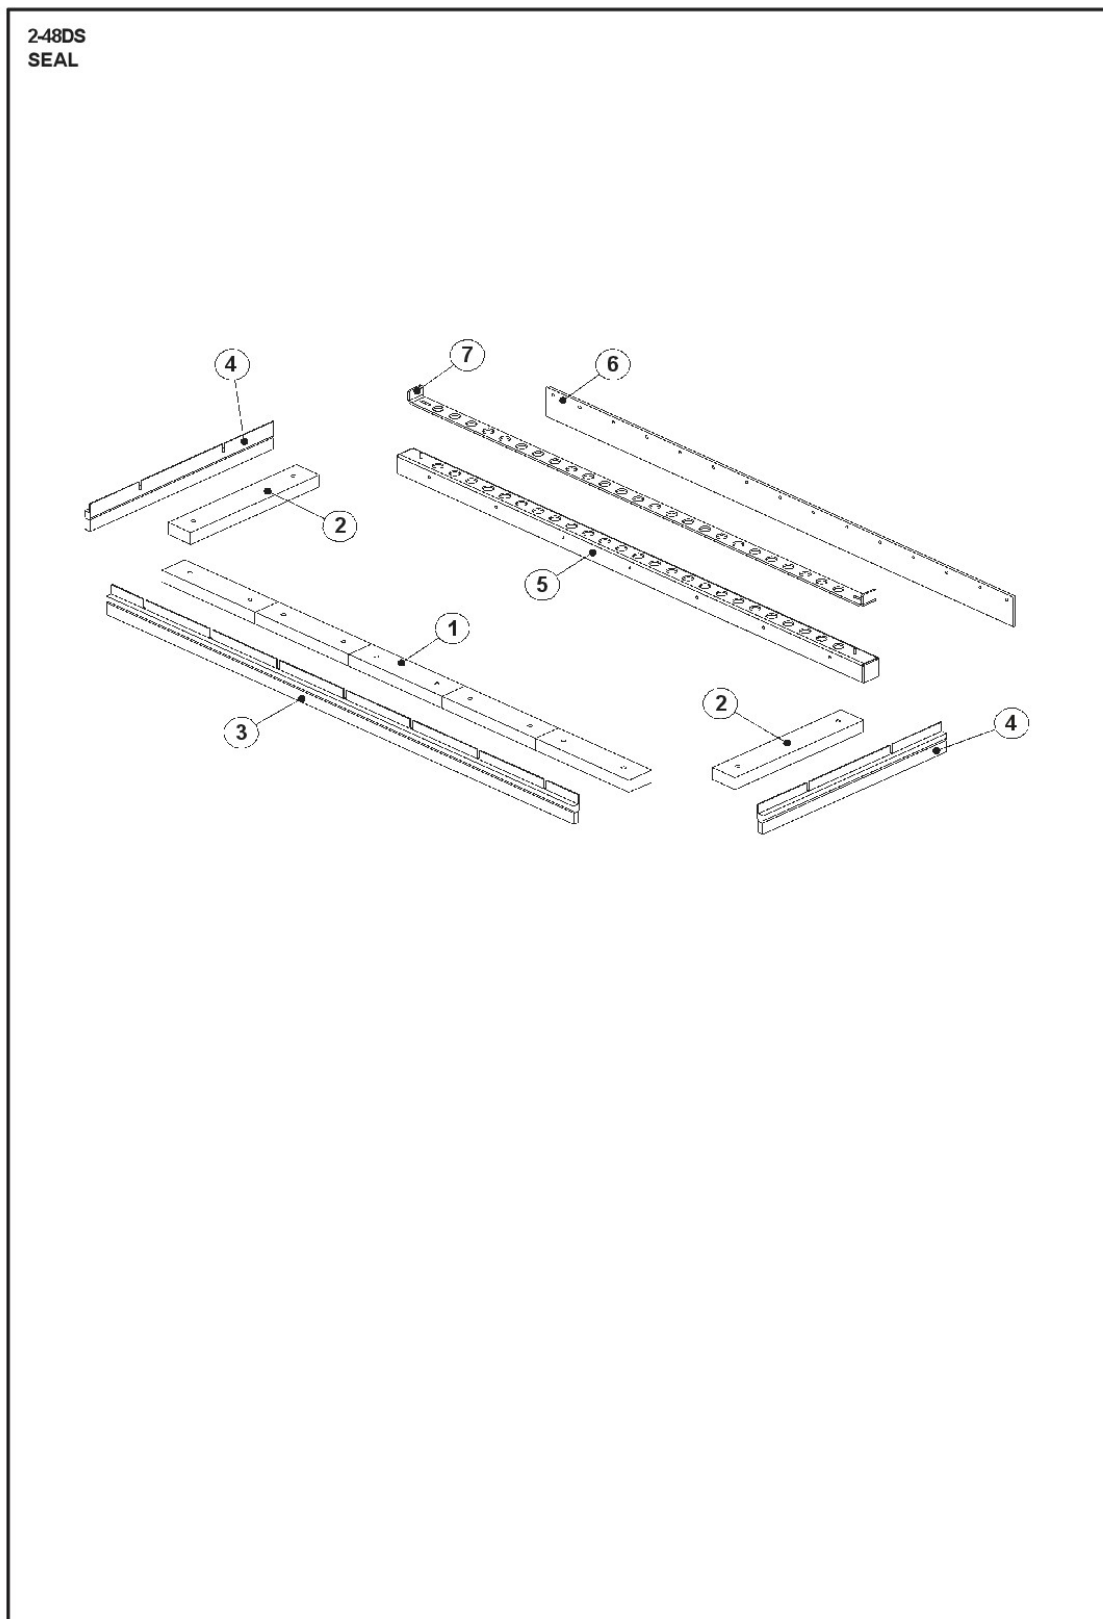



Reference	Article Number	Article Name	Quantity	Comment
1	531457301	MAGNET	5	Front
2	531457401	MAGNET	2	Sides
3	533332701	BRUSH	1	Front
4	533225201	BRUSH	2	Sides
5	535179902	BAR	1	Airflow
6	533294801	RUBBER SKIRT	1	
7	534295602	ADJUSTER	1	Airflow

248DS
VALVES

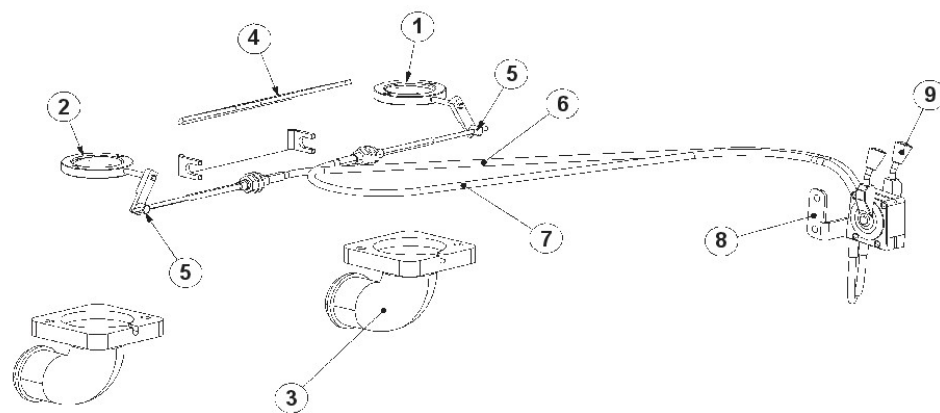

Reference	Article Number	Article Name	Quantity	Comment
1	533406601	VALVE ASSY	1	RH
2	533437701	VALVE ASSY	1	LH
3	534571701	TUBE	2	Feed spout
4	534410002	BRACKET	1	
5	534028801	PIVOT PIN	2	
6	533215401	CONTROL CABLE	1	LH
7	533352001	CONTROL CABLE	1	RH
8	535152902	WALL BRACKET	1	
9	533839501	CONTROL LEVER	2	